

Indication diode "P1-P3"


3 Multicolour diodes show the status for each pump.

- **Green** shows pump is running.
- **Red** shows pump alarm
- **Orange** shows pump "Not in Auto"

Indication diode "Alarm"

1 red diode shows the alarms.

- **Red "flashing"** active, not ackn. alarm.
- **Red "fixed"** active, ackn. alarm.

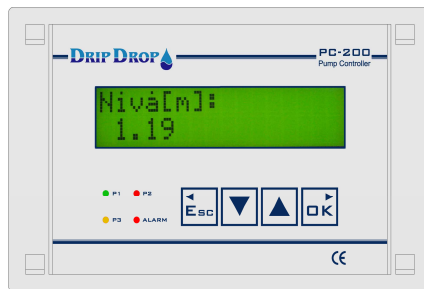

Confirm choice, enter sub menus, and to go from the start menu to the main menu.



Exit the menus and go to the left.



Used to step downwards in the sub menus, and to change values to be set.



Used to step upwards in the sub menus and to change the values to be set.

Main menu

Sub menu

Menus in "black dashed box" are only shown if activated in Settings.

System settings ▶

Application ▶

▲ Here all basic settings are made beginning, with
▼ "Application" (see back side)

Level settings ▶

Start level P1
1.55

▲ Shortcut to settings of set points for high and low level alarms for
▼ each pump.

Manual control ▶

Start P1
Not allowed

▲ Man. start only allowed if level is between set
▼ values for start and stop level

Alarm status ▶

Active alarms
All alarms

▲ Status for active, acknowledged and old alarms.
▼ For more information and "acknowledgement" (see backside).

Date: 05/03
Time: 12.35

Level: 1.19 m

Start window

Shows actual level

A12[%]:
15.25

Shows actual value for AIN 2
(Choice of text for type and unit)

UR US UT
0 230 230 V

Shows actual voltage for power supply.

Presence ▶

Pers. Alarm On
800 sec. 125

Shows the working time left before person alarm is sent.
Can be extended by pressing.

P1 P2 P3
off on off

Shows pump status and if pump is running or not

P1 Op h: 5
P1 Nos: 25

Pump 1, shows total running time.
Pump 1, shows number of starts.

P2 Op h: 5
P2 Nos: 25

Pump 2, shows total running time.
Pump 2, shows number of starts

P3 Op h: 5
P3 Nos: 25

Pump 3, shows total running time.
Pump 3, shows number of starts.

Ov.fl.h: 1
Ov.flows: 3

Shows total overflow time and number of overflows

Flow[m3/h]:
12.5

Shows actual flow.

Volume[m3]:
525

Shows total accumulated flow

Level setting(start-/stop levels)

Level settings ▶

Start level P1
2.50

Stop level P1
0.30

Start level P2
3.25

Login (Password)

For manual start/stop of pumps, changing of level settings or system settings it is needed depending on the basic setting to be logged in with a password.
Login is done from the main menu by going to setting and choosing Login/Logout.

If you have forgotten to login in the submenu you can set the password when the prompt shows up. This happens when you try to change values direct in the menus:
Settings, level settings and Man. Start/stopp.

System settings ▶

Application ▶

Login/Logout ▶

Login (password)

Use ▲▼ arrows to set values, and OK to go to the next position. Finish with OK key.



Operator: ZZZZ (4 Z)

System: 0000 (4 Zeroes)

OK

Password


3. Alarm status

Press  to enter menu, press  to leave menu.

Alarm status  Press  and you will come to the alternatives

Active alarms

All alarms (Alarm history)

*Not ackn.alarms All alarms	*Active alarms All alarms	Not ack.alarms *All alarms
Active not ackn.	Active ackn.	Alarm list - status
<p>√ p1 motor prot. ▼Aktiv Ackn.</p> <p>Ackn.? </p> <p>√ p1 motor prot ◀Ack: 17/03 09:00</p> <p>√ p1 motor prot ◀ On: 16/03 04:52</p> <p>√ p1 motor prot ◀ Off:17/03 09:00</p>	<p>√ p1 motor prot ▼Aktiv</p> <p>√ p1 motor prot ◀Ack: 17/03 09:00</p> <p>√ p1 motor prot ◀ Pā: 16/03 04:52</p> <p>√ p1 motor prot ◀ Av:17/03 09:00</p>	<p>√ p1 motor prot ▼ Active</p> <p>√ high level ⬇ Not active</p> <p>√ Overflow on ⬇ Not active</p> <p>√ p3 motor prot ⬇ Active</p>
		<p>Ackn. not active</p> <p>√ p1 motors prot ◀Ack: 17/03 09:00 When alarm is ackn.</p> <p>√ p1 motors prot ◀ On: 16/03 04:52 When alarm is activated.</p> <p>√ p1 motors prot ◀ Off:17/03 09:00 When alarm is inactivated.</p> <p>EX. P1 Motor prot.</p>

Alarm handling – alarm menu and alarm text.

When an alarm is activated it will show up in the display, For ex. p1 motor prot. After about 1 ½ minute the display will go back to normal position and you see that a new alarm that occurred by the alarm diodes that show red light

✓ sign in front of alarm text means that the alarm is acknowledged

Example of different alarm status for fallen motor protector Pump 1

p1 motor prot. Active Ackn?
√ p1 motor prot. ▼Active
√ p1 motor prot. ▼Not active



Active **Not** acknowledged alarm.

Acknowledged alarm, but **still active**

Acknowledged alarm, **Not** active alarm.

System settings

(Press  to enter the menu, press  to leave the menu.

System settings  Press  and you will come to the alternatives below. (password needed to change)

Pump settings for start and stop of pumps

System settings	Application	Setting of number of pumps a.s.o.
	I/O Settings	Settings of functions for analogue and digital signals.
Setting of pumps	Pump settings	Pump 1
Setting of Station.	Station settings	Time/Delays.
Settings for:	Other settings	Delay on[s] 1.50
- Communication	Login/Logout	Delay off[s] 0.50
- Time and date		To next start [s] 5
- Erase alarms		To next stop [s] 5
- Display contrast		Switch time [s] 2
- Default setting		Start level P1 1.50
- Login/Logout		Stop level P1 0.50
		Alternating P1 yes
		MaxruntimeP1[min]
		Breaktime P1 [sec] 1