



# Operating Guide

## VLT® AutomationDrive FC 302

315–710 kW, Enclosure Size E





## Contents

<b>1 Introduction</b>	<b>3</b>
1.1 Purpose of the Manual	3
1.2 Additional Resources	3
1.3 Manual and Software Version	3
1.4 Approvals and Certifications	3
1.5 Disposal	3
<b>2 Safety</b>	<b>4</b>
2.1 Safety Symbols	4
2.2 Qualified Personnel	4
2.3 Safety Precautions	4
<b>3 Product Overview</b>	<b>6</b>
3.1 Intended Use	6
3.2 Power Ratings, Weights, and Dimensions	6
3.3 Interior View of Enclosure E1h/E2h	7
3.4 Interior View of Enclosure E3h/E4h	8
3.5 Control Shelf	9
3.6 Local Control Panel (LCP)	10
<b>4 Mechanical Installation</b>	<b>12</b>
4.1 Items Supplied	12
4.2 Tools Needed	12
4.3 Storage	12
4.4 Operating Environment	13
4.5 Installation and Cooling Requirements	14
4.6 Lifting the Unit	14
4.7 E1h/E2h Mechanical Installation	15
4.8 E3h/E4h Mechanical Installation	17
<b>5 Electrical Installation</b>	<b>20</b>
5.1 Safety Instructions	20
5.2 EMC-compliant Installation	20
5.3 Wiring Schematic	23
5.4 Connecting the Motor	24
5.5 Connecting the AC Mains	26
5.6 Connecting to Ground	28
5.7 Terminal Dimensions	30
5.8 Control Wiring	40
5.9 Pre-start Check List	45

<b>6 Commissioning</b>	46
6.1 Safety Instructions	46
6.2 Applying Power	46
6.3 LCP Menu	47
6.4 Programming the Drive	48
6.5 Testing Before System Start-up	51
6.6 System Start-up	52
6.7 Parameter Settings	52
<b>7 Wiring Configuration Examples</b>	54
7.1 Wiring for Open-loop Speed Control	54
7.2 Wiring for Start/Stop	55
7.3 Wiring for External Alarm Reset	56
7.4 Wiring for a Motor Thermistor	57
7.5 Wiring for Regeneration	57
<b>8 Maintenance, Diagnostics, and Troubleshooting</b>	58
8.1 Maintenance and Service	58
8.2 Heat Sink Access Panel	58
8.3 Status Messages	59
8.4 Warning and Alarm Types	61
8.5 List of Warnings and Alarms	62
8.6 Troubleshooting	71
<b>9 Specifications</b>	73
9.1 Electrical Data	73
9.2 Mains Supply	77
9.3 Motor Output and Motor Data	77
9.4 Ambient Conditions	77
9.5 Cable Specifications	78
9.6 Control Input/Output and Control Data	78
9.7 Fuses	81
9.8 Enclosure Dimensions	82
9.9 Enclosure Airflow	98
9.10 Fastener Torque Ratings	99
<b>10 Appendix</b>	100
10.1 Abbreviations and Conventions	100
10.2 International/North American Default Parameter Settings	101
10.3 Parameter Menu Structure	101
<b>Index</b>	107

# 1 Introduction

## 1.1 Purpose of the Manual

This operating guide provides information for safe installation and commissioning of the VLT® drives in an enclosure size E (E1h, E2h, E3h, and E4h).

The operating guide is intended for use by qualified personnel. To use the unit safely and professionally, read and follow this operating guide. Pay particular attention to the safety instructions and general warnings. Always keep the operating guide with the drive.

VLT® is a registered trademark.

## 1.2 Additional Resources

Other resources are available to understand advanced E1h–E4h drive functions and programming.

- The *VLT® AutomationDrive FC 301/FC 302 Programming Guide* provides greater detail on working with parameters and automation application examples.
- The *VLT® AutomationDrive FC 300, 90–1200 kW Design Guide* provides detailed capabilities and functionality to design motor control systems for automation applications.
- The *Safe Torque Off Operating Guide* provides detailed specifications, requirements, and installation instructions for the Safe Torque Off function.

Supplementary publications and manuals are available from Danfoss. See [drives.danfoss.com/knowledge-center/technical-documentation/](http://drives.danfoss.com/knowledge-center/technical-documentation/) for listings.

## 1.3 Manual and Software Version

This manual is regularly reviewed and updated. All suggestions for improvement are welcome. *Table 1.1* shows the version of the manual and the corresponding software version.

Manual version	Remarks	Software version
MG38A1xx	Initial release	7.51

Table 1.1 Manual and Software Version

## 1.4 Approvals and Certifications

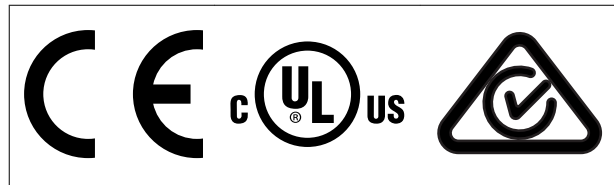


Table 1.2 Approvals and Certifications

More approvals and certifications are available. Contact the local Danfoss office or partner. Drives of voltage T7 (525–690 V) are UL certified for only 525–600 V.

The drive complies with UL 61800-5-1 thermal memory retention requirements. For more information, refer to the section *Motor Thermal Protection* in the product-specific *design guide*.

### NOTICE


#### IMPOSED LIMITATIONS ON THE OUTPUT FREQUENCY

From software version 6.72 onwards, the output frequency of the drive is limited to 590 Hz due to export control regulations. Software versions 6.xx also limit the maximum output frequency to 590 Hz, but these versions cannot be flashed, that is, neither downgraded nor upgraded.

### 1.4.1 Compliance with ADN

For compliance with the European Agreement concerning International Carriage of Dangerous Goods by Inland Waterways (ADN), refer to *ADN-compliant Installation* in the *design guide*.

## 1.5 Disposal

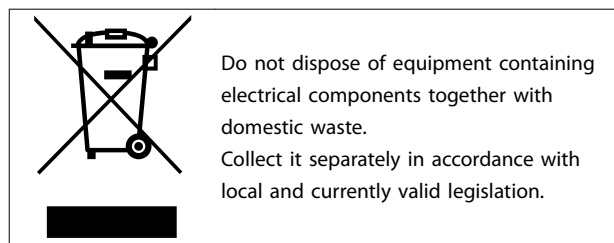

## 2

## 2 Safety

### 2.1 Safety Symbols

The following symbols are used in this guide:

#### **⚠ WARNING**

Indicates a potentially hazardous situation that could result in death or serious injury.

#### **⚠ CAUTION**

Indicates a potentially hazardous situation that could result in minor or moderate injury. It can also be used to alert against unsafe practices.

#### **NOTICE**

Indicates important information, including situations that can result in damage to equipment or property.

### 2.2 Qualified Personnel

Correct and reliable transport, storage, installation, operation, and maintenance are required for the trouble-free and safe operation of the drive. Only qualified personnel are allowed to install or operate this equipment.

Qualified personnel are defined as trained staff, who are authorized to install, commission, and maintain equipment, systems, and circuits in accordance with pertinent laws and regulations. Also, the personnel must be familiar with the instructions and safety measures described in this manual.

### 2.3 Safety Precautions

#### **⚠ WARNING**

##### HIGH VOLTAGE

Drives contain high voltage when connected to AC mains input, DC supply, load sharing, or permanent motors. Failure to use qualified personnel to install, start up, and maintain the drive can result in death or serious injury.

- Only qualified personnel must install, start up, and maintain the drive.

#### **⚠ WARNING**

##### UNINTENDED START

When the drive is connected to AC mains, DC supply, or load sharing, the motor can start at any time. Unintended start during programming, service, or repair work can result in death, serious injury, or property damage. The motor can start with an external switch, a fieldbus command, an input reference signal from the LCP or LOP, via remote operation using MCT 10 Set-up Software, or after a cleared fault condition.

To prevent unintended motor start:

- Press [Off/Reset] on the LCP before programming parameters.
- Disconnect the drive from the mains.
- Completely wire and assemble the drive, motor, and any driven equipment before connecting the drive to the AC mains, DC supply, or load sharing.

#### **⚠ WARNING**

##### DISCHARGE TIME

The drive contains DC-link capacitors, which can remain charged even when the drive is not powered. High voltage can be present even when the warning LED indicator lights are off. Failure to wait 40 minutes after power has been removed before performing service or repair work can result in death or serious injury.

- Stop the motor.
- Disconnect AC mains and remote DC-link supplies, including battery back-ups, UPS, and DC-link connections to other drives.
- Disconnect or lock motor.
- Wait 40 minutes for the capacitors to discharge fully.
- Before performing any service or repair work, use an appropriate voltage measuring device to make sure that the capacitors are fully discharged.

#### **⚠ WARNING**

##### LEAKAGE CURRENT HAZARD

Leakage currents exceed 3.5 mA. Failure to ground the drive properly can result in death or serious injury.

- Ensure the correct grounding of the equipment by a certified electrical installer.

**⚠ WARNING****EQUIPMENT HAZARD**

Contact with rotating shafts and electrical equipment can result in death or serious injury.

- Ensure that only trained and qualified personnel install, start up, and maintain the drive.
- Ensure that electrical work conforms to national and local electrical codes.
- Follow the procedures in this guide.

**⚠ CAUTION****HOT SURFACES**

The drive contains metal components that are still hot even after the drive has been powered off. Failure to observe the high temperature symbol (yellow triangle) on the drive can result in serious burns.

- Be aware that internal components, such as busbars, may be extremely hot even after the drive has been powered off.
- Exterior areas marked by the high temperature symbol (yellow triangle) are hot while the drive is in use and immediately after being powered off.

**⚠ WARNING****INTERNAL FAILURE HAZARD**

Under certain circumstances, an internal failure can cause a component to explode. Failure to keep the enclosure closed and properly secured can cause death or serious injury.

- Do not operate the drive with the door open or panels off.
- Ensure that the enclosure is properly closed and secured during operation.

**NOTICE****MAINS SHIELD SAFETY OPTION**

A mains shield option is available for enclosures with a protection rating of IP21/IP 54 (Type 1/Type 12). The mains shield is a Lexan cover installed inside the enclosure to protect against the accidental touch of the power terminals, according to BGV A2, VBG 4.

## 3 Product Overview

### 3

### 3.1 Intended Use

The drive is an electronic motor controller that converts AC mains input into a variable AC waveform output. The frequency and voltage of the output are regulated to control the motor speed or torque. The drive is designed to:

- Regulate motor speed in response to system feedback or to remote commands from external controllers.
- Monitor system and motor status.
- Provide motor overload protection.

The drive is allowed for use in industrial and commercial environments in accordance with local laws and standards. Depending on configuration, the drive can be used in standalone applications or form part of a larger system or installation.

#### **NOTICE**

In a residential environment, this product can cause radio interference, in which case supplementary mitigation measures can be required.

#### Foreseeable misuse

Do not use the drive in applications which are non-compliant with specified operating conditions and environments. Ensure compliance with the conditions specified in *chapter 9 Specifications*.

### 3.2 Power Ratings, Weights, and Dimensions


Table 3.1 provides dimensions for standard configurations. For dimensions on optional configurations, see *chapter 9.8 Enclosure Dimensions*.

Enclosure size	E1h	E2h	E3h	E4h
Rated power at 380–500 V [kW (hp)]	315–400 (450–550)	450–500 (600–650)	315–400 (450–550)	450–500 (600–650)
Rated power at 525–690 V [kW (hp)]	355–560 (400–600)	630–710 (650–950)	355–560 (400–600)	630–710 (650–950)
Enclosure protection rating	IP21/Type 1 IP54/Type 12	IP21/Type 1 IP54/Type 12	IP20/ Chassis	IP 20/ Chassis
<b>Unit dimensions</b>				
Height [mm (in)]	2043 (80.4)	2043 (80.4)	1578 (62.1)	1578 (62.1)
Width [mm (in)]	602 (23.7)	698 (27.5)	506 (19.9)	604 (23.89)
Depth [mm (in)]	513 (20.2)	513 (20.2)	482 (19.0)	482 (19.0)
Weight [kg (lb)]	295 (650)	318 (700)	272 (600)	295 (650)
<b>Shipping dimensions</b>				
Height [mm (in)]	768 (30.2)	768 (30.2)	746 (29.4)	746 (29.4)
Width [mm (in)]	2191 (86.3)	2191 (86.3)	1759 (69.3)	1759 (69.3)
Depth [mm (in)]	870 (34.3)	870 (34.3)	794 (31.3)	794 (31.3)
Weight [kg (lb)]	–	–	–	–

Table 3.1 Enclosure Power Ratings and Dimensions



### 3.3 Interior View of Enclosure E1h/E2h

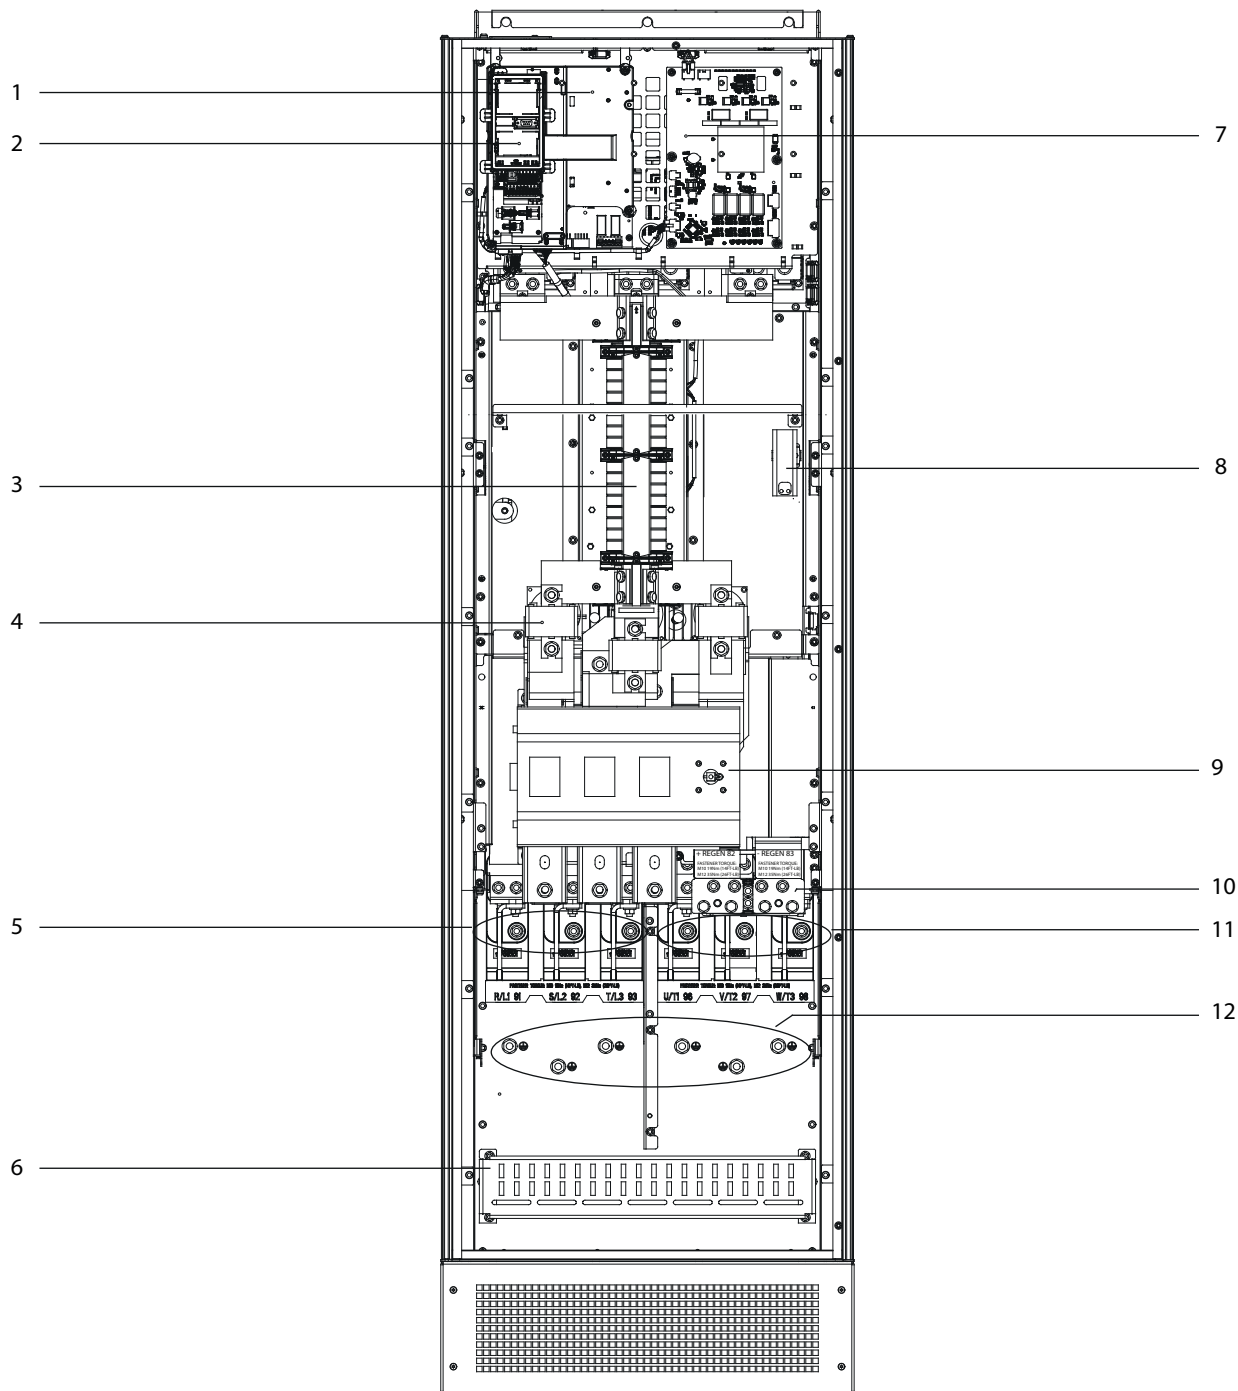


3

1	Control shelf (see <i>Illustration 3.3</i> )	7	Fan power card
2	Local control panel (LCP) cradle	8	Space heater (optional)
3	RFI filter (optional)	9	Mains disconnect (optional)
4	Mains fuses (required for UL compliance, but otherwise optional)	10	Brake/regeneration terminals (optional)
5	Mains terminals	11	Motor terminals
6	RFI shield termination	12	Ground terminals

Illustration 3.1 Interior View of Enclosure E1h (Enclosure E2h is Similar)

3.4 Interior View of Enclosure E3h/E4h


3

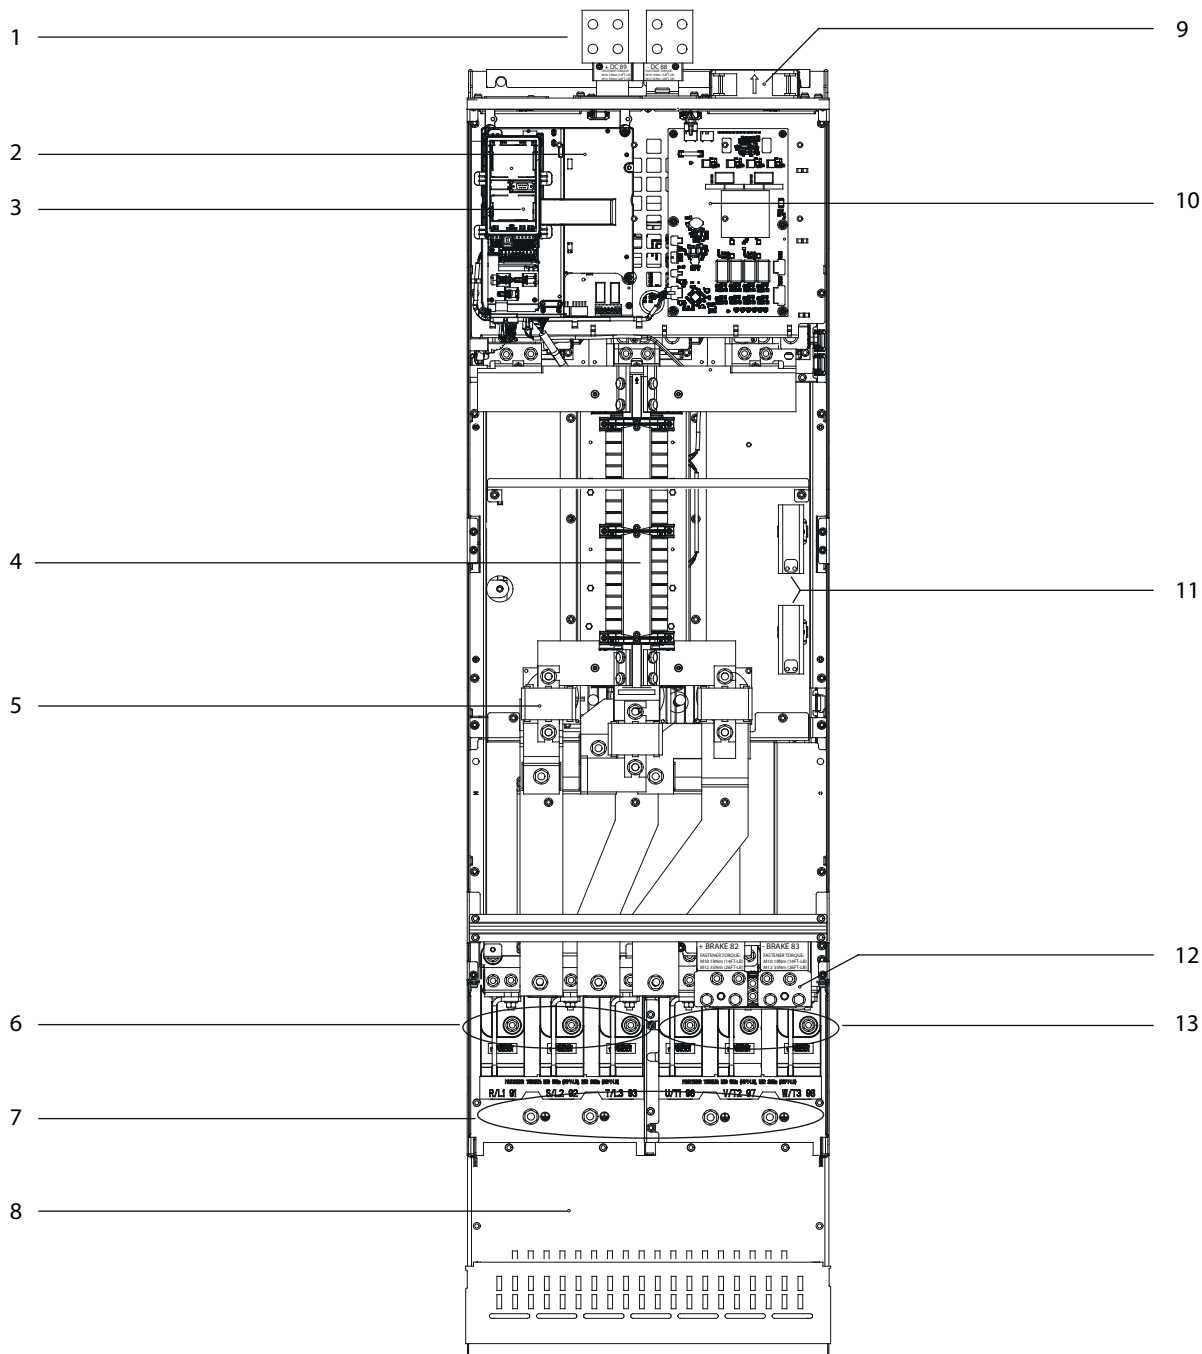

1	Load share/regeneration terminals (optional)	8	RFI shield termination (optional, but is standard when RFI filter is ordered)
2	Control shelf (see <i>Illustration 3.3</i> )	9	Fans (used to cool the front section of enclosure)
3	Local control panel (LCP) cradle	10	Fan power card
4	RFI filter (optional)	11	Space heater (optional)
5	Mains fuses (optional)	12	Brake terminals (optional)
6	Mains terminals	13	Motor terminals
7	Ground terminals	-	-

Illustration 3.2 Interior View of Enclosure E3h (Enclosure E4h is Similar)

### 3.5 Control Shelf

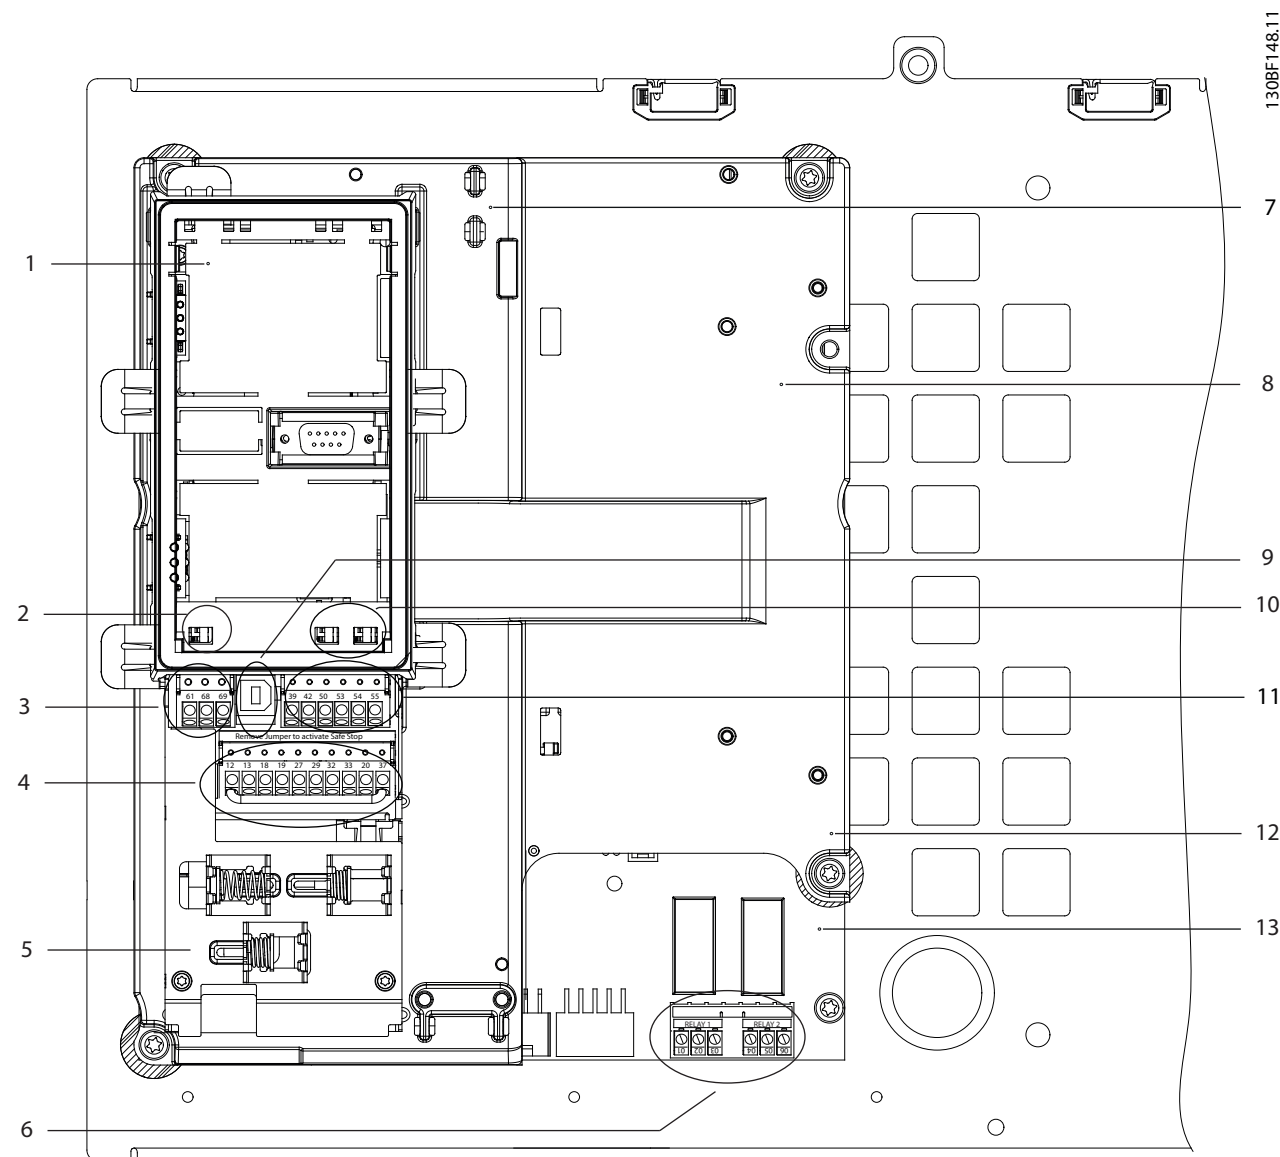

3

1	LCP cradle (LCP not shown)	8	Control shelf
2	Bus terminal switch (see chapter 5.8.5 Configuring RS485 Serial Communication)	9	USB port
3	Serial communication terminals (see Table 5.1)	10	Analog input switches A53/A54 (see chapter 5.8.10 Selecting Voltage/Current Input Signal)
4	Digital input/output terminals (see Table 5.2)	11	Analog input/output terminals (see Table 5.3)
5	Cable/EMC clamps	12	Brake resistor terminals, 104–106 (on power card underneath control shelf)
6	Relay 1 and relay 2 (see Illustration 5.19)	13	Power card (underneath the control shelf)
7	Control card (underneath LCP and control terminals)	–	–

Illustration 3.3 View of Control Shelf

3.6 Local Control Panel (LCP)

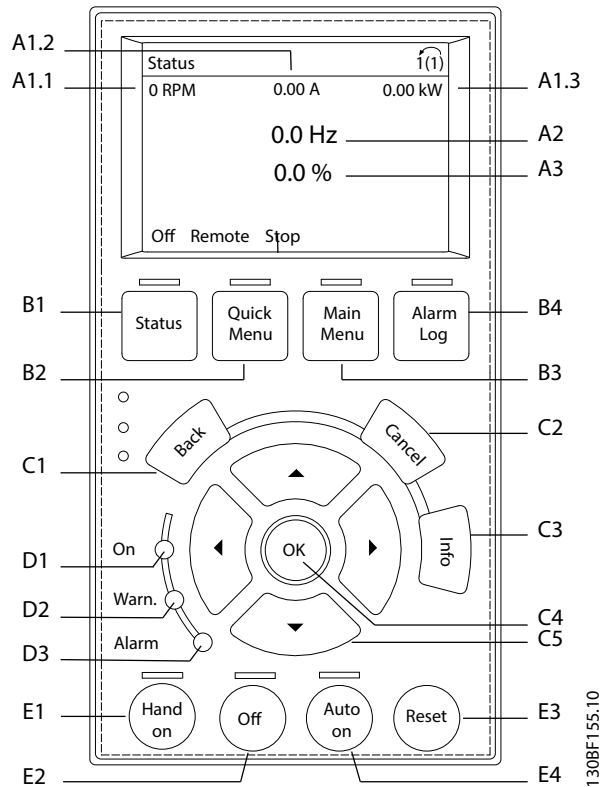


Illustration 3.4 Graphical Local Control Panel (LCP)

A. Display area

Each display readout has a parameter associated with it. See Table 3.2. The information shown on the LCP can be customized for specific applications. Refer to chapter 6.3.1.2 Q1 My Personal Menu.

Callout	Parameter number	Default setting
A1.1	0-20	Speed [RPM]
A1.2	0-21	Motor current [A]
A1.3	0-22	Power [kW]
A2	0-23	Frequency [Hz]
A3	0-24	Reference [%]

Table 3.2 LCP Display Area

B. Menu keys

Menu keys are used to access the menu for setting up parameters, toggling through status display modes during normal operation, and viewing fault log data.

Callout	Key	Function
B1	Status	Shows operational information.
B2	Quick Menu	Allows access to parameters for initial set-up instructions. Also provides detailed application steps. Refer to chapter 6.3.1.1 Quick Menu Mode.

Callout	Key	Function
B3	Main Menu	Allows access to all parameters. Refer to chapter 6.3.1.7 Main Menu Mode.
B4	Alarm Log	Shows a list of current warnings and the last 10 alarms.

Table 3.3 LCP Menu Keys

C. Navigation keys

Navigation keys are used for programming functions and moving the display cursor. The navigation keys also provide speed control in local (hand) operation. The display brightness can be adjusted by pressing [Status] and [▲]/[▼] keys.

Callout	Key	Function
C1	Back	Reverts to the previous step or list in the menu structure.
C2	Cancel	Cancels the last change or command as long as the display mode has not changed.
C3	Info	Shows a definition of the function being shown.
C4	OK	Accesses parameter groups or enables an option.
C5	▲ ▼ ◀ ▶	Moves between items in the menu.

Table 3.4 LCP Navigation Keys

**D. Indicator lights**

Indicator lights are used to identify the drive status and to provide a visual notification of warning or fault conditions.

Callout	Indicator	Indicator light	Function
D1	On	Green	Activates when the drive receives power from the mains voltage or a 24 V external supply.
D2	Warn.	Yellow	Activates when warning conditions are active. Text appears in the display area identifying the problem.
D3	Alarm	Red	Activates during a fault condition. Text appears in the display area identifying the problem.

Table 3.5 LCP Indicator Lights

**E. Operation keys and reset**

The operation keys are found toward the bottom of the local control panel.

Callout	Key	Function
E1	[Hand On]	Starts the drive in local control. An external stop signal by control input or serial communication overrides the local [Hand On].
E2	Off	Stops the motor but does not remove power to the drive.
E3	Auto On	Puts the system in remote operational mode so it can respond to an external start command by control terminals or serial communication.
E4	Reset	Resets the drive manually after a fault has been cleared.


Table 3.6 LCP Operation Keys and Reset

## 4 Mechanical Installation

### 4.1 Items Supplied

Items supplied can vary according to product configuration.

- Make sure that the items supplied and the information on the nameplate correspond to the order confirmation.
- Visually check the packaging and the drive for damage caused by inappropriate handling during shipment. File any claim for damage with the carrier. Retain damaged parts for clarification.

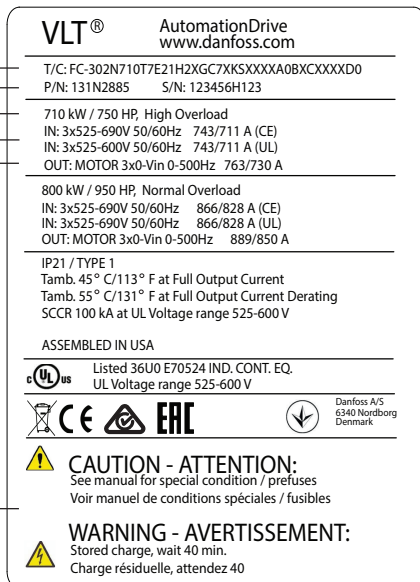

1  
2  
3  
4  
5  
  
6

130BF698.12

1	Type code
2	Part number and serial number
3	Power rating
4	Input voltage, frequency, and current (at low/high voltages)
5	Output voltage, frequency, and current (at low/high voltages)
6	Discharge time

Illustration 4.1 Product Nameplate for E2h Enclosure (Example)

### NOTICE

Removing the nameplate from the drive can result in the loss or warranty.

### 4.2 Tools Needed

#### Receiving/unloading

- I-beam and hooks rated to lift the weight of the drive. Refer to *chapter 3.2 Power Ratings, Weights, and Dimensions*.
- Crane or other lifting aid to place the unit into position.

#### Installation

- Drill with 10 mm or 12 mm drill bits.
- Tape measurer.
- Various sizes of Phillips and flat bladed screwdrivers.
- Wrench with relevant metric sockets (7–17 mm).
- Wrench extensions.
- Torx drives (T25 and T50).
- Sheet metal punch for conduits or cable glands.
- I-beam and hooks to lift the weight of the drive. Refer to *chapter 3.2 Power Ratings, Weights, and Dimensions*.
- Crane or other lifting aid to place the drive onto pedestal and into position.

### 4.3 Storage

Store the drive in a dry location. Keep the equipment sealed in its packaging until installation. Refer to *chapter 9.4 Ambient Conditions* for recommended ambient temperature.

Periodic forming (capacitor charging) is not necessary during storage unless storage exceeds 12 months.

## 4.4 Operating Environment

In environments with airborne liquids, particles, or corrosive gases, ensure that the IP/Type rating of the equipment matches the installation environment. For specifications regarding ambient conditions, see *chapter 9.4 Ambient Conditions*.

### **NOTICE**

#### **CONDENSATION**

Moisture can condense on the electronic components and cause short circuits. Avoid installation in areas subject to frost. Install an optional space heater when the drive is colder than the ambient air. Operating in standby mode reduces the risk of condensation as long as the power dissipation keeps the circuitry free of moisture.

### **NOTICE**

#### **EXTREME AMBIENT CONDITIONS**

Hot or cold temperatures compromise unit performance and longevity.

- Do not operate in environments where the ambient temperature exceeds 55 °C (131 °F).
- The drive can operate at temperatures down to -10 °C (14 °F). However, proper operation at rated load is only guaranteed at 0 °C (32 °F) or higher.
- Extra air conditioning of the cabinet or installation site is required if temperature exceeds ambient temperature limits.

### 4.4.1 Gases

Aggressive gases, such as hydrogen sulphide, chlorine, or ammonia can damage the electrical and mechanical components. The unit uses conformal-coated circuit boards to reduce the effects of aggressive gases. For conformal-coating class specifications and ratings, see *chapter 9.4 Ambient Conditions*.

### 4.4.2 Dust

When installing the drive in dusty environments, pay attention to the following:

#### **Periodic maintenance**

When dust accumulates on electronic components, it acts as a layer of insulation. This layer reduces the cooling capacity of the components, and the components become warmer. The hotter environment decreases the life of the electronic components.

Keep the heat sink and fans free from dust buildup. For more service and maintenance information, refer to *chapter 8 Maintenance, Diagnostics, and Troubleshooting*.

#### **Cooling fans**

Fans provide airflow to cool the drive. When fans are exposed to dusty environments, the dust can damage the fan bearings and cause premature fan failure. Dust also can accumulate on fan blades causing an imbalance which prevents the fans from properly cooling the unit.

### 4.4.3 Potentially Explosive Atmospheres

#### **WARNING**

#### **EXPLOSIVE ATMOSPHERE**

Do not install the drive in a potentially explosive atmosphere. Install the unit in a cabinet outside of this area. Failure to follow this guideline increases risk of death or serious injury.

Systems operated in potentially explosive atmospheres must fulfill special conditions. EU Directive 94/9/EC (ATEX 95) classifies the operation of electronic devices in potentially explosive atmospheres.

- Class d specifies that if a spark occurs, it is contained in a protected area.
- Class e prohibits any occurrence of a spark.

#### **Motors with class d protection**

Does not require approval. Special wiring and containment are required.

#### **Motors with class e protection**

When combined with an ATEX approved PTC monitoring device like the VLT® PTC Thermistor Card MCB 112, installation does not need an individual approval from an approved organization.

#### **Motors with class d/e protection**

The motor itself has an e ignition protection class, while the motor cabling and connection environment is in compliance with the d classification. To attenuate the high peak voltage, use a sine-wave filter at the drive output.

**When using a drive in a potentially explosive atmosphere, use the following:**

- Motors with ignition protection class d or e.
- PTC temperature sensor to monitor the motor temperature.
- Short motor cables.
- Sine-wave output filters when shielded motor cables are not used.

4

**NOTICE**

**MOTOR THERMISTOR SENSOR MONITORING**

VLT® AutomationDrive units with the VLT® PTC Thermistor Card MCB 112 option are PTB-certified for potentially explosive atmospheres.

4.5 Installation and Cooling Requirements

**NOTICE**

Improper mounting can result in overheating and reduced performance.

Installation requirements

- Locate the unit as near to the motor as possible. See *chapter 9.5 Cable Specifications* for the maximum motor cable length.
- Ensure unit stability by mounting the unit to a solid surface.
- Enclosures E3h and E4h can be mounted:
  - Vertically on the back plate of the panel (typical installation).
  - Vertically upside down on the back plate of the panel.<sup>1)</sup>
  - Horizontally on its back, mounted on the back plate of the panel.<sup>1)</sup>
  - Horizontally on its side, mounted on floor of the panel.<sup>1)</sup>
- Ensure that the strength of the mounting location supports the unit weight.
- Ensure that there is enough space around the unit for proper cooling. Refer to *chapter 9.9 Enclosure Airflow*.
- Ensure enough access to open the door.
- Ensure cable entry from the bottom.

1) For non-typical installation, contact the factory.

Cooling requirements

- Ensure that top and bottom clearance for air cooling is provided. Clearance requirement: 225 mm (9 in).
- Provide sufficient airflow flow rate. See *Table 4.1*.
- Consider derating for temperatures starting between 45 °C (113 °F) and 50 °C (122 °F) and elevation 1000 m (3300 ft) above sea level. See the *design guide* for detailed information.

The drive utilizes a back-channel cooling concept that removes heat sink cooling air. The heat sink cooling air carries approximately 90% of the heat out of the back channel of the drive. Redirect the back-channel air from the panel or room by using:

- **Duct cooling**  
Back-channel cooling kits are available to direct the heat sink cooling air out of the panel when IP20/Chassis drives are installed in Rittal enclosures. Use of these kits reduce the heat in the panel and smaller door fans can be specified.
- **Back-wall cooling**  
Installing top and base covers to the unit allows the back-channel cooling air to be ventilated out of the room.

**NOTICE**

For E3h and E4h enclosures (IP20/Chassis), at least 1 door fan is required on the enclosure to remove the heat not contained in the back-channel of the drive. It also removes any additional losses generated by other components inside the drive. To select the appropriate fan size, calculate the total required airflow.

Secure the necessary airflow over the heat sink.

Frame	Door fan/top fan [m³/hr (cfm)]	Heat sink fan [m³/hr (cfm)]
E1h	510 (300)	994 (585)
E2h	552 (325)	1053–1206 (620–710)
E3h	595 (350)	994 (585)
E4h	629 (370)	1053–1206 (620–710)

Table 4.1 Airflow Rate

4.6 Lifting the Unit

Lifting

Always lift the drive using the dedicated lifting eyes. To avoid bending the lifting holes, use a bar.

**WARNING**

**RISK OF INJURY OR DEATH**

Follow local safety regulations for lifting heavy weights. Failure to follow recommendations and local safety regulations can result in death or serious injury.

- Ensure that the lifting equipment is in proper working condition.
- See *chapter 3.2 Power Ratings, Weights, and Dimensions* for the weight of the different enclosure types.
- Maximum diameter for bar: 20 mm (0.8 in).
- The angle from the top of the drive to the lifting cable: 60° or greater.



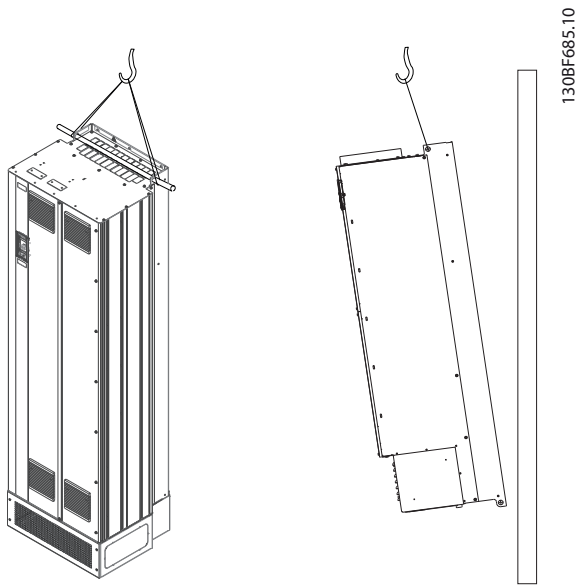


Illustration 4.2 Recommended Lifting Method

## 4.7 E1h/E2h Mechanical Installation

The E1h and E2h enclosure size is intended only for floor installation, and is shipped with a pedestal and a gland plate. The pedestal and gland plate must be installed for proper installation.

The pedestal is 200 mm (7.9 in) and has an opening in the front to allow airflow necessary to cool the power components of the drive.

The gland plate is necessary to provide cooling air to the control components of the drive via the door fan, and to maintain the IP21/Type 1 or IP54/Type 12 protection rating.

### 4.7.1 Securing the Pedestal to the Floor

The pedestal must be secured to the floor using 6 bolts before installing the enclosure.

1. Determine proper placement of the unit, concerning operating conditions and cable access.
2. Access the mounting holes by removing the front panel of the pedestal.
3. Set the pedestal on the floor and secure using 6 bolts through the mounting holes. Refer to the circled areas in *Illustration 4.3*.


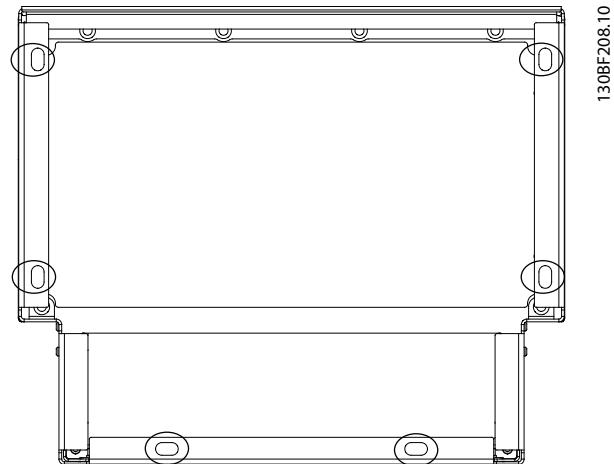


Illustration 4.3 Pedestal to Floor Mounting Points

### 4.7.2 Attaching the E1h/E2h to the Pedestal


1. Lift the drive and position it on the pedestal. There are 2 bolts in the rear of the pedestal that slide into the 2 slotted holes in the rear of the enclosure. Position the drive by adjusting the bolts up or down. Loosely secure with 2 M10 nuts and locking brackets. See *Illustration 4.4*.
2. Verify that there is 225 mm (9 in) top clearance for air exhaust.
3. Verify that the air intake at the bottom front of the unit is not obstructed.
4. Around the top of the pedestal, secure the enclosure using 6 M10x30 fasteners. Refer to *Illustration 4.5*. Loosely tighten each bolt until all bolts are installed.
5. Fasten each bolt securely and torque to 19 Nm (169 in-lb).
6. Torque the 2 M10 nuts at the rear of the enclosure to 19 Nm (169 in-lb).

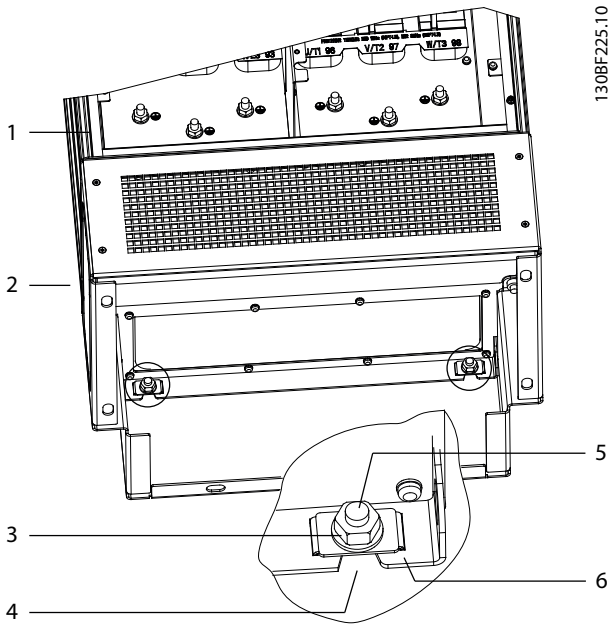

130BF225.10

1	Enclosure	4	Slotted hole in enclosure
2	Pedestal	5	Bolt at rear of pedestal
3	M10 nut	6	Locking bracket

Illustration 4.4 Pedestal to Enclosure Back Mounting Points

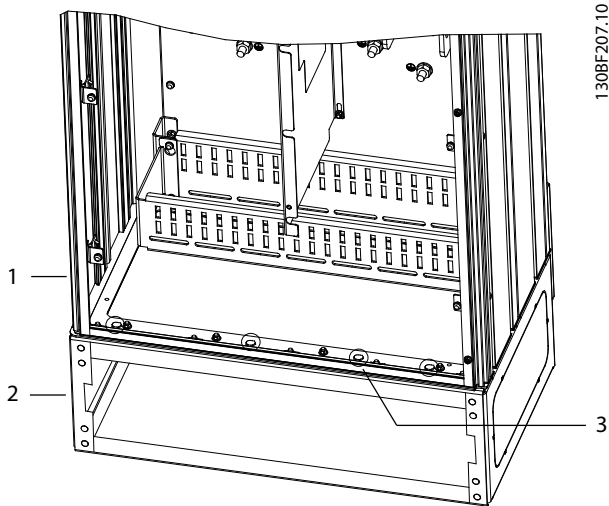

130BF207.10

1	Enclosure	3	M10x30 fasteners (rear corner bolts not shown)
2	Pedestal	-	-


Illustration 4.5 Pedestal to Enclosure Mounting Points

### 4.7.3 Creating Cable Openings

The gland plate is a sheet of metal with studs along the outer edge. The gland plate provides cable entry and cable termination points, and must be installed to maintain the IP21/IP54 (Type 1/Type 12) protection rating. The plate is placed between the drive enclosure and the pedestal. Depending on stud orientation, the plate can be installed from inside the enclosure or the pedestal. For gland plate dimensions, see chapter 9.8.1 E1h Exterior Dimensions.

Refer to Illustration 4.6 for the following steps.

1. Create cable entry holes in the gland plate using a sheet metal punch.
2. Insert the gland plate using 1 of the following methods:
  - 2a To insert the gland plate through the pedestal, slide the gland plate through the slot (4) in the front of the pedestal.
  - 2b To insert the gland plate through the enclosure, angle the gland plate until it can be slid under the slotted brackets.
3. Align the studs on the gland plate to the holes in the pedestal and secure with 10 M5 nuts (2).
4. Torque each nut to 2.3 Nm (20 in-lb).

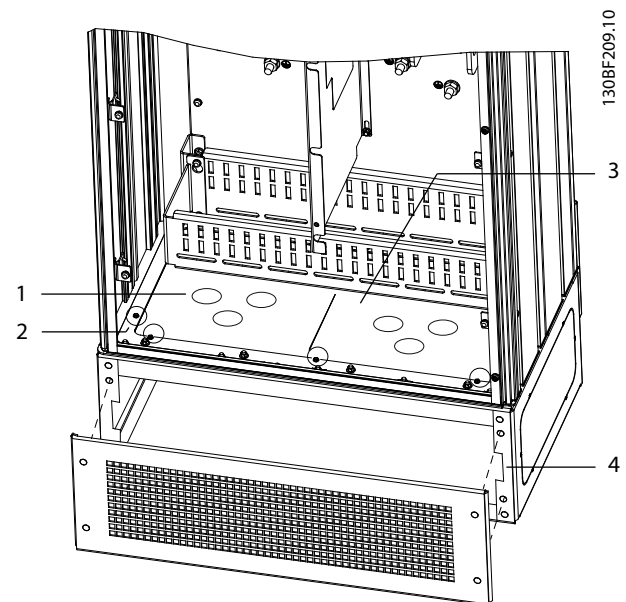

130BF209.10

1	Cable entry hole	4	Slot in pedestal base
2	M5 nut	5	Front cover/grill
3	Gland plate	-	-

Illustration 4.6 Installing the Gland Plate

## 4.8 E3h/E4h Mechanical Installation

The E3h and E4h enclosure sizes are intended to be mounted on a wall or on a mounting panel within an enclosure. A plastic gland plate is installed on the enclosure. It is designed to prevent unintentional access to the terminals in an IP20/protected chassis unit.

### **NOTICE**

#### **Regeneration/Load share Option**

Due to the exposed terminals at the top of the enclosure, units with the regeneration/load share option have an IP00 protection rating.

#### 4.8.1 Attaching the E3h/E4h to a Mounting Plate or Wall


1. Drill the mounting holes according to the enclosure size. Refer to *chapter 9.8 Enclosure Dimensions*.
2. Secure the top of the drive enclosure to the mounting plate or wall.
3. Secure the base of the drive enclosure to the mounting plate or wall.

#### 4.8.2 Creating Cable Openings

The gland plate covers the bottom part of the drive enclosure and must be installed to maintain the IP20/Chassis protection rating. The gland plate consists of plastic squares that can be cut out to provide cable access to the terminals. See *Illustration 4.7*.

1. Remove the bottom panel and terminal cover. See *Illustration 4.8*.
  - 1a Detach the bottom panel by removing 4 T25 screws.
  - 1b Remove 5 T20 screws that secure the bottom of the drive to the top of the terminal cover, and then pull the terminal cover straight out.
2. Determine the size and position of the motor, mains, and ground cables. Note their position and measurements.

3. Based on the measurement and positions of the cables, create openings in the plastic gland plate by cutting out the necessary squares.
4. Slide the plastic gland plate (7) onto the bottom rails of the terminal cover.
5. Tilt the front of the terminal cover downward until the fastener points (8) rest on the slotted drive brackets (6).
6. Make sure the side panels of the terminal cover are on the outside track guide (5).
7. Push the terminal cover until it is up against the slotted drive bracket.
8. Tilt the front of the terminal cover upward until the fastener hole in the bottom of the drive aligns with the keyhole opening (9) in the terminal. Secure with 2 T25 screws and torque to 2.3 Nm (20 in-lb).
9. Secure the bottom panel with 3 T25 screws and torque to 2.3 Nm (20 in-lb).

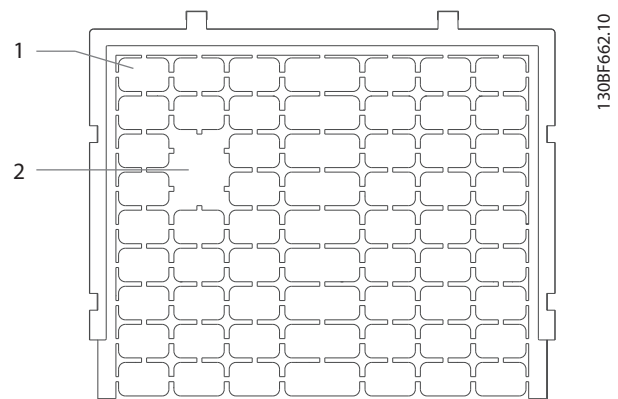


1	Plastic square
2	Squares removed for cable access

**Illustration 4.7 Plastic Gland Plate**

4

130BF688.10

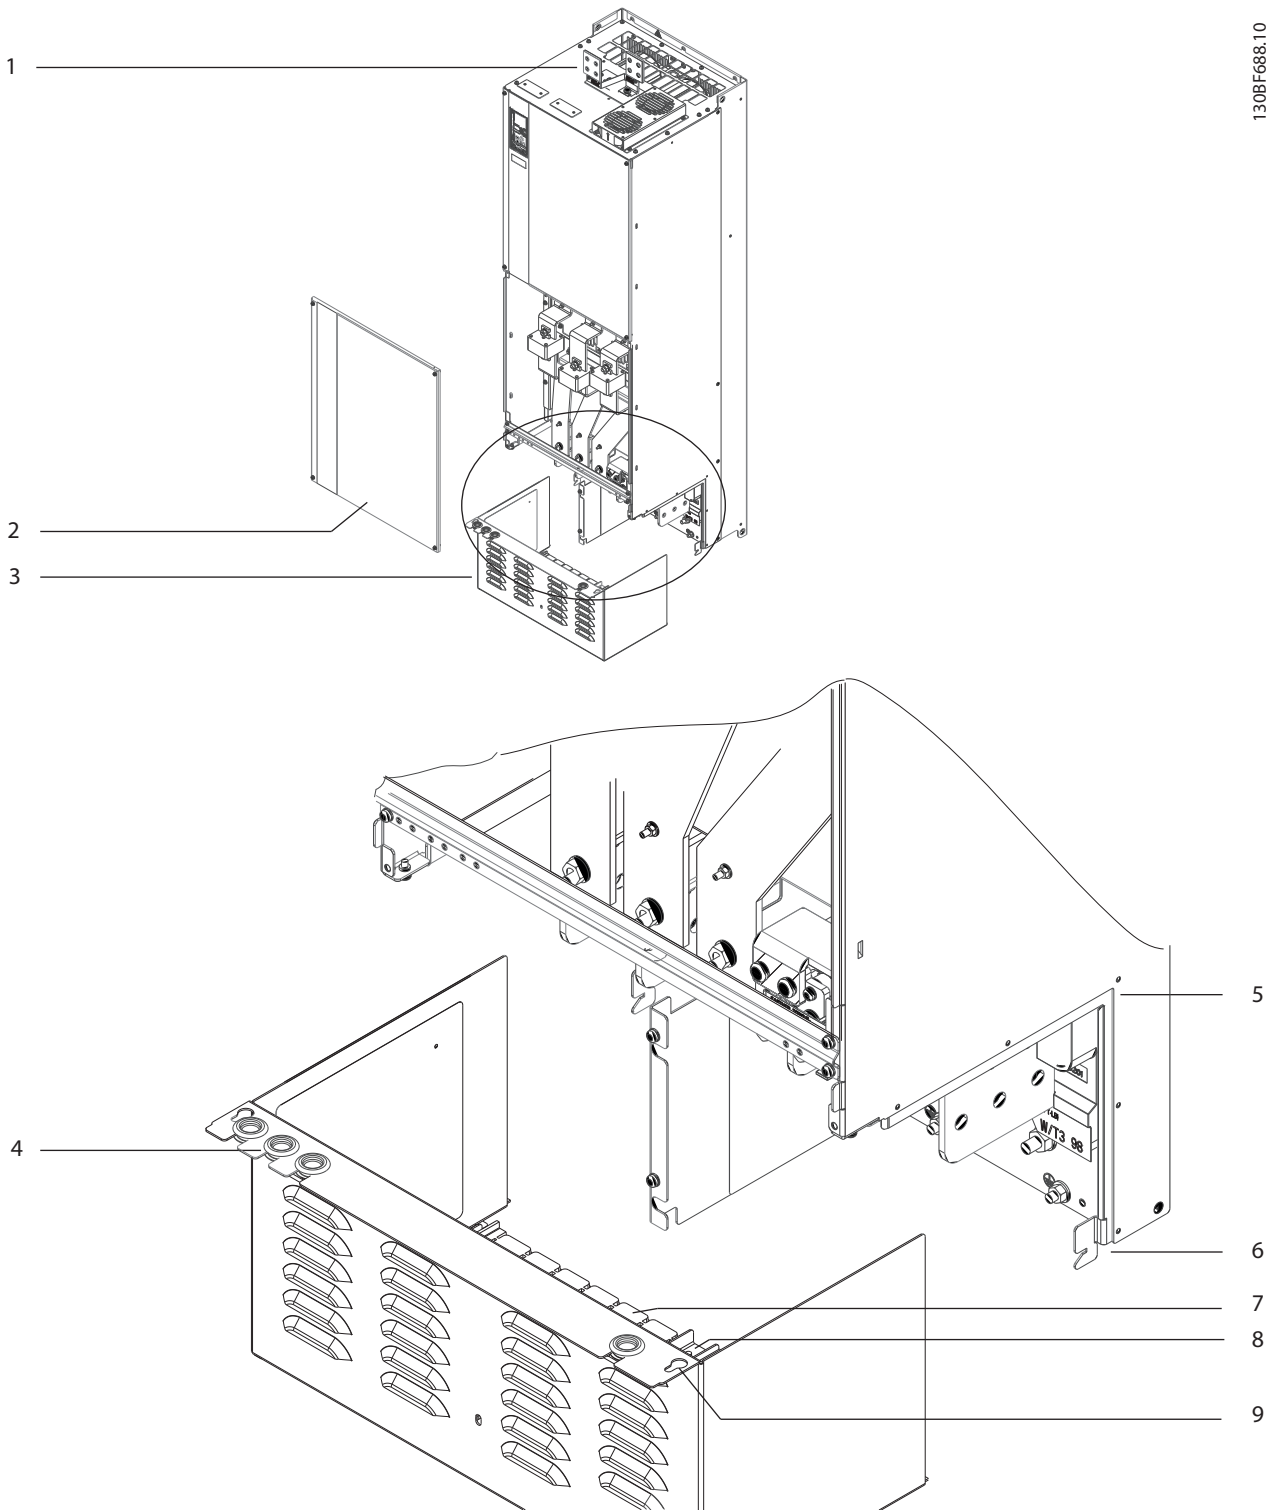


1	Load share/regeneration terminals (optional)	6	Slotted drive bracket
2	Bottom panel	7	Plastic gland plate (installed)
3	Terminal cover	8	Fastener point
4	Grommet access hole for control wiring	9	Keyhole opening
5	Track guide	-	-

Illustration 4.8 Assembling the Gland Plate and Terminal Cover

### 4.8.3 Installing Load share/Regeneration Terminals

The load share/regeneration terminals, located on the top of the drive, are not installed from the factory to prevent damage during shipping. Refer to *Illustration 4.9* for the following steps.

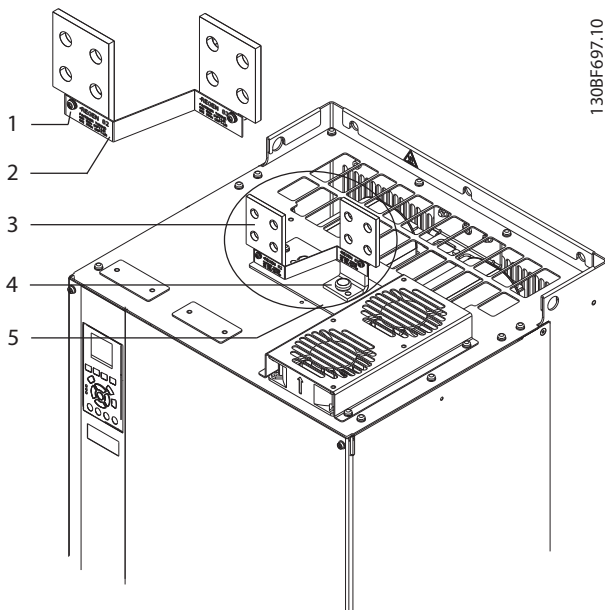

1	Label fastener, M4
2	Label
3	Load share/regeneration terminal
4	Terminal fastener, M10
5	Terminal plate with 2 openings

**Illustration 4.9** Load share/Regeneration Terminals

1. Remove the terminal plate, 2 terminals, label, and fasteners from the accessory bag included with the drive.
2. Remove the cover from the load share/regeneration opening on the top of the drive. Put aside the 2 M5 fasteners for reuse later.
3. Remove the plastic backing and install the terminal plate over the load share/regeneration opening. Secure with the 2 M5 fasteners and torque to 2.3 Nm (20 in-lb).
4. Install the both terminals to the terminal plate using 1 M10 fastener per terminal. Torque to 19 Nm (169 in-lb).
5. Install the label on the front of the terminals as shown in *Illustration 4.9*. Secure with 2 M4 screws and torque to 1.2 Nm (10 in-lb).

## 5 Electrical Installation

### 5.1 Safety Instructions

See *chapter 2 Safety* for general safety instructions.

#### **⚠ WARNING**

##### INDUCED VOLTAGE

Induced voltage from output motor cables from different drives that are run together can charge equipment capacitors even with the equipment turned off and locked out. Failure to run output motor cables separately or use shielded cables could result in death or serious injury.

- Run output motor cables separately, or
- Use shielded cables.
- Simultaneously lock out all the drives.

#### **⚠ WARNING**

##### SHOCK HAZARD

The drive can cause a DC current in the ground conductor and thus result in death or serious injury.

- When a residual current-operated protective device (RCD) is used for protection against electrical shock, only an RCD of Type B is allowed on the supply side.

Failure to follow the recommendation means that the RCD cannot provide the intended protection.

##### Overcurrent protection

- Extra protective equipment such as short-circuit protection or motor thermal protection between drive and motor is required for applications with multiple motors.
- Input fusing is required to provide short circuit and overcurrent protection. If fuses are not factory-supplied, the installer must provide them. See maximum fuse ratings in *chapter 9.7 Fuses*.

##### Wire type and ratings

- All wiring must comply with local and national regulations regarding cross-section and ambient temperature requirements.
- Power connection wire recommendation: Minimum 75 °C (167 °F) rated copper wire.

See *chapter 9.5.1 Cable Specifications* for recommended wire sizes and types.

#### **⚠ CAUTION**

##### PROPERTY DAMAGE!

Protection against motor overload is not included in the default setting. To add this function, set *parameter 1-90 Motor Thermal Protection* to [ETR trip] or [ETR warning]. For the North American market, the ETR function provides class 20 motor overload protection in accordance with NEC. Failure to set *parameter 1-90 Motor Thermal Protection* to [ETR trip] or [ETR warning] means that motor overload protection is not provided and property damage can occur if the motor overheats.

### 5.2 EMC-compliant Installation

To obtain an EMC-compliant installation, follow the instructions provided in:

- *Chapter 5.3 Wiring Schematic*.
- *Chapter 5.4 Connecting the Motor*.
- *Chapter 5.6 Connecting to Ground*.
- *Chapter 5.8 Control Wiring*.

#### **NOTICE**

##### TWISTED SHIELD ENDS (PIGTAILS)

Twisted shield ends increase the shield impedance at higher frequencies, which reduces the shield effect and increases the leakage current. Avoid twisted shield ends by using integrated shield clamps.

- For use with relays, control cables, a signal interface, fieldbus, or brake, connect the shield to the enclosure at both ends. If the ground path has high impedance, is noisy, or is carrying current, break the shield connection on 1 end to avoid ground current loops.
- Convey the currents back to the unit using a metal mounting plate. Ensure good electrical contact from the mounting plate through the mounting screws to the drive chassis.
- Use shielded cables for motor output cables. An alternative is unshielded motor cables within metal conduit.

#### **NOTICE**

##### SHIELDED CABLES

If shielded cables or metal conduits are not used, the unit and the installation does not meet regulatory limits on radio frequency (RF) emission levels.

- Ensure that motor and brake cables are as short as possible to reduce the interference level from the entire system.
- Avoid placing cables with a sensitive signal level alongside motor and brake cables.
- For communication and command/control lines, follow the particular communication protocol standards. For example, USB must use shielded cables, but RS-485/ethernet can use shielded UTP or unshielded UTP cables.
- Ensure that all control terminal connections are PELV.

**NOTICE****EMC INTERFERENCE**

Use shielded cables for motor and control wiring, and separate cables for mains input, motor wiring, and control wiring. Failure to isolate power, motor, and control cables can result in unintended behavior or reduced performance. Minimum 200 mm (7.9 in) clearance between mains input, motor, and control cables is required.

**NOTICE****INSTALLATION AT HIGH ALTITUDE**

There is a risk for overvoltage. Isolation between components and critical parts could be insufficient, and may not comply with PELV requirements. Reduce the risk for overvoltage by using external protective devices or galvanic isolation.


For installations above 2000 m (6500 ft) altitude, contact Danfoss regarding PELV compliance.

**NOTICE****PELV COMPLIANCE**

Prevent electric shock by using protective extra low voltage (PELV) electrical supply and complying with local and national PELV regulations.

5

130BF228.10

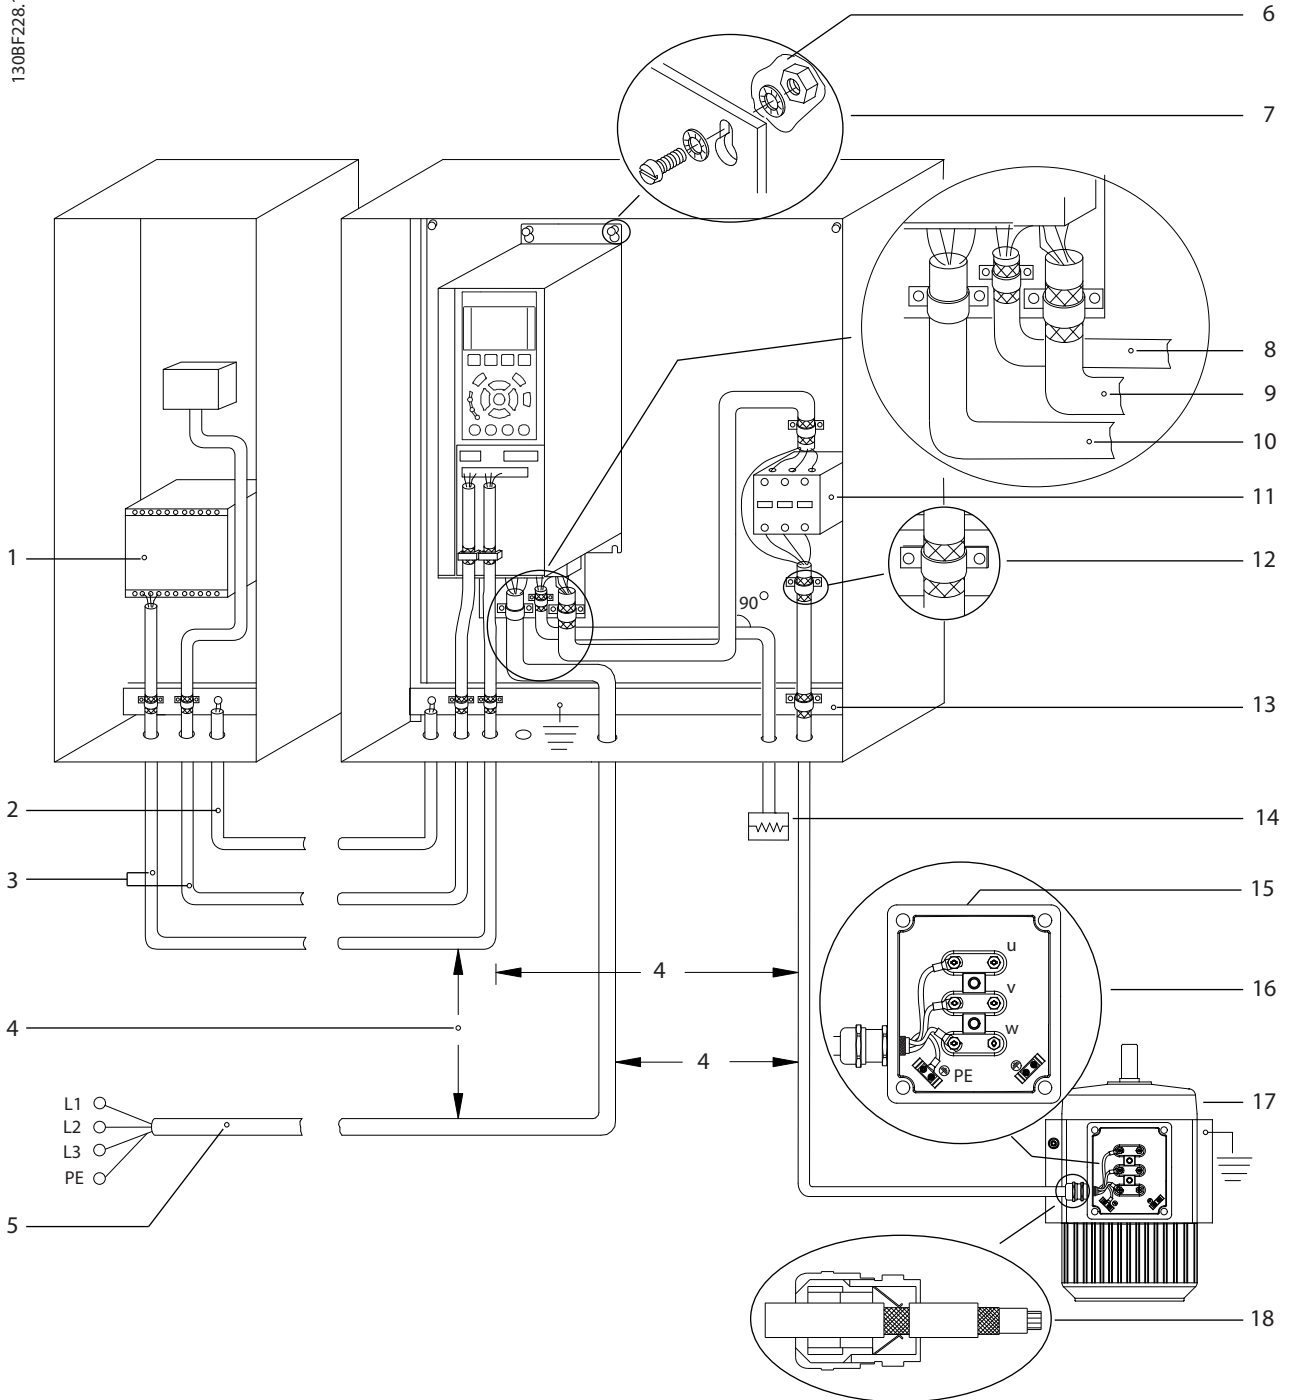


1	PLC	10	Mains cable (unshielded)
2	Minimum 16 mm <sup>2</sup> equalizing cable	11	Output contactor, and so on
3	Control cables	12	Cable insulation stripped
4	Minimum 200 mm between control cables, motor cables, and mains cables.	13	Common ground busbar. Follow local and national requirements for cabinet grounding.
5	Mains supply	14	Brake resistor
6	Bare (unpainted) surface	15	Metal box
7	Star washers	16	Connection to motor
8	Brake cable (shielded)	17	Motor
9	Motor cable (shielded)	18	EMC cable gland

Illustration 5.1 Example of Proper EMC Installation



5.3 Wiring Schematic

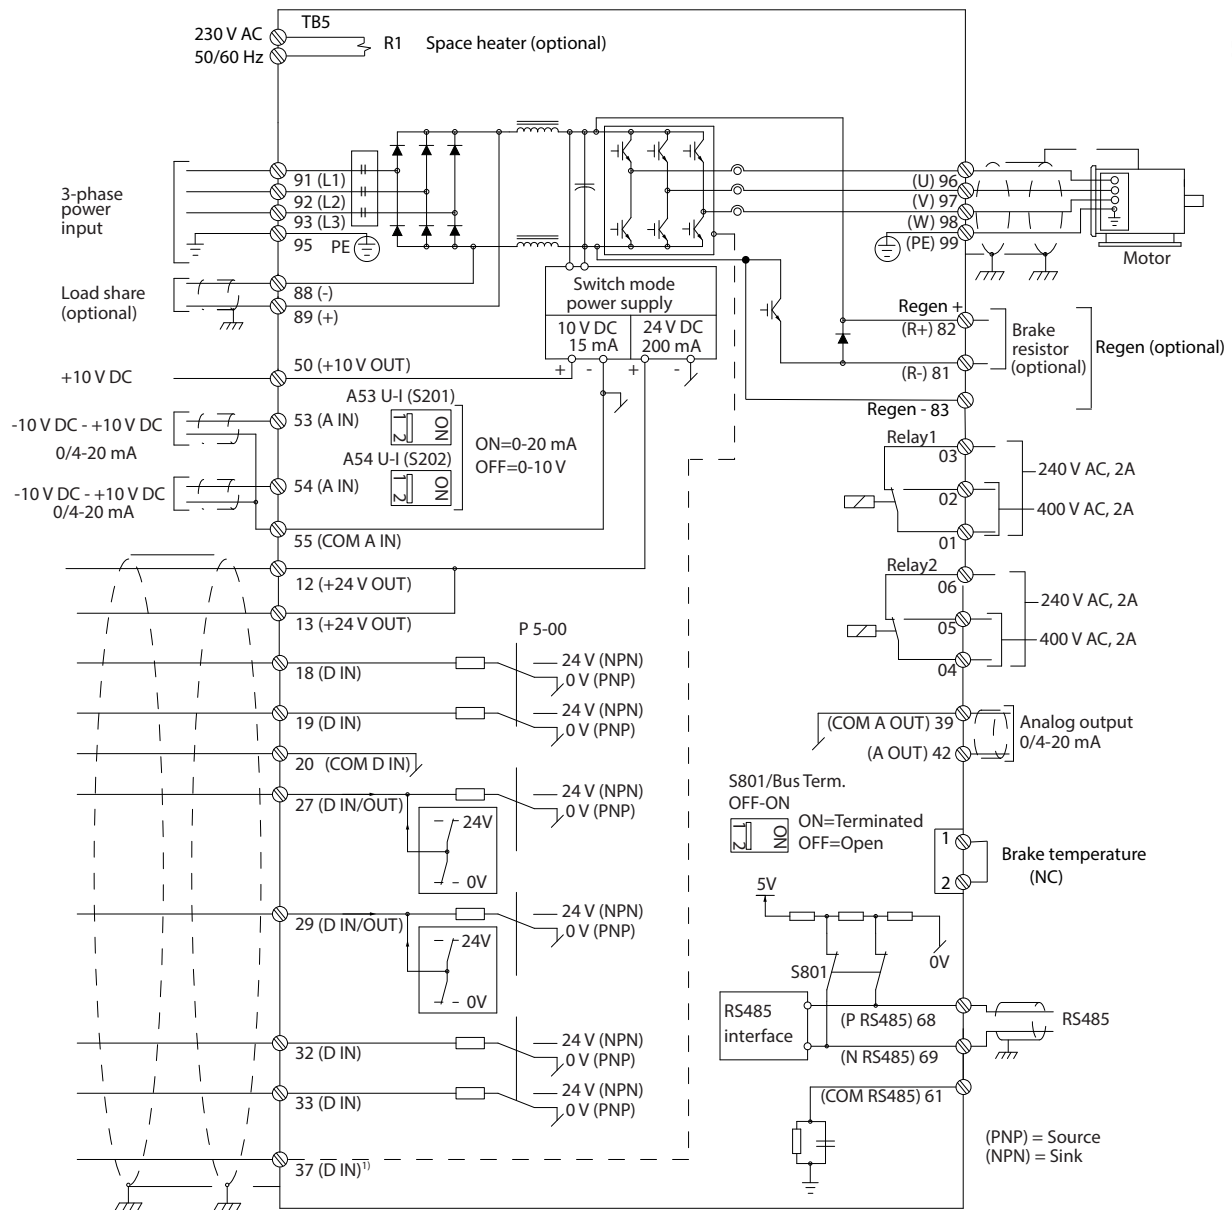

5

Illustration 5.2 Basic Wiring Schematic

A=Analog, D=Digital

1) Terminal 37 (optional) is used for Safe Torque Off. For Safe Torque Off installation instructions, refer to the Safe Torque Off Operating Guide.

## 5.4 Connecting the Motor

### **⚠ WARNING**

#### INDUCED VOLTAGE

Induced voltage from output motor cables that run together can charge equipment capacitors, even with the equipment turned off and locked out. Failure to run output motor cables separately or use shielded cables could result in death or serious injury.

- Comply with local and national electrical codes for cable sizes. For maximum wire sizes, see *chapter 9.1 Electrical Data*.
- Follow motor manufacturer wiring requirements.
- Motor wiring knockouts or access panels are provided on the pedestal of IP21/IP54 (Type 1/Type 12) units.
- Do not wire a starting or pole-changing device (for example Dahlander motor or slip ring asynchronous motor) between the drive and the motor.

#### Procedure

1. Strip a section of the outer cable insulation.
2. Establish mechanical fixation and electrical contact between the cable shield and ground by positioning the stripped wire under the cable clamp.
3. Connect the ground wire to the nearest grounding terminal in accordance with the grounding instructions provided in *chapter 5.6 Connecting to Ground*.
4. Connect the 3-phase motor wiring to terminals 96 (U), 97 (V), and 98 (W), see *Illustration 5.3*.
5. Tighten the terminals in accordance with the information provided in *chapter 9.10.1 Fastener Torque Ratings*.

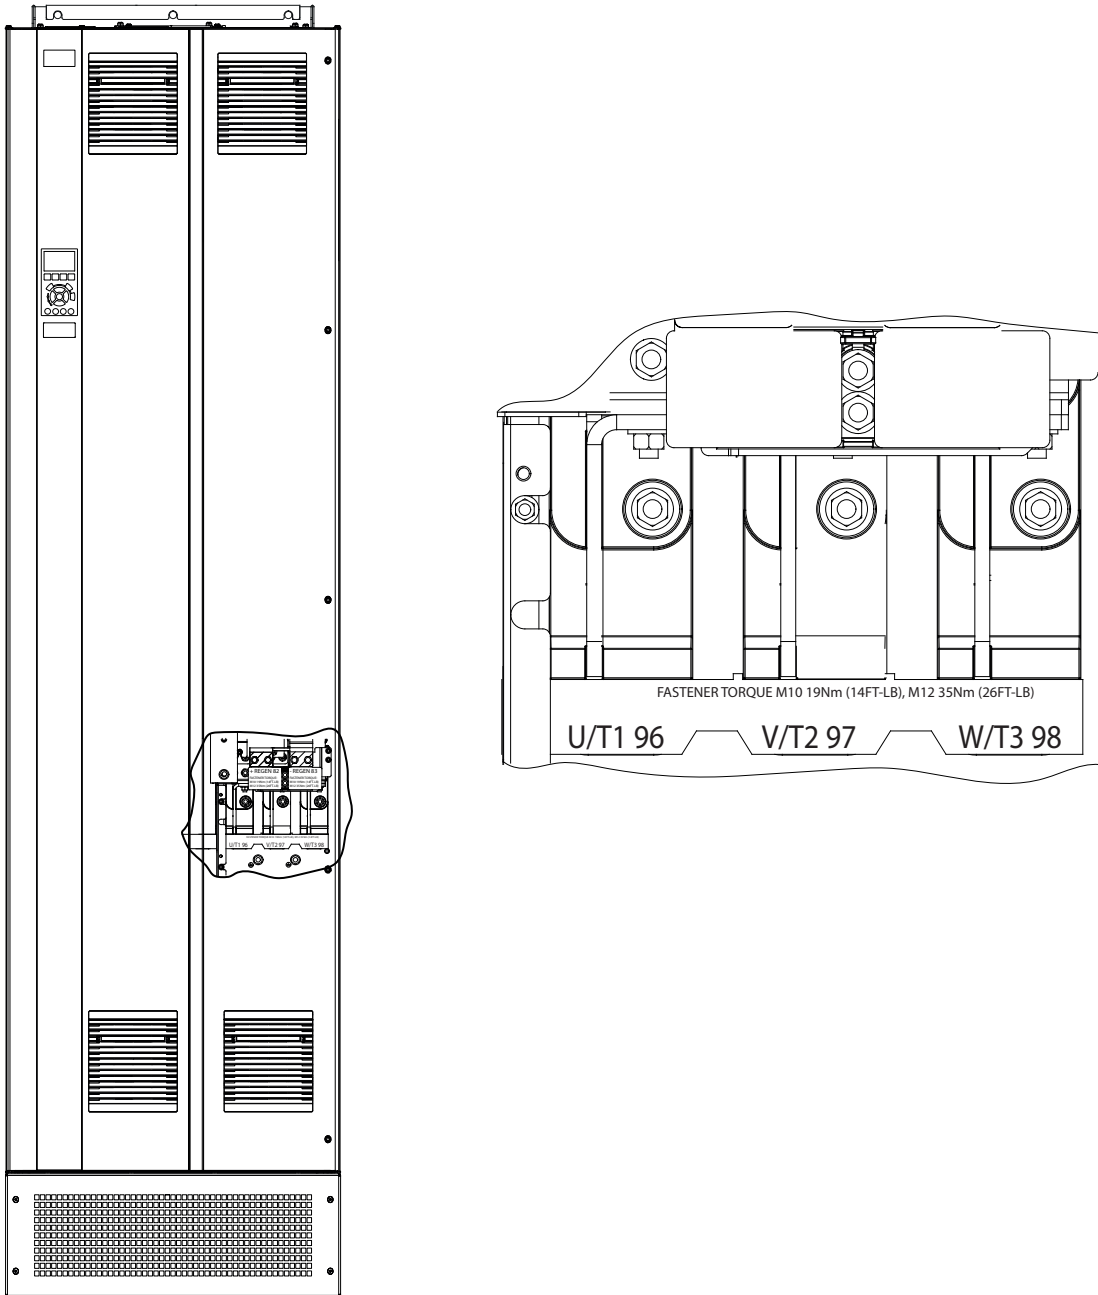


Illustration 5.3 AC motor terminals (E1h shown). For a detailed view of terminals, refer to *chapter 5.7 Terminal Dimensions*.

## 5.5 Connecting the AC Mains

- Size the wiring according to the input current of the drive. For maximum wire sizes, see *chapter 9.1 Electrical Data*.
- Comply with local and national electrical codes for cable sizes.

### Procedure

1. Strip a section of the outer cable insulation.
2. Establish mechanical fixation and electrical contact between the cable shield and ground by positioning the stripped wire under the cable clamp.
3. Connect the ground wire to the nearest grounding terminal in accordance with the grounding instructions provided in *chapter 5.6 Connecting to Ground*.
4. Connect the 3-phase AC input power wiring to terminals R, S, and T (see *Illustration 5.4*).
5. When supplied from an isolated mains source (IT mains or floating delta) or TT/TN-S mains with a grounded leg (grounded delta), ensure that *parameter 14-50 RFI Filter* is set to [0] Off to avoid damage to the DC link and to reduce ground capacity currents.
6. Tighten the terminals in accordance with the information provided in *chapter 9.10.1 Fastener Torque Ratings*.

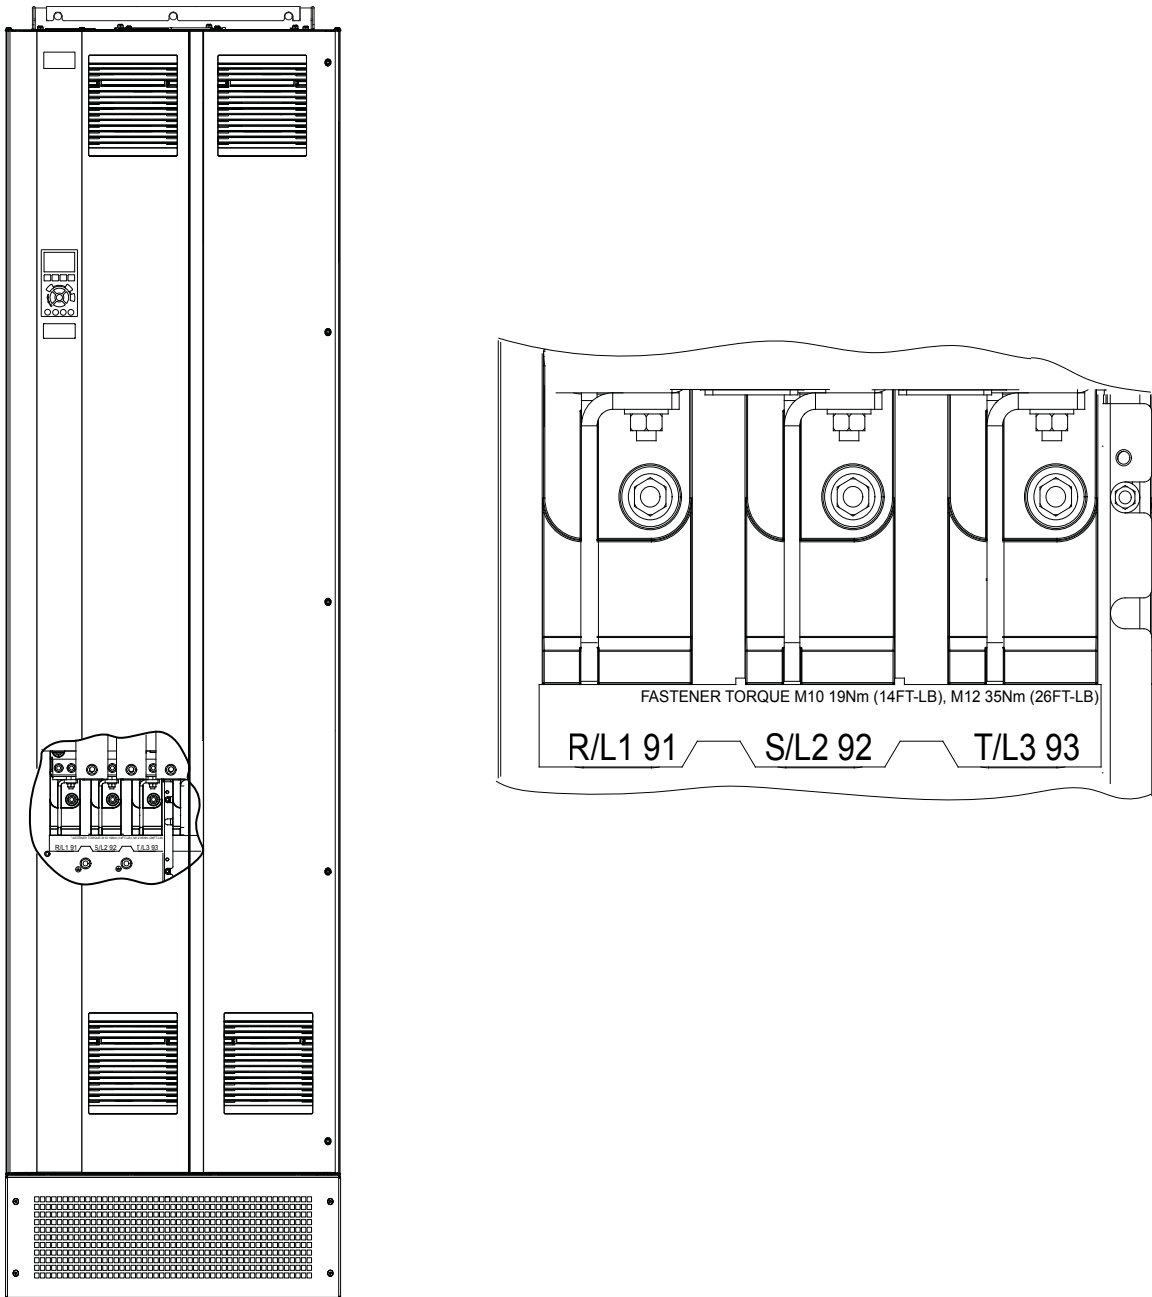


Illustration 5.4 AC mains terminals (E1h shown). For a detailed view of terminals, refer to *chapter 5.7 Terminal Dimensions*.

## 5.6 Connecting to Ground

### **⚠ WARNING**

#### **LEAKAGE CURRENT HAZARD**

Leakage currents exceed 3.5 mA. Failure to ground the drive properly can result in death or serious injury.

- Ensure the correct grounding of the equipment by a certified electrical installer.

#### **For electrical safety**

- Ground the drive in accordance with applicable standards and directives.
- Use a dedicated ground wire for input power, motor power, and control wiring.
- Do not ground 1 drive to another in a daisy chain fashion.
- Keep the ground wire connections as short as possible.
- Follow motor manufacturer wiring requirements.
- Minimum cable cross-section: 10 mm<sup>2</sup> (6 AWG) (or 2 rated ground wires terminated separately).
- Tighten the terminals in accordance with the information provided in *chapter 9.10.1 Fastener Torque Ratings*.

#### **For EMC-compliant installation**

- Establish electrical contact between the cable shield and the drive enclosure by using metal cable glands or by using the clamps provided on the equipment.
- Reduce burst transient by using high-strand wire.
- Do not use pigtailed.

### **NOTICE**

#### **POTENTIAL EQUALIZATION**

There is a risk of burst transient when the ground potential between the drive and the control system is different. Install equalizing cables between the system components. Recommended cable cross-section: 16 mm<sup>2</sup> (5 AWG).



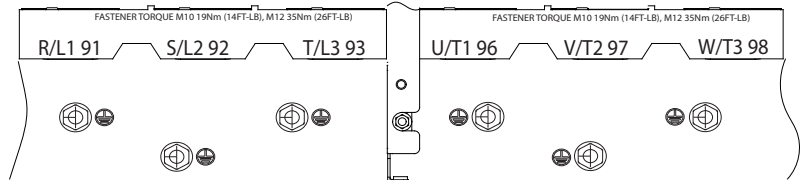


Illustration 5.5 Ground terminals (E1h shown). For a detailed view of terminals, refer to *chapter 5.7 Terminal Dimensions*.

### 5.7 Terminal Dimensions

#### 5.7.1 E1h Terminal Dimensions


5

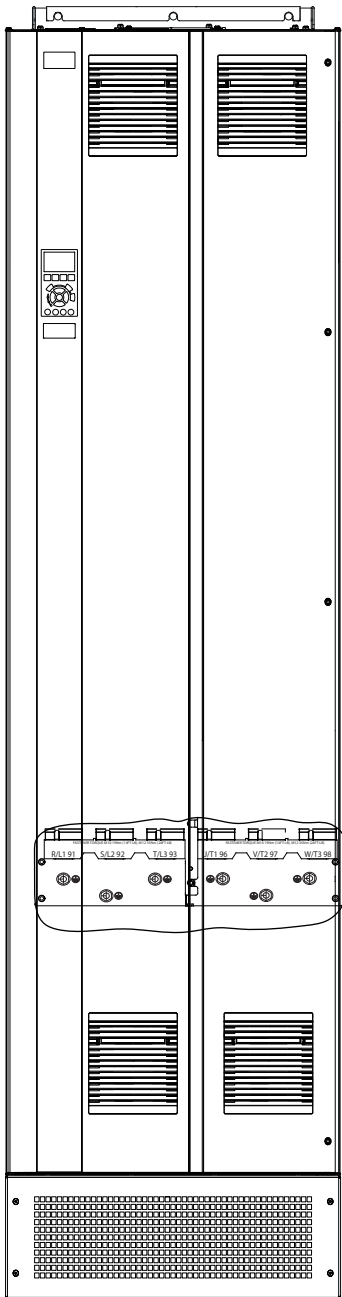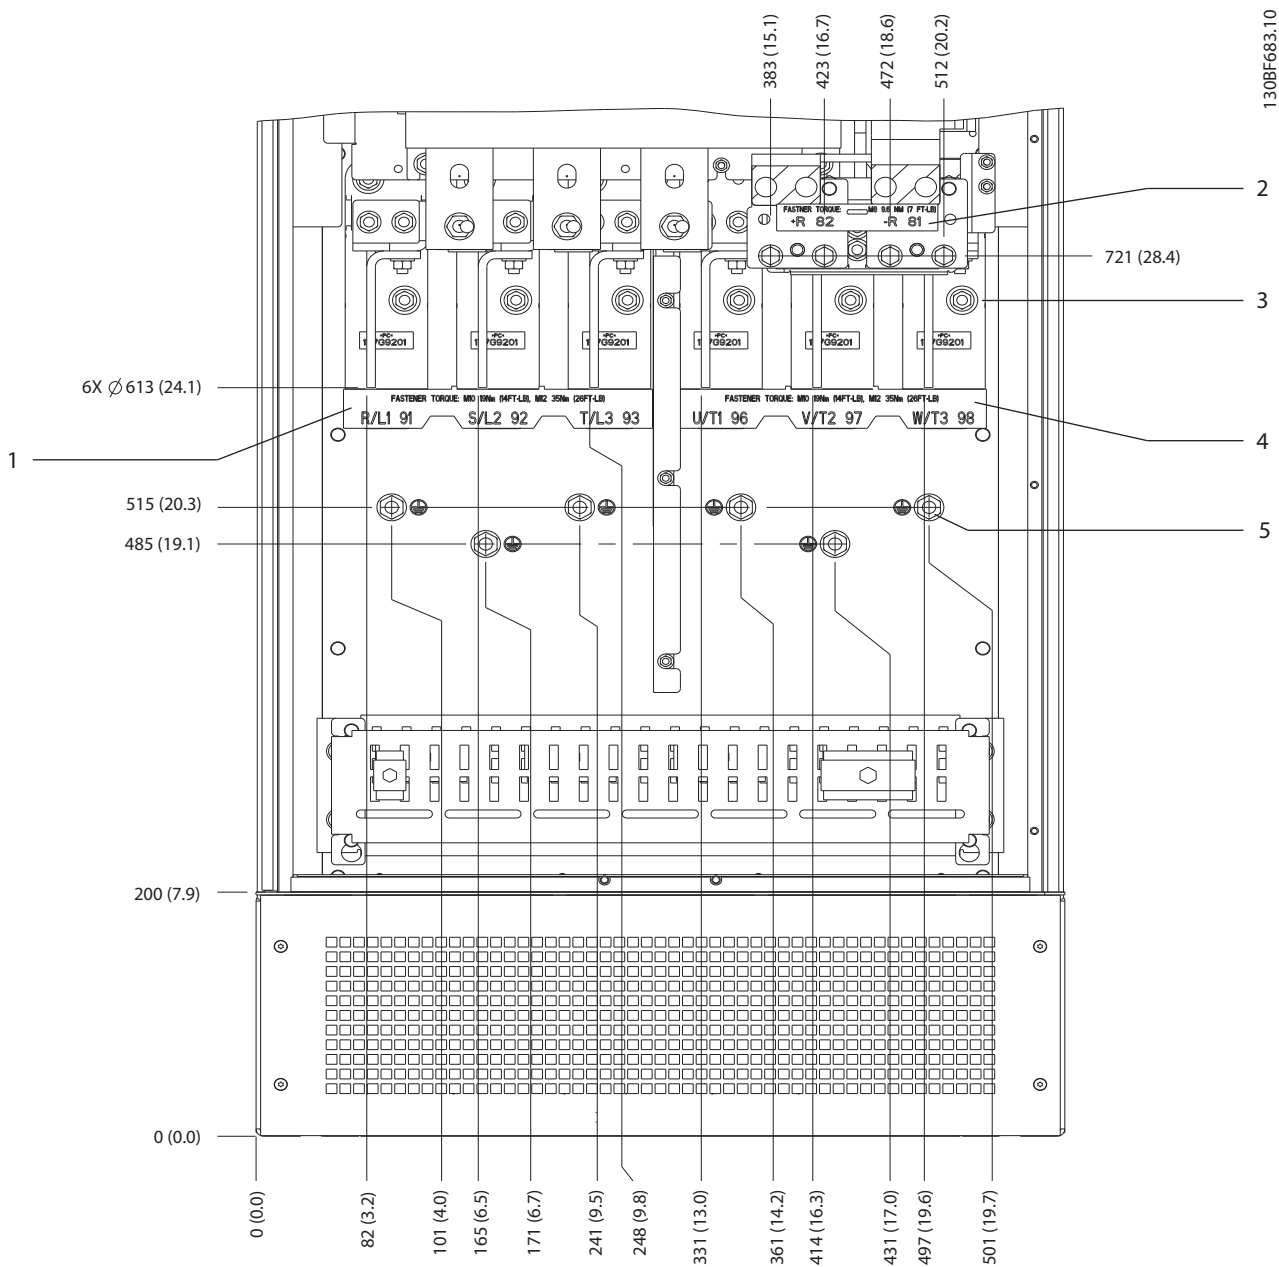

1	Mains terminals	3	Motor terminals
2	Brake or regeneration terminals	4	Ground terminals, M10 nut

Illustration 5.6 E1h Terminal Dimensions (Front View)



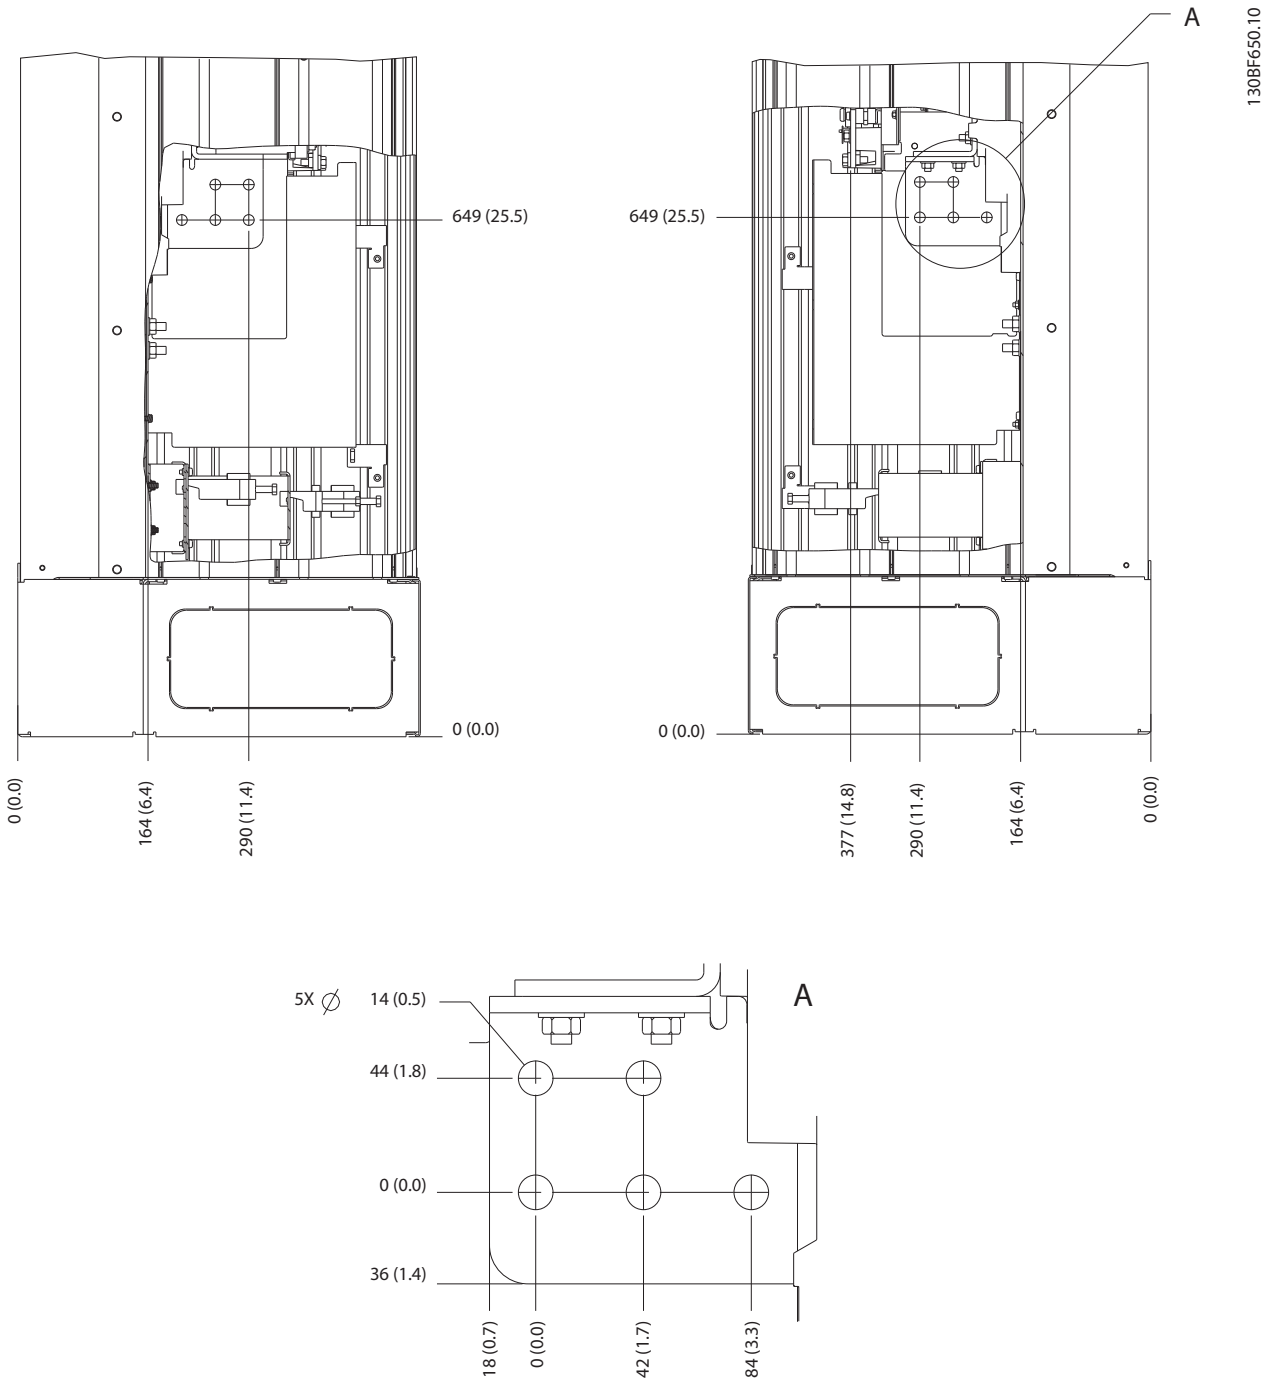


5

Illustration 5.7 E1h Terminal Dimensions (Side Views)


5.7.2 Mains, Motor, and Ground for E2h

5

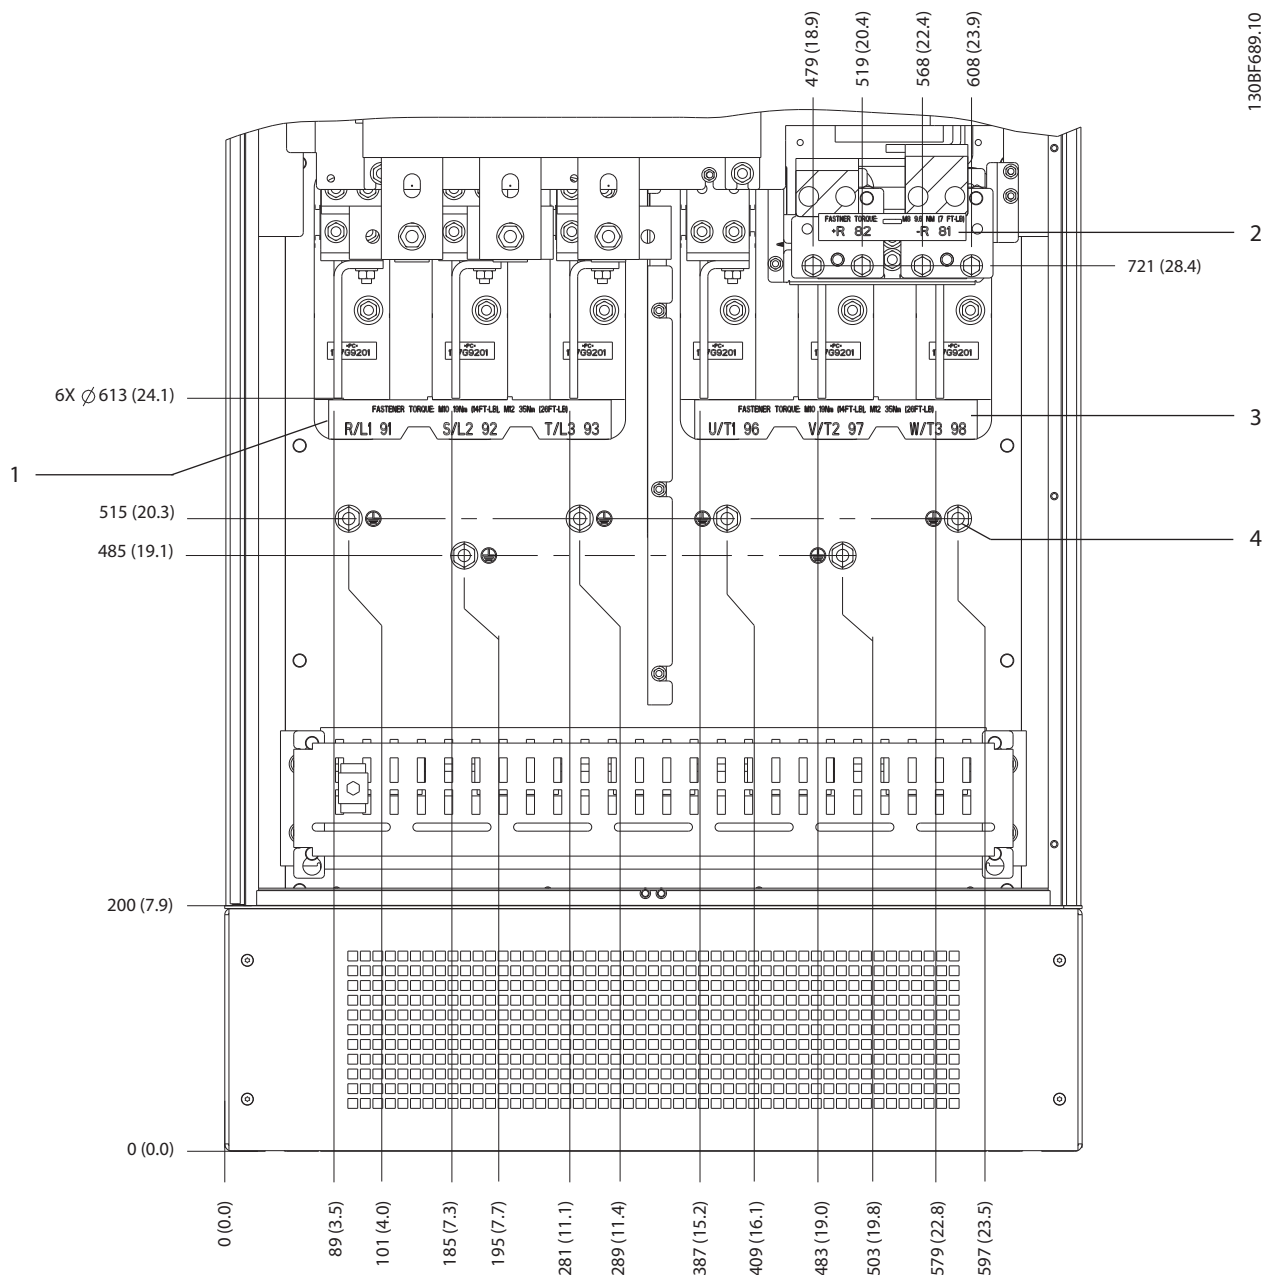

1	Mains terminals	3	Motor terminals
2	Brake or regeneration terminals	4	Ground terminals, M10 nut

Illustration 5.8 E2h Terminal Dimensions (Front View)

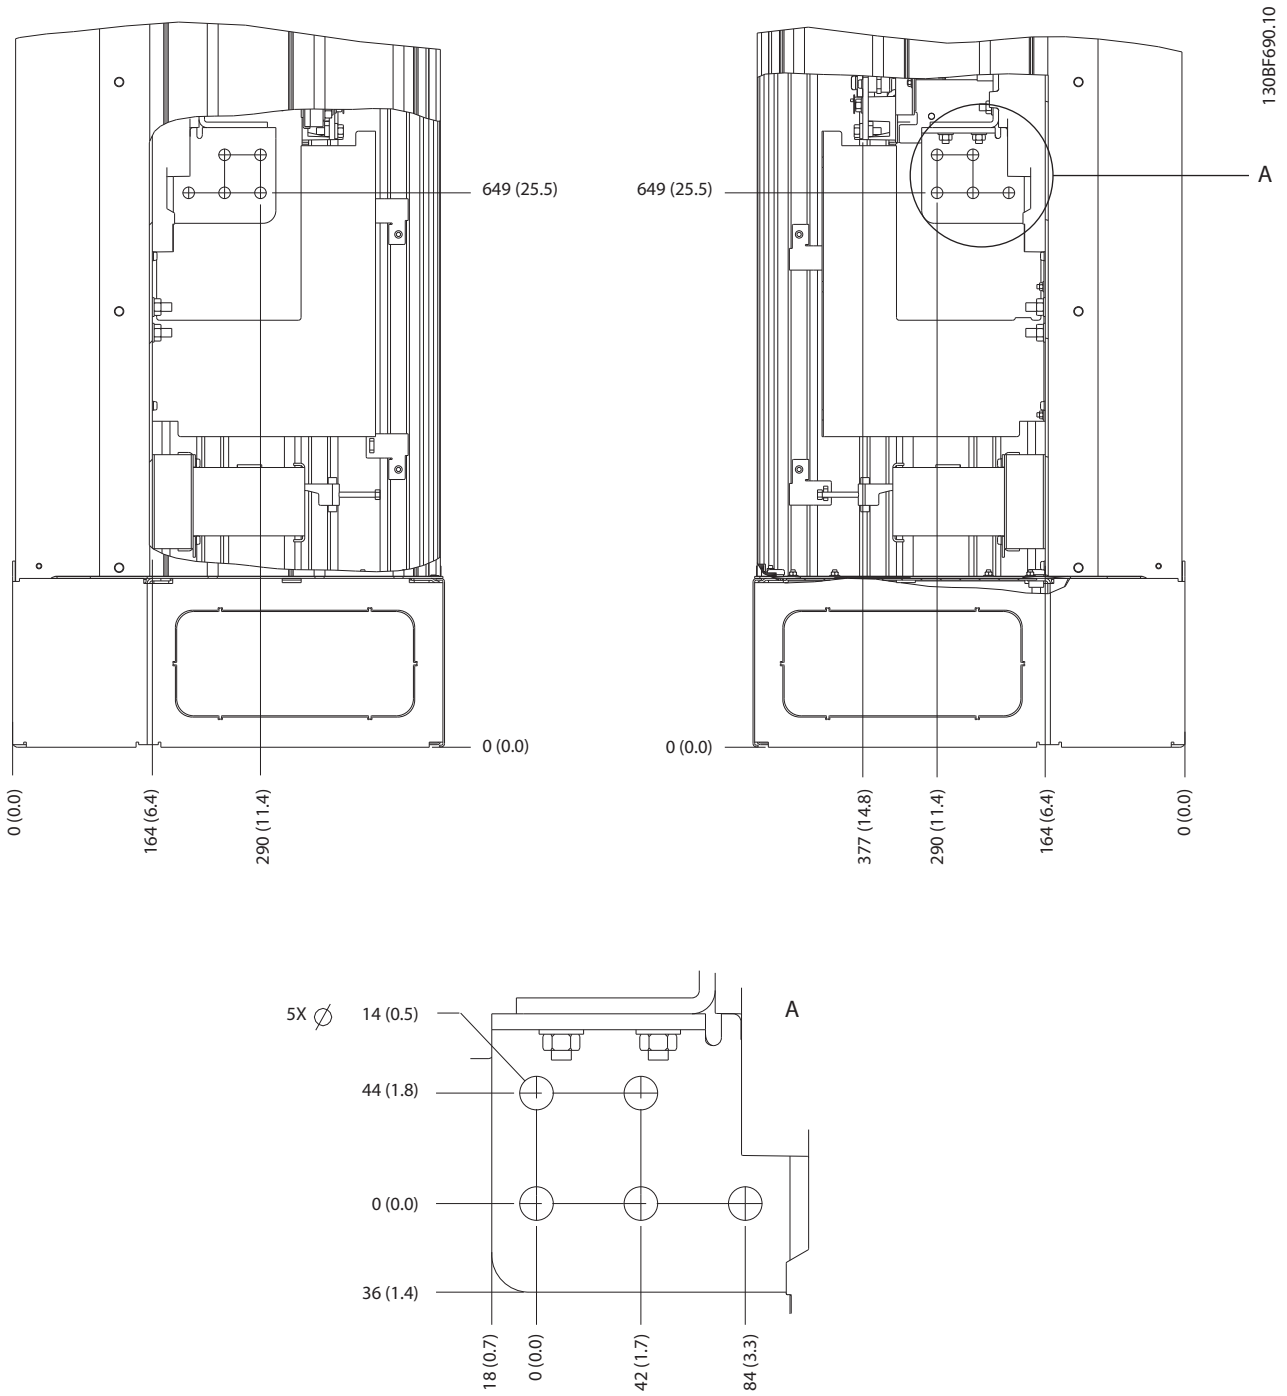


5

Illustration 5.9 E2h Terminal Dimensions (Side Views)


5.7.3 Mains, Motor, and Ground for E3h

5

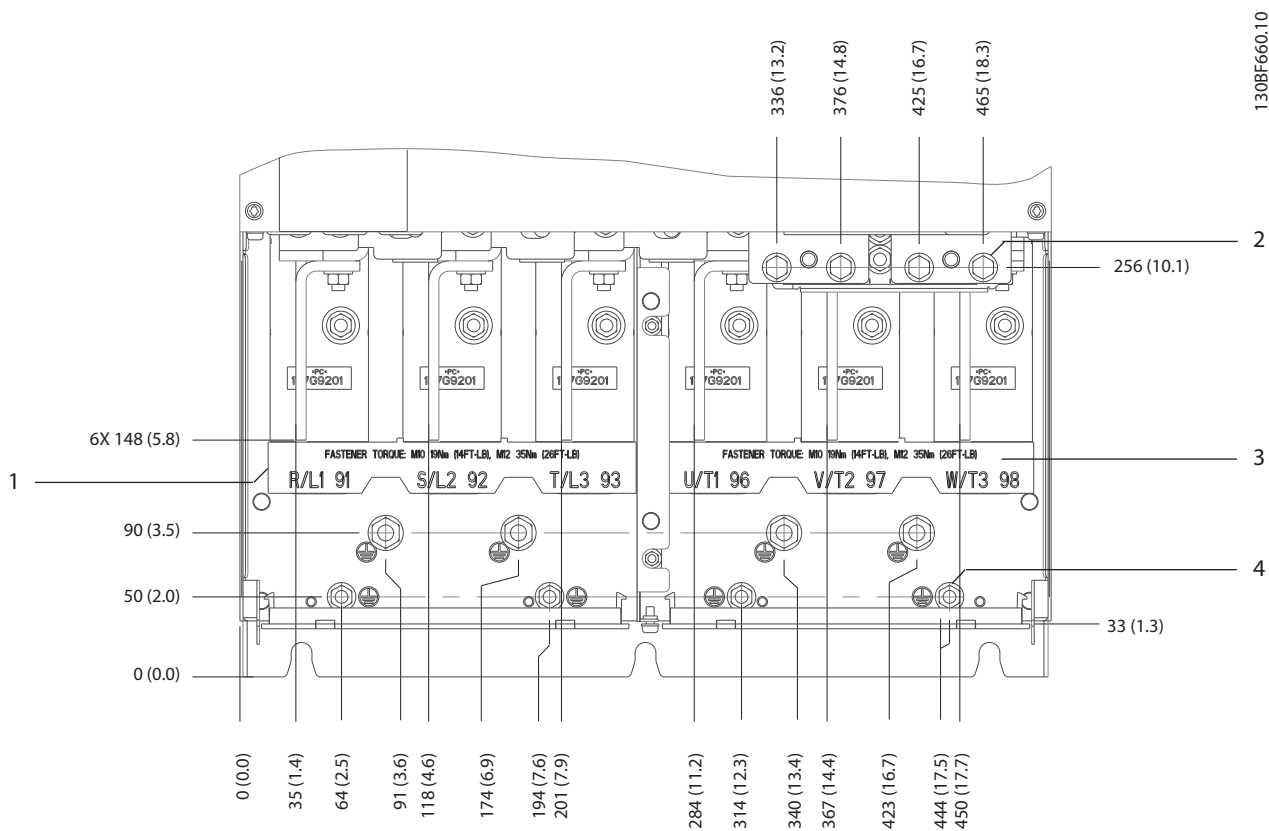

1	Mains terminals	3	Motor terminals
2	Brake or regeneration terminals	4	Ground terminals, M8 and M10 nuts

Illustration 5.10 E3h Terminal Dimensions (Front View)

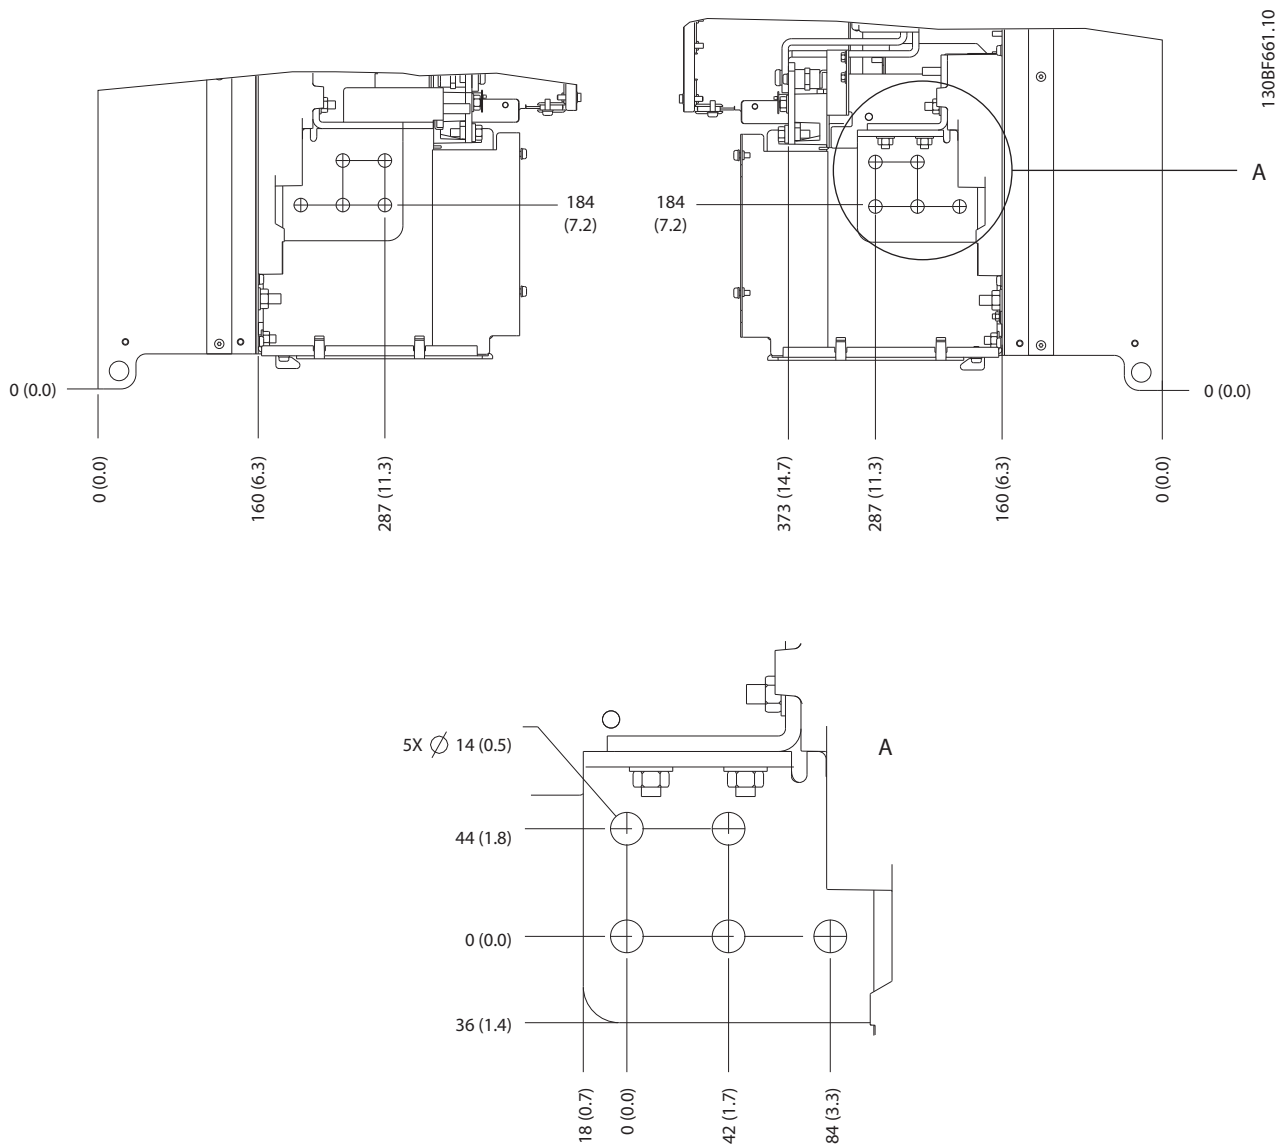

5

Illustration 5.11 E3h Mains, Motor, and Ground Terminal Dimensions (Side Views)

5



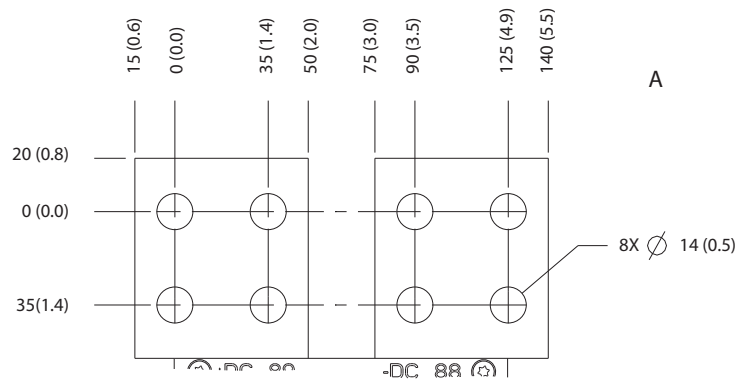


Illustration 5.12 E3h Load Share/Regeneration Terminal Dimensions

5.7.4 Mains, Motor, and Ground for E4h

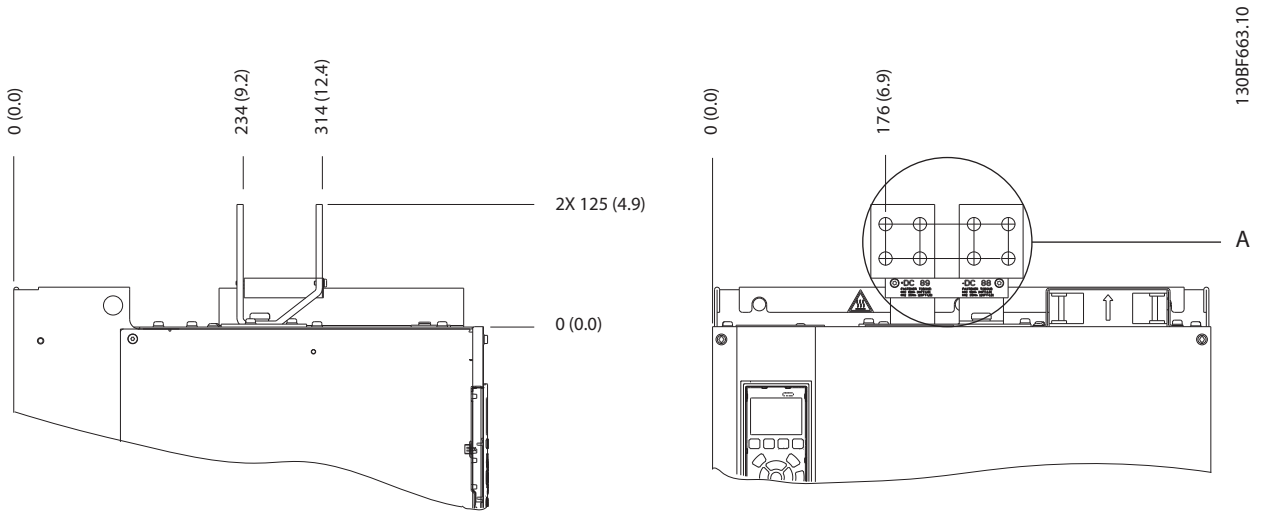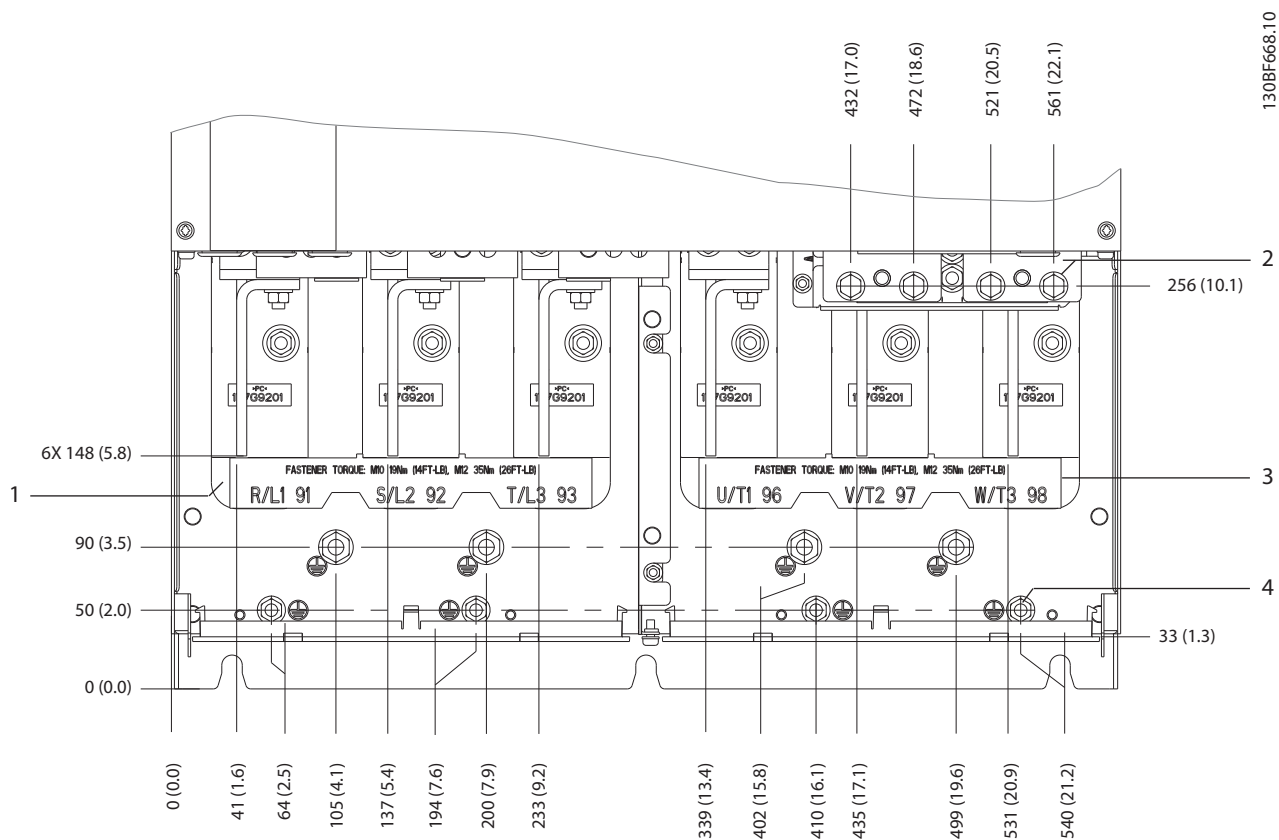

1	Mains terminals	3	Motor terminals
2	Brake or regeneration terminals	4	Ground terminals, M8 and M10 nuts

Illustration 5.13 E4h Terminal Dimensions (Front View)

5


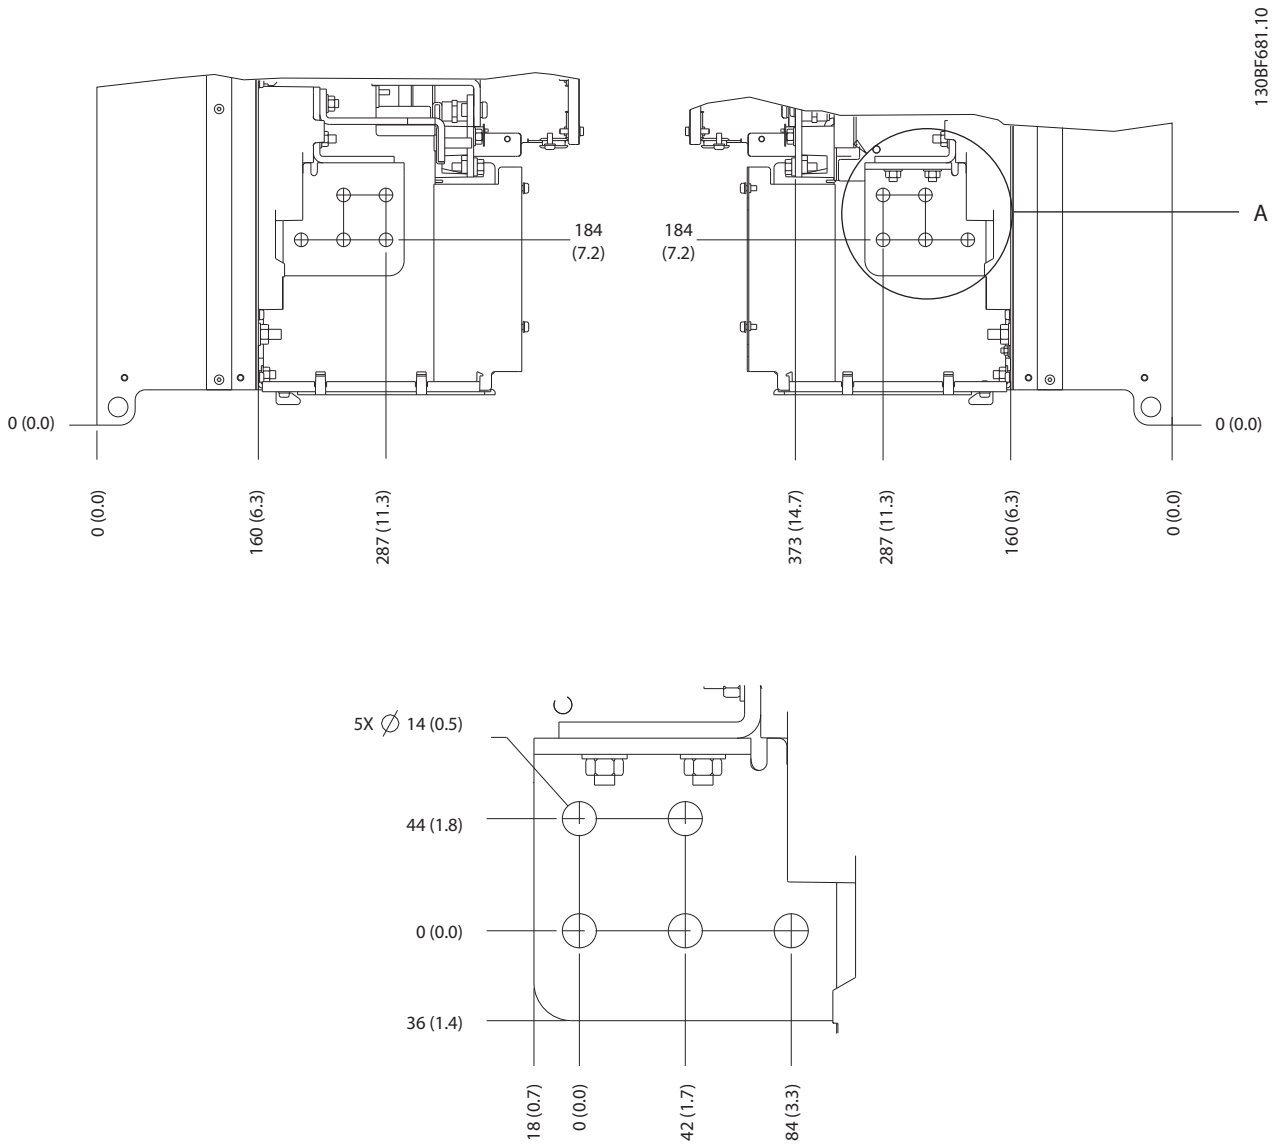


Illustration 5.14 E4h Mains, Motor, and Ground Terminal Dimensions (Side Views)



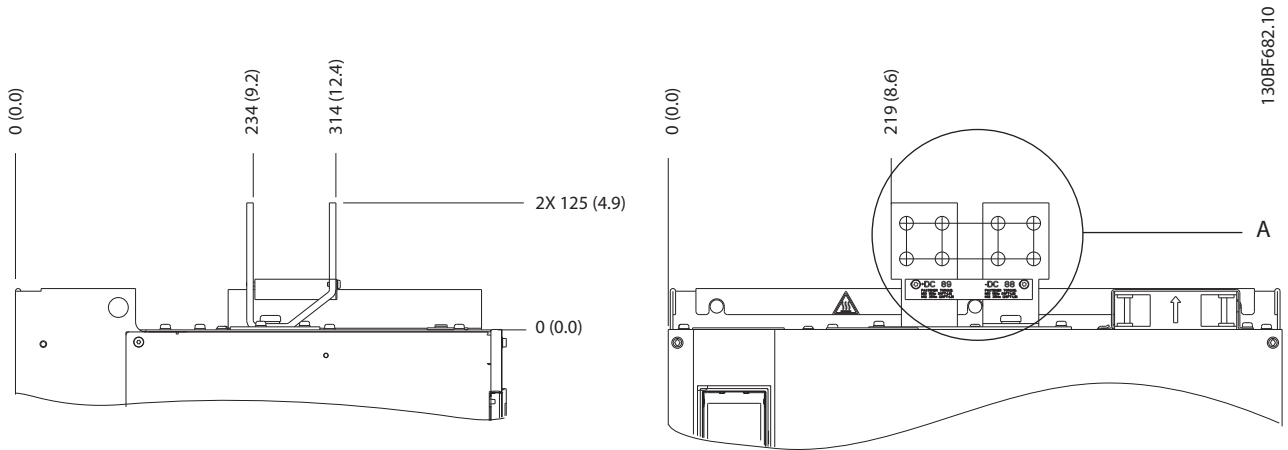

5

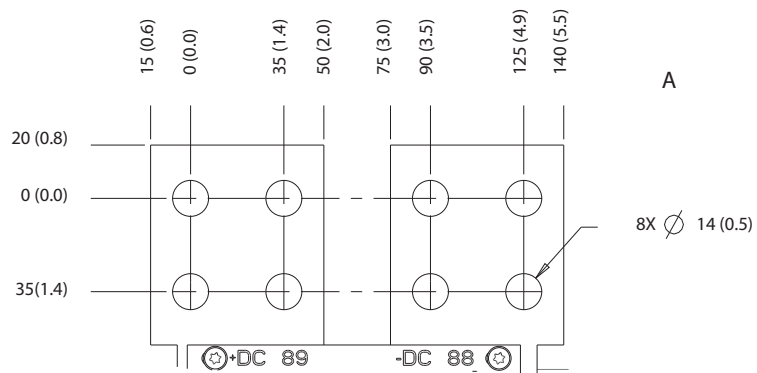


Illustration 5.15 E4h Load Share/Regeneration Terminal Dimensions

## 5.8 Control Wiring

All terminals to the control cables are inside the drive below the LCP. To access, either open the door (E1h and E2h) or remove the front panel (E3h and E4h).

### 5.8.1 Control Cable Routing

Tie down and route all control wires as shown in *Illustration 5.16*. Remember to connect the shields in a proper way to ensure optimum electrical immunity.

5

- Isolate control wiring from high-power cables in the drive.
- When the drive is connected to a thermistor, ensure that the thermistor control wiring is shielded and reinforced/double insulated. A 24 V DC supply voltage is recommended.

#### Fieldbus connection

Connections are made to the relevant options on the control card. For more detail, see the relevant fieldbus instruction. The cable must be tied down and routed along with other control wires inside the unit. See *Illustration 5.16*.


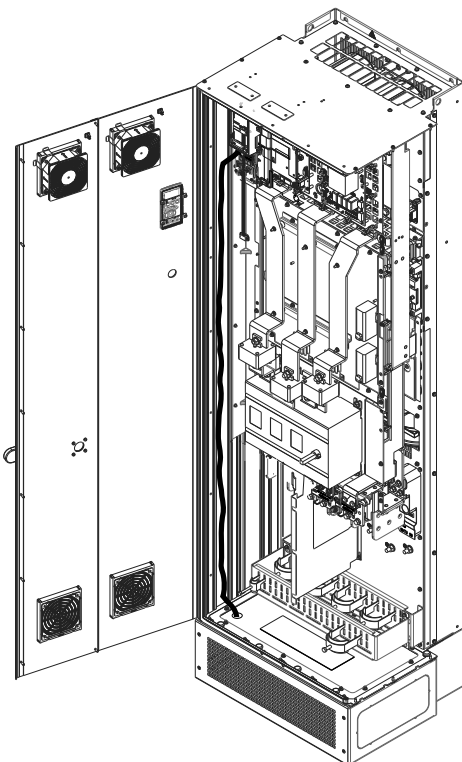


Illustration 5.16 Control Card Wiring Path


### 5.8.2 Control Terminal Types

*Illustration 5.17* shows the removable drive connectors. Terminal functions and default settings are summarized in *Table 5.1 – Table 5.3*.

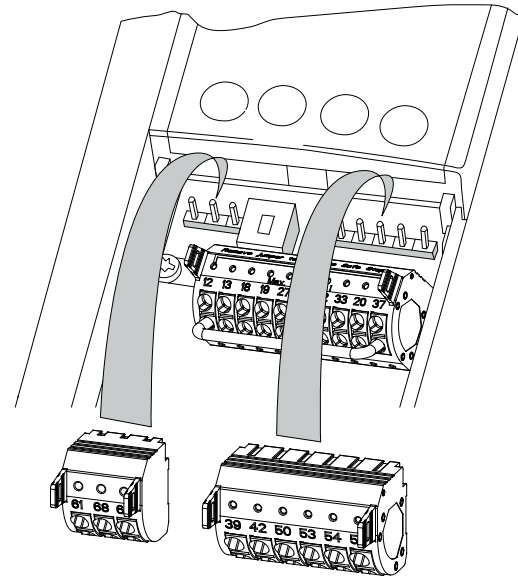

130BF144.10

Illustration 5.17 Control Terminal Locations

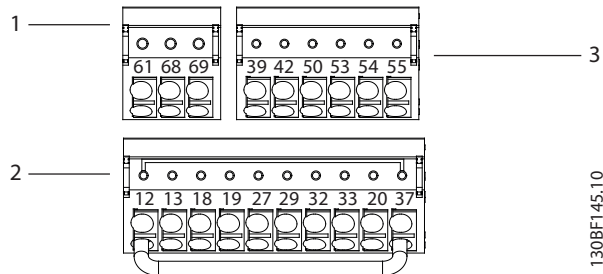

130BF715.10

130BF145.10

1	Serial communication terminals
2	Digital input/output terminals
3	Analog input/output terminals

Illustration 5.18 Terminal Numbers Located on the Connectors

Serial communication terminals			
Terminal	Parameter	Default setting	Description
61	–	–	Integrated RC-filter for cable shield. ONLY for connecting the shield in the event of EMC problems.

Serial communication terminals			
Terminal	Parameter	Default setting	Description
68 (+)	<i>Parameter group 8-3* FC Port Settings</i>	–	RS485 interface. A switch (BUS TER.) is provided on the control card for bus termination resistance. See <i>Illustration 5.22</i> .
69 (-)	<i>Parameter group 8-3* FC Port Settings</i>	–	
Relays			
01, 02, 03	<i>Parameter 5-40 Function Relay [0]</i>	<i>[0] No operation</i>	Form C relay output. For AC or DC voltage and resistive or inductive loads.
04, 05, 06	<i>Parameter 5-40 Function Relay [1]</i>	<i>[0] No operation</i>	

Table 5.1 Serial Communication Terminal Descriptions

Digital input/output terminals			
Terminal	Parameter	Default setting	Description
12, 13	–	+24 V DC	24 V DC supply voltage for digital inputs and external transducers. Maximum output current 200 mA for all 24 V loads.
18	<i>Parameter 5-10 Terminal 18 Digital Input</i>	<i>[8] Start</i>	Digital inputs.
19	<i>Parameter 5-11 Terminal 19 Digital Input</i>	<i>[10] Reversing</i>	
32	<i>Parameter 5-14 Terminal 32 Digital Input</i>	<i>[0] No operation</i>	
33	<i>Parameter 5-15 Terminal 33 Digital Input</i>	<i>[0] No operation</i>	
27	<i>Parameter 5-12 Terminal 27 Digital Input</i>	<i>[2] Coast inverse</i>	
29	<i>Parameter 5-13 Terminal 29 Digital Input</i>	<i>[14] JOG</i>	
20	–	–	Common for digital inputs and 0 V potential for 24 V supply.

Digital input/output terminals			
Terminal	Parameter	Default setting	Description
37	–	STO	When not using the optional STO feature, a jumper wire is required between terminal 12 (or 13) and terminal 37. This set-up allows the drive to operate with factory default programming values.

Table 5.2 Digital Input/Output Terminal Descriptions

Analog input/output terminals			
Terminal	Parameter	Default setting	Description
39	–	–	Common for analog output.
42	<i>Parameter 6-50 Terminal 42 Output</i>	<i>[0] No operation</i>	Programmable analog output. 0–20 mA or 4–20 mA at a maximum of 500 Ω.
50	–	+10 V DC	10 V DC analog supply voltage for potentiometer or thermistor. 15 mA maximum.
53	<i>Parameter group 6-1* Analog Input 1</i>	Reference	Analog input. For voltage or current. Switches A53 and A54 select mA or V.
54	<i>Parameter group 6-2* Analog Input 2</i>	Feedback	
55	–	–	Common for analog input.

Table 5.3 Analog Input/Output Terminal Descriptions

Relay terminals:

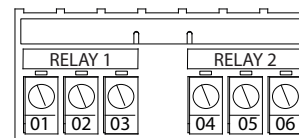


Illustration 5.19 Relay 1 and Relay 2 Terminals

- Relay 1 and relay 2. The location of the outputs depends on the drive configuration. See *chapter 3.5 Control Shelf*.
- Terminals on built-in optional equipment. See the manual provided with the equipment option.

### 5.8.3 Wiring to Control Terminals

Control terminal connectors can be unplugged from the drive for ease of installation, as shown in *Illustration 5.20*.

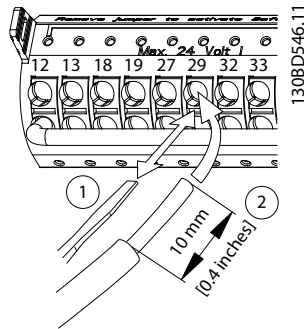


Illustration 5.20 Connecting Control Wires

#### NOTICE

Minimize interference by keeping control wires as short as possible and separate from high-power cables.

1. Open the contact by inserting a small screwdriver into the slot above the contact and push the screwdriver slightly upwards.
2. Insert the bare control wire into the contact.
3. Remove the screwdriver to fasten the control wire into the contact.
4. Ensure that the contact is firmly established and not loose. Loose control wiring can be the source of equipment faults or reduced performance.

See *chapter 9.5 Cable Specifications* for control terminal wiring sizes and *chapter 7 Wiring Configuration Examples* for typical control wiring connections.

### 5.8.4 Enabling Motor Operation (Terminal 27)

A jumper wire is required between terminal 12 (or 13) and terminal 27 for the drive to operate when using factory default programming values.

- Digital input terminal 27 is designed to receive 24 V DC external interlock command.
- When no interlock device is used, wire a jumper between control terminal 12 (recommended) or 13 to terminal 27. This wire provides an internal 24 V signal on terminal 27.
- When the status line at the bottom of the LCP reads *AUTO REMOTE COAST*, the unit is ready to operate, but is missing an input signal on terminal 27.

- When factory-installed optional equipment is wired to terminal 27, do not remove that wiring.

#### NOTICE

The drive cannot operate without a signal on terminal 27, unless terminal 27 is reprogrammed using *parameter 5-12 Terminal 27 Digital Input*.


### 5.8.5 Configuring RS485 Serial Communication

RS485 is a 2-wire bus interface compatible with multi-drop network topology, and it contains the following features:

- Either Danfoss FC or Modbus RTU communication protocol, which are internal to the drive, can be used.
- Functions can be programmed remotely using the protocol software and RS485 connection or in *parameter group 8-\*\* Communications and Options*.
- Selecting a specific communication protocol changes various default parameter settings to match the specifications of the protocol, making more protocol-specific parameters available.
- Option cards for the drive are available to provide more communication protocols. See the option card documentation for installation and operation instructions.
- A switch (BUS TER) is provided on the control card for bus termination resistance. See *Illustration 5.22*.

For basic serial communication set-up, perform the following steps:

1. Connect RS485 serial communication wiring to terminals (+)68 and (-)69.
  - 1a Use shielded serial communication cable (recommended).
  - 1b See *chapter 5.6 Connecting to Ground* for proper grounding.
2. Select the following parameter settings:
  - 2a Protocol type in *parameter 8-30 Protocol*.
  - 2b Drive address in *parameter 8-31 Address*.
  - 2c Baud rate in *parameter 8-32 Baud Rate*.

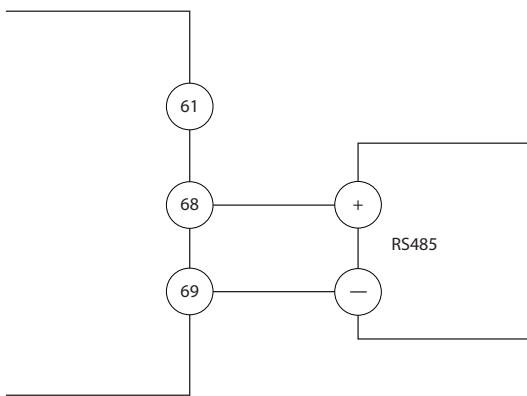

130BB489,10

Illustration 5.21 Serial Communication Wiring Diagram

- Cable size: 1...2x0.75...2.5 mm<sup>2</sup>
- Maximum fuse: 16 A/gG
- NEMA: A600, R300, wire size: 18–14 AWG, 1(2)

### 5.8.9 Wiring the Brake Resistor Temperature Switch

The brake resistor terminal block is located on the power card and allows for the connection of an external brake resistor temperature switch. The switch can be configured as normally closed or normally open. If the input changes, a signal trips the drive and shows *alarm 27, Brake chopper fault* on the LCP display. At the same time, the drive stops braking and the motor coasts.

1. Locate the brake resistor terminal block (terminals 104–106) on the power card. See *Illustration 3.3*.
2. Remove the M3 screws that hold the jumper to the power card.
3. Remove the jumper and wire the brake resistor temperature switch in 1 of the following configurations:
  - 3a **Normally closed.** Connect to terminals 104 and 106.
  - 3b **Normally open.** Connect to terminals 104 and 105.
4. Secure the switch wires with the M3 screws. Torque to 0.5-0.6 Nm (5 in lb).

### 5.8.6 Wiring Safe Torque Off (STO)

The Safe Torque Off (STO) function is a component in a safety control system. STO prevents the unit from generating the voltage required to rotate the motor.

To run STO, more wiring for the drive is required. Refer to *Safe Torque Off Operating Guide* for further information.

### 5.8.7 Wiring the Space Heater

The space heater is an option used to prevent condensation from forming inside the enclosure when the unit is turned off. It is designed to be field wired and controlled by an HVAC management system.

#### Specifications

- Nominal voltage: 100–240
- Wire size: 12–24 AWG

### 5.8.8 Wiring the Auxiliary Contacts to the Disconnect

The disconnect is an option that is installed at the factory. The auxiliary contacts, which are signal accessories used with the disconnect, are not installed at the factory to allow more flexibility during installation. The contacts snap into place without the need for tools.

Contacts must be installed in specific locations on the disconnect depending upon their functions. Refer to the datasheet included in the accessory bag that comes with the drive.

#### Specifications

- $U_i$ /[V]: 690
- $U_{imp}$ /[kV]: 4
- Pollution degree: 3
- $I_{th}$ /[A]: 16

### 5.8.10 Selecting Voltage/Current Input Signal

The analog input terminals 53 and 54 allow setting of input signal to voltage (0–10 V) or current (0/4–20 mA).

#### Default parameter setting:

- Terminal 53: Speed reference signal in open loop (see *parameter 16-61 Terminal 53 Switch Setting*).
- Terminal 54: Feedback signal in closed loop (see *parameter 16-63 Terminal 54 Switch Setting*).

**NOTICE**

Disconnect power to the drive before changing switch positions.

1. Remove the LCP (local control panel).  
See *chapter 6.3 LCP Menu*.
2. Remove any optional equipment covering the switches.
3. Set switches A53 and A54 to select the signal type (U = voltage, I = current).

5

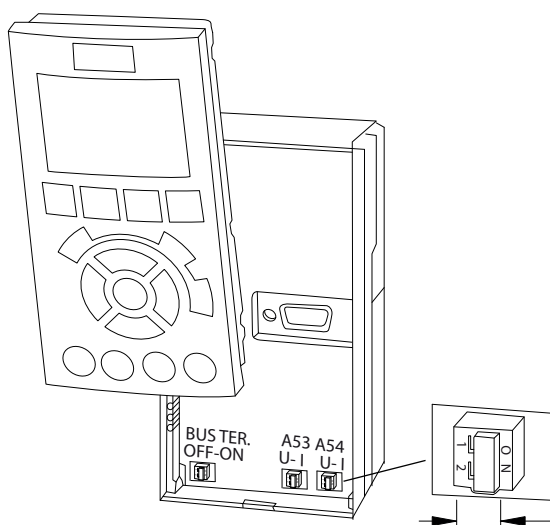


Illustration 5.22 Location of Terminal 53 and 54 Switches

### 5.9 Pre-start Check List

Before completing installation of the unit, inspect the entire installation as detailed in *Table 5.4*. Check and mark the items when completed.

Inspect for	Description	<input type="checkbox"/>
Auxiliary equipment	<ul style="list-style-type: none"> <li>Look for auxiliary equipment, switches, disconnects, or input fuses/circuit breakers that reside on the input power side of the drive or output side to the motor. Ensure that they are ready for full-speed operation.</li> <li>Check function and installation of any sensors used for feedback to the drive.</li> <li>Remove any power factor correction caps on motor.</li> <li>Adjust any power factor correction caps on the mains side and ensure that they are dampened.</li> </ul>	<input type="checkbox"/>
Cable routing	<ul style="list-style-type: none"> <li>Ensure that motor wiring, brake wiring (if equipped), and control wiring are separated or shielded, or in 3 separate metallic conduits for high-frequency interference isolation.</li> </ul>	<input type="checkbox"/>
Control wiring	<ul style="list-style-type: none"> <li>Check for broken or damaged wires and loose connections.</li> <li>Check that control wiring is isolated from high-power wiring for noise immunity.</li> <li>Check the voltage source of the signals, if necessary.</li> <li>The use of shielded cable or twisted pair is recommended. Ensure that the shield is terminated correctly.</li> </ul>	<input type="checkbox"/>
Cooling clearance	<ul style="list-style-type: none"> <li>Measure top clearance for adequate airflow for cooling, see <i>chapter 4.5.1 Installation and Cooling Requirements</i>.</li> </ul>	<input type="checkbox"/>
Ambient conditions	<ul style="list-style-type: none"> <li>Check that requirements for ambient conditions are met. See <i>chapter 9.4 Ambient Conditions</i>.</li> </ul>	<input type="checkbox"/>
Fusing and circuit breakers	<ul style="list-style-type: none"> <li>Check for proper fusing or circuit breakers.</li> <li>Check that all fuses are inserted firmly and are in operational condition and that all circuit breakers (if used) are in the open position.</li> </ul>	<input type="checkbox"/>
Grounding	<ul style="list-style-type: none"> <li>Check for good ground connections that are tight and free of oxidation.</li> <li>Grounding to conduit, or mounting the back panel to a metal surface, is not a suitable grounding.</li> </ul>	<input type="checkbox"/>
Input and output power wiring	<ul style="list-style-type: none"> <li>Check for loose connections.</li> <li>Check that motor and mains are in separate conduit or separated shielded cables.</li> </ul>	<input type="checkbox"/>
Panel interior	<ul style="list-style-type: none"> <li>Inspect that the unit interior is free of dirt, metal chips, moisture, and corrosion.</li> <li>Verify that all installation tools have been removed from unit interior.</li> <li>For E3h and E4h enclosures, ensure that the unit is mounted on an unpainted, metal surface.</li> </ul>	<input type="checkbox"/>
Switches	<ul style="list-style-type: none"> <li>Ensure that all switch and disconnect settings are in the proper positions.</li> </ul>	<input type="checkbox"/>
Vibration	<ul style="list-style-type: none"> <li>Check that the unit is mounted solidly, or that shock mounts are used, if necessary.</li> <li>Check for an unusual amount of vibration.</li> </ul>	<input type="checkbox"/>

Table 5.4 Pre-start Check List

### CAUTION

**POTENTIAL HAZARD IN THE EVENT OF INTERNAL FAILURE**

If the drive is not properly secured with covers, personal injury can occur.

- Before applying power, ensure all safety covers (door and panels) are in place and securely fastened. Refer to *chapter 9.10.1 Fastener Torque Ratings*.

## 6 Commissioning

### 6.1 Safety Instructions

See *chapter 2 Safety* for general safety instructions.

#### **⚠ WARNING**

##### HIGH VOLTAGE

Drives contain high voltage when connected to AC mains input power. Failure to use qualified personnel to install, start up, and maintain the drive can result in death or serious injury.

- Only qualified personnel must install, start up, and maintain the drive.

##### Before applying power:

1. Close cover properly.
2. Check that all cable glands are firmly tightened.
3. Ensure that input power to the unit is OFF and locked out. Do not rely on the drive disconnect switches for input power isolation.
4. Verify that there is no voltage on input terminals L1 (91), L2 (92), and L3 (93), phase-to-phase, and phase-to-ground.
5. Verify that there is no voltage on output terminals 96 (U), 97 (V), and 98 (W), phase-to-phase, and phase-to-ground.
6. Confirm continuity of the motor by measuring ohm values on U–V (96–97), V–W (97–98), and W–U (98–96).
7. Check for proper grounding of the drive and the motor.
8. Inspect the drive for loose connections on the terminals.
9. Confirm that the supply voltage matches the voltage of the drive and the motor.

### 6.2 Applying Power

#### **⚠ WARNING**

##### UNINTENDED START

When the drive is connected to AC mains, DC supply, or load sharing, the motor can start at any time.

Unintended start during programming, service, or repair work can result in death, serious injury, or property damage. The motor can start with an external switch, a fieldbus command, an input reference signal from the LCP or LOP, via remote operation using MCT 10 Set-up Software, or after a cleared fault condition.

To prevent unintended motor start:

- Press [Off/Reset] on the LCP before programming parameters.
- Disconnect the drive from the mains.
- Completely wire and assemble the drive, motor, and any driven equipment before connecting the drive to the AC mains, DC supply, or load sharing.

1. Confirm that the input voltage between phases is balanced within 3%. If not, correct input voltage imbalance before proceeding. Repeat this procedure after the voltage correction.
2. Ensure that optional equipment wiring, if present, matches the installation application.
3. Ensure that all operator devices are in the OFF position.
4. Close all panel doors and securely fasten all covers.
5. Apply power to the unit. DO NOT start the drive now. For units with a disconnect switch, turn to the ON position to apply power to the drive.

#### **NOTICE**

If the status line at the bottom of the LCP reads AUTO REMOTE COASTING or *Alarm 60 External Interlock* is shown, this status indicates that the unit is ready to operate but is missing an input signal on terminal 27. See *chapter 5.8.4 Enabling Motor Operation (Terminal 27)* for details.



### 6.3 LCP Menu

For more detailed instructions regarding the menus or parameters, refer to the *programming guide*.

#### 6.3.1.1 Quick Menu Mode

The LCP provides access to parameters via the Quick Menu. To list the quick menu options, press [Quick Menu].

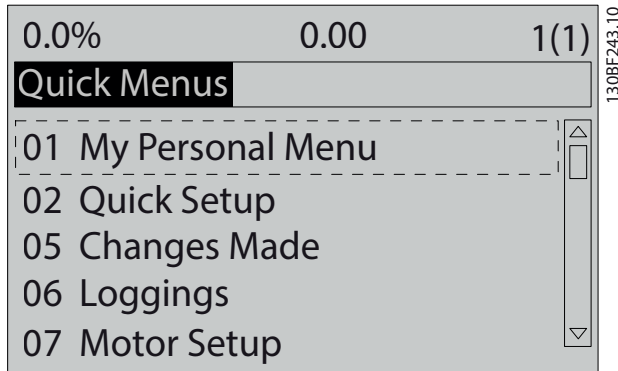


Illustration 6.1 Quick Menu View

#### 6.3.1.2 Q1 My Personal Menu

The Personal Menu is used to determine what is shown in the display area. Refer to *chapter 3.6 Local Control Panel (LCP)*. This menu can also show up to 50 pre-programmed parameters. These 50 parameters are manually entered using *parameter 0-25 My Personal Menu*.

#### 6.3.1.3 Q2 Quick Setup

The parameters found in the *Q2 Quick Setup* contain basic system and motor data that are always necessary for configuring the drive. See *chapter 6.4.2 Entering System Information* for the set-up procedures.

#### 6.3.1.4 Q5 Changes Made

Select *Q5 Changes Made* for information about:

- The 10 most recent changes.
- Changes made from default setting.

#### 6.3.1.5 Q6 Loggings

Use *Q6 Loggings* for fault finding. To get information about the display line readout, select *Loggings*. The information is shown as graphs. Only parameters selected in *parameter 0-20 Display Line 1.1 Small* through *parameter 0-24 Display Line 3 Large* can be viewed. It is possible to store up to 120 samples in the memory for later reference.

Q6 Loggings	
Parameter 0-20 Display Line 1.1 Small	Speed [RPM]
Parameter 0-21 Display Line 1.2 Small	Motor Current
Parameter 0-22 Display Line 1.3 Small	Power [kW]
Parameter 0-23 Display Line 2 Large	Frequency
Parameter 0-24 Display Line 3 Large	Reference %

Table 6.1 Logging Parameter Examples

#### 6.3.1.6 Q7 Motor Setup

The parameters found in the *Q7 Motor Setup* contain basic and advanced motor data that are always necessary for configuring the drive. This option also includes parameters for encoder set-up.

#### 6.3.1.7 Main Menu Mode

The LCP provides access to the *Main Menu* mode. Select the *Main Menu* mode by pressing the [Main Menu] key. The resulting readout appears on the LCP display.

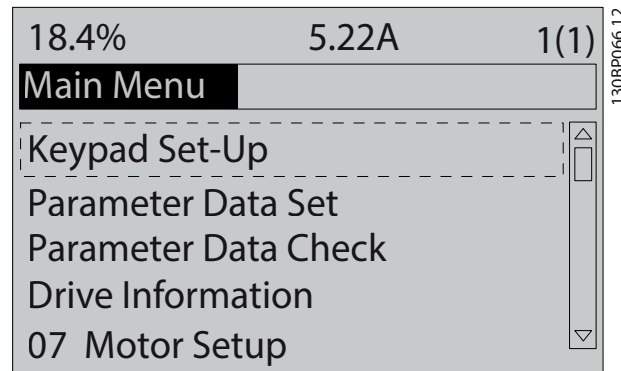


Illustration 6.2 Main Menu View

Lines 2 through 5 on the display show a list of parameter groups that can be selected via the [▲] and [▼] keys.

All parameters can be changed in the main menu. Option cards added to the unit enable extra parameters associated with the option device.

## 6.4 Programming the Drive

For detailed information on the key functions on the local control panel (LCP), see *chapter 3.6 Local Control Panel (LCP)*. For information on parameter settings, see the *programming guide*.

### Parameter overview

Parameter settings control the operation of the drive, and are accessed via the LCP. These settings are assigned a default value at the factory, but can be configured for their unique application. Each parameter has a name and number that remain the same regardless of the programming mode.

In the *Main Menu* mode, the parameters are divided into groups. The first digit of the parameter number (from the left) indicates the parameter group number. The parameter group is then broken down into sub groups, if necessary. For example:

0-** Operation/Display	Parameter group
0-0* Basic Settings	Parameter sub group
Parameter 0-01 Language	Parameter
Parameter 0-02 Motor Speed Unit	Parameter
Parameter 0-03 Regional Settings	Parameter

Table 6.2 Example of Parameter Group Hierarchy

### Moving around parameters

Navigate through the parameters using the following LCP keys:

- Press [▲] [▼] to scroll up or down.
- Press [◀] [▶] to shift a space to the left or right of a decimal point while editing a decimal parameter value.
- Press [OK] to accept the change.
- Press [Cancel] to disregard the change and exit edit mode.
- Press [Back] twice to show the status view.
- Press [Main Menu] once to go back to the main menu.

### 6.4.1 Programming Example for an Open-loop Application

This procedure, which is used to configure a typical open-loop application, programs the drive to receive a 0–10 V DC analog control signal on input terminal 53. The drive responds by providing 20–50 Hz output to the motor proportional to the input signal (0–10 V DC=20–50 Hz).

Press [Quick Menu] and complete the following steps:

1. Select *Q3 Function Setups* and press [OK].
2. Select *Parameter Data Set* and press [OK].

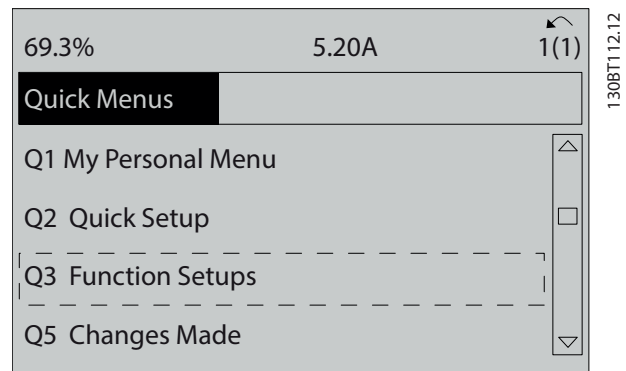


Illustration 6.3 Q3 Function Setups

3. Select *Q3-2 Open Loop Settings* and press [OK].

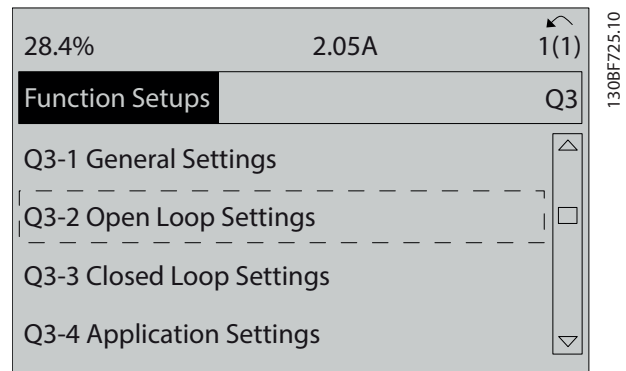


Illustration 6.4 Q3-2 Open Loop Settings

4. Select *Q3-21 Analog Reference* and press [OK].

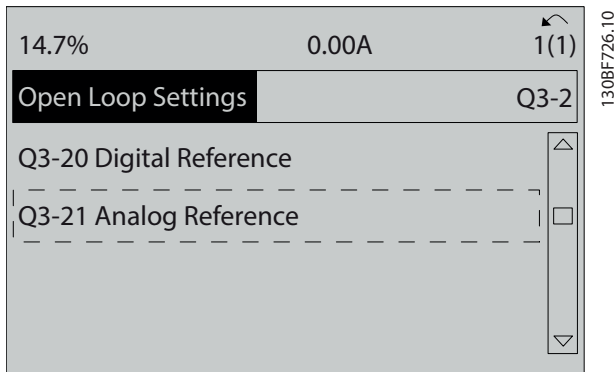


Illustration 6.5 Q3-21 Analog Reference

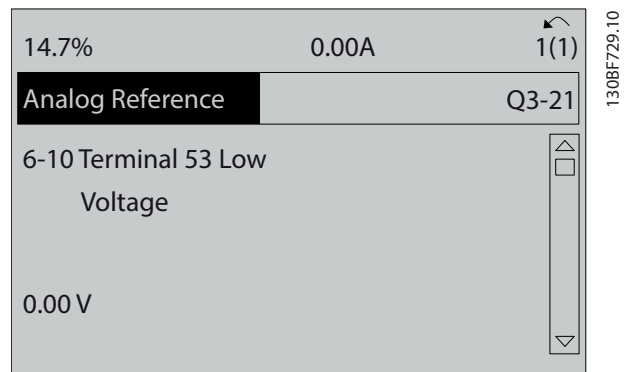


Illustration 6.8 Parameter 6-10 Terminal 53 Low Voltage

5. Select *parameter 3-02 Minimum Reference*. Set the minimum internal drive reference to 0 Hz and press [OK].

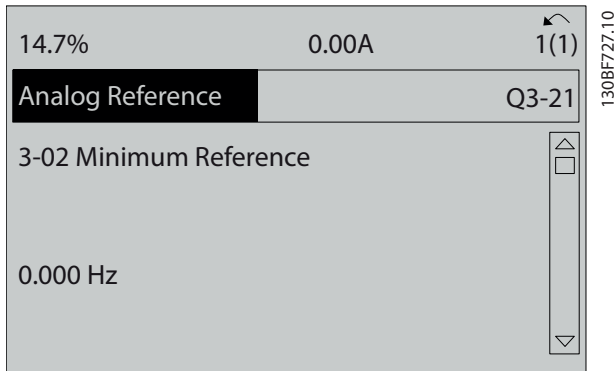


Illustration 6.6 Parameter 3-02 Minimum Reference

8. Select *parameter 6-11 Terminal 53 High Voltage*. Set maximum external voltage reference on terminal 53 at 10 V and press [OK].

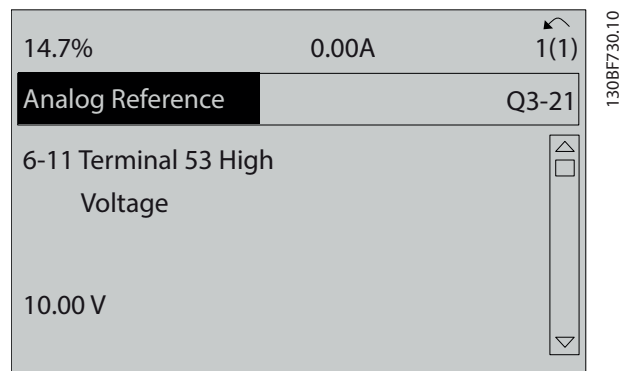


Illustration 6.9 Parameter 6-11 Terminal 53 High Voltage

6. Select *parameter 3-03 Maximum Reference*. Set the maximum internal drive reference to 60 Hz and press [OK].

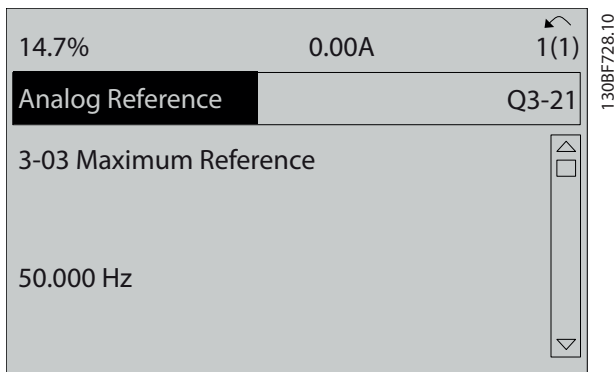


Illustration 6.7 Parameter 3-03 Maximum Reference

9. Select *parameter 6-14 Terminal 53 Low Ref./Feedb. Value*. Set minimum speed reference on terminal 53 at 20 Hz and press [OK].

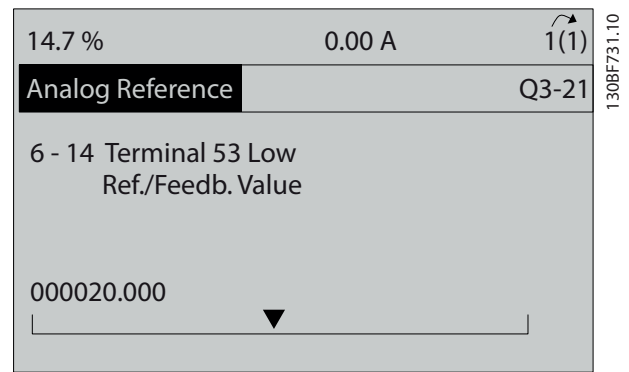


Illustration 6.10 Parameter 6-14 Terminal 53 Low Ref./Feedb. Value

7. Select *parameter 6-10 Terminal 53 Low Voltage*. Set the minimum external voltage reference on terminal 53 at 0 V and press [OK].

10. Select *parameter 6-15 Terminal 53 High Ref./Feedb. Value*. Set maximum speed reference on terminal 53 at 50 Hz and press [OK].

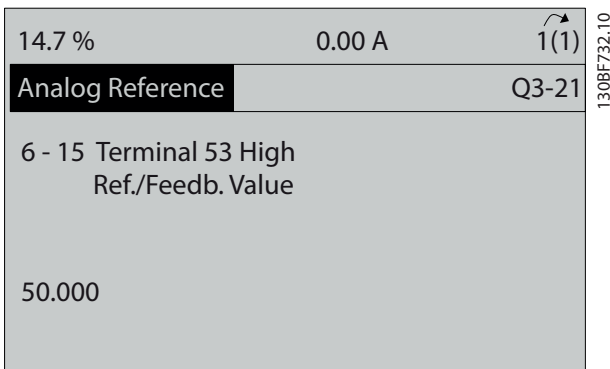


Illustration 6.11 Parameter 6-15 Terminal 53 High Ref./Feedb. Value

6

With an external device providing a 0–10 V control signal connected to drive terminal 53, the system is now ready for operation.

**NOTICE**

In *Illustration 6.11*, the scroll bar on the right of the display is at the bottom. This position indicates the procedure is complete.

*Illustration 6.12* shows the wiring connections used to enable the external device set up.

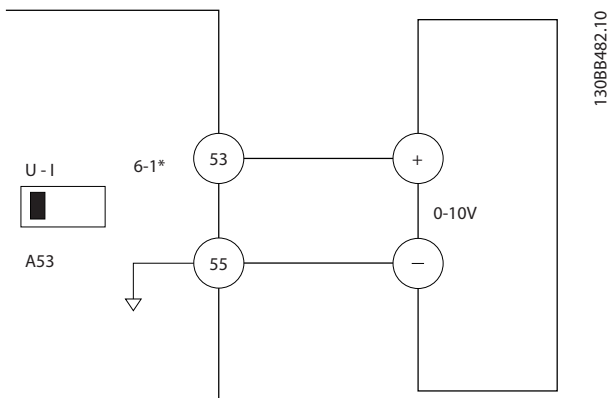


Illustration 6.12 Wiring Example for External Device Providing 0–10 V Control Signal

The following steps are used to enter basic system information into the drive. Recommended parameter settings are intended for start-up and checkout purposes. Application settings vary.

**NOTICE**

Although these steps assume that an asynchronous motor is used, a permanent magnet motor can be used. For more information on specific motor types, see the product-specific *programming guide*.

1. Press [Main Menu] on the LCP.
2. Select 0–\*\* *Operation/Display* and press [OK].
3. Select 0–0\* *Basic Settings* and press [OK].
4. Select parameter 0-03 *Regional Settings* and press [OK].
5. Select [0] *International* or [1] *North America* as appropriate and press [OK]. (This action changes the default settings for some basic parameters).
6. Press [Quick Menus] on the LCP and then select 02 *Quick Setup*.
7. Change the following parameters settings listed in *Table 6.3* if necessary. The motor data is found on the motor nameplate.

Parameter	Default setting
Parameter 0-01 <i>Language</i>	English
Parameter 1-20 <i>Motor Power [kW]</i>	4.00 kW
Parameter 1-22 <i>Motor Voltage</i>	400 V
Parameter 1-23 <i>Motor Frequency</i>	50 Hz
Parameter 1-24 <i>Motor Current</i>	9.00 A
Parameter 1-25 <i>Motor Nominal Speed</i>	1420 RPM
Parameter 5-12 <i>Terminal 27 Digital Input</i>	Coast inverse
Parameter 3-02 <i>Minimum Reference</i>	0.000 RPM
Parameter 3-03 <i>Maximum Reference</i>	1500.000 RPM
Parameter 3-41 <i>Ramp 1 Ramp Up Time</i>	3.00 s
Parameter 3-42 <i>Ramp 1 Ramp Down Time</i>	3.00 s
Parameter 3-13 <i>Reference Site</i>	Linked to Hand/ Auto
Parameter 1-29 <i>Automatic Motor Adaptation (AMA)</i>	Off

Table 6.3 Quick Setup Settings

6.4.2 Entering System Information

**NOTICE**

**SOFTWARE DOWNLOAD**

For commissioning via PC, install MCT 10 Set-up Software. The software is available for download (basic version) or for ordering (advanced version, code number 130B1000). For more information and downloads, see [www.drives.danfoss.com/services/pc-tools](http://www.drives.danfoss.com/services/pc-tools).

**NOTICE**

**MISSING INPUT SIGNAL**

When the LCP shows AUTO REMOTE COASTING or *Alarm 60 External Interlock*, the unit is ready to operate but is missing an input signal. See *chapter 5.8.4 Enabling Motor Operation (Terminal 27)* for details.

### 6.4.3 Configuring Automatic Energy Optimization

Automatic energy optimization (AEO) is a procedure that minimizes voltage to the motor, reducing energy consumption, heat, and noise.

1. Press [Main Menu].
2. Select *1-\*\* Load and Motor* and press [OK].
3. Select *1-0\* General Settings* and press [OK].
4. Select *parameter 1-03 Torque Characteristics* and press [OK].
5. Select either *[2] Auto Energy Optim CT* or *[3] Auto Energy Optim VT* and press [OK].

### 6.4.4 Configuring Automatic Motor Adaptation

Automatic motor adaptation is a procedure that optimizes compatibility between the drive and the motor.

The drive builds a mathematical model of the motor for regulating output motor current. The procedure also tests the input phase balance of electrical power. It compares the motor characteristics with the data entered in *parameters 1-20 to 1-25*.

#### **NOTICE**

If warnings or alarms occur, see *chapter 8.5 List of Warnings and Alarms*. Some motors are unable to run the complete version of the test. In that case, or if an output filter is connected to the motor, select *[2] Enable reduced AMA*.

Run this procedure on a cold motor for best results.

1. Press [Main Menu].
2. Select *1-\*\* Load and Motor* and press [OK].
3. Select *1-2\* Motor Data* and press [OK].
4. Select *parameter 1-29 Automatic Motor Adaptation (AMA)* and press [OK].
5. Select *[1] Enable complete AMA* and press [OK].
6. Press [Hand On] and then [OK].  
The test runs automatically and indicates when it is complete.

### 6.5 Testing Before System Start-up

#### **WARNING**

##### **MOTOR START**

Failure to ensure that the motor, system, and any attached equipment are ready for start can result in personal injury or equipment damage. Before start,

- Ensure that equipment is safe to operate under any condition.
- Ensure that the motor, system, and any attached equipment are ready for start.

#### 6.5.1 Motor Rotation

##### **NOTICE**

If the motor runs in the wrong direction, it can damage equipment. Before running the unit, check the motor rotation by briefly running the motor. The motor runs briefly at either 5 Hz or the minimum frequency set in *parameter 4-12 Motor Speed Low Limit [Hz]*.

1. Press [Hand On].
2. Move the left cursor to the left of the decimal point by using the left arrow key, and enter an RPM that slowly rotates the motor.
3. Press [OK].
4. If the motor rotation is wrong, set *parameter 1-06 Clockwise Direction* to *[1] Inverse*.

#### 6.5.2 Encoder Rotation

If encoder feedback is used, perform the following steps:

1. Select *[0] Open Loop* in *parameter 1-00 Configuration Mode*.
2. Select *[1] 24 V encoder* in *parameter 7-00 Speed PID Feedback Source*.
3. Press [Hand On].
4. Press [►] for positive speed reference (*parameter 1-06 Clockwise Direction* at *[0] Normal*).
5. In *parameter 16-57 Feedback [RPM]*, check that the feedback is positive.

For more information on the encoder option, refer to the option manual.

**NOTICE****NEGATIVE FEEDBACK**

If the feedback is negative, the encoder connection is wrong. Use either *parameter 5-71 Term 32/33 Encoder Direction* or *parameter 17-60 Feedback Direction* to inverse the direction, or reverse the encoder cables. *Parameter 17-60 Feedback Direction* is only available with the VLT® Encoder Input MCB 102 option.

## 6.6 System Start-up

**⚠ WARNING****MOTOR START**

Failure to ensure that the motor, system, and any attached equipment are ready for start can result in personal injury or equipment damage. Before start,

- Ensure that equipment is safe to operate under any condition.
- Ensure that the motor, system, and any attached equipment are ready for start.

The procedure in this section requires user-wiring and application programming to be completed. The following procedure is recommended after application set-up is completed.

1. Press [Auto On].
2. Apply an external run command. Examples of external run commands are a switch, button, or programmable logic controller (PLC).
3. Adjust the speed reference throughout the speed range.
4. Ensure that the system is working as intended by checking sound and vibration level of the motor.
5. Remove the external run command.

If warnings or alarms occur, see *chapter 8.5 List of Warnings and Alarms*.

## 6.7 Parameter Settings

**NOTICE****REGIONAL SETTINGS**

Some parameters have different default settings for international or North America. For a list of the different default values, see *chapter 10.2 International/North American Default Parameter Settings*.

Establishing the correct programming for applications requires setting several parameter functions. Details for parameters are provided in the *programming guide*.

Parameter settings are stored internally in the drive, allowing the following advantages:

- Parameter settings can be uploaded into the LCP memory and stored as a back-up.
- Multiple units can be programmed quickly by connecting the LCP to the unit and downloading the stored parameter settings.
- Settings that are stored in the LCP are not changed when restoring factory default settings.
- Changes made to default settings as well as any programming entered into parameters are stored and available for viewing in the quick menu. See *chapter 6.3 LCP Menu*.

## 6.7.1 Uploading and Downloading Parameter Settings

The drive operates using parameters stored on the control card, which is located within the drive. The upload and download functions move the parameters between the control card and the LCP.

1. Press [Off].
2. Go to *parameter 0-50 LCP Copy* and press [OK].
3. Select 1 of the following:
  - 3a To upload data from the control card to the LCP, select [1] All to LCP.
  - 3b To download data from the LCP to the control card, select [2] All from LCP.
4. Press [OK]. A progress bar shows the uploading or downloading process.
5. Press [Hand On] or [Auto On].

## 6.7.2 Restoring Factory Default Settings

**NOTICE****LOSS OF DATA**

Loss of programming, motor data, localization, and monitoring records occurs when restoring default settings. To create a back-up, upload data to the LCP before initialization. Refer to *chapter 6.7.1 Uploading and Downloading Parameter Settings*.

Restore the default parameter settings by initializing the unit. Initialization is carried out through *parameter 14-22 Operation Mode* or manually.

*Parameter 14-22 Operation Mode* does not reset settings such as the following:

- Running hours
- Serial communication options
- Personal menu settings
- Fault log, alarm log, and other monitoring functions

#### Recommended initialization

1. Press [Main Menu] twice to access parameters.
2. Go to *parameter 14-22 Operation Mode* and press [OK].
3. Scroll to *Initialization* and press [OK].
4. Remove power to the unit and wait for the display to turn off.
5. Apply power to the unit. Default parameter settings are restored during start-up. Start-up takes slightly longer than normal.
6. After *alarm 80, Drive initialized to default value* appears, press [Reset].

#### Manual initialization

Manual initialization resets all factory settings except for the following:

- *Parameter 15-00 Operating hours*
- *Parameter 15-03 Power Up's*
- *Parameter 15-04 Over Temp's*
- *Parameter 15-05 Over Volt's*

To perform manual initialization:

1. Remove power to the unit and wait for the display to turn off.
2. Press and hold [Status], [Main Menu], and [OK] simultaneously while applying power to the unit (approximately 5 s or until an audible click sounds and the fan starts). Start-up takes slightly longer than normal.

# 7 Wiring Configuration Examples

The examples in this section are intended as a quick reference for common applications.

- Parameter settings are the regional default values unless otherwise indicated (selected in *parameter 0-03 Regional Settings*).
- Parameters associated with the terminals and their settings are shown next to the drawings.
- Required switch settings for analog terminals A53 or A54 are also shown.

## NOTICE

When not using the optional STO feature, a jumper wire is required between terminal 12 (or 13) and terminal 37 for the drive to operate with factory default programming values.

7

### 7.1 Wiring for Open-loop Speed Control

		Parameters	
FC		Function	Setting
+24 V	12	<i>Parameter 6-10 Terminal 53 Low Voltage</i>	0.07 V*
+24 V	13		
D IN	18	<i>Parameter 6-11 Terminal 53 High Voltage</i>	10 V*
D IN	19		
COM	20	<i>Parameter 6-14 Terminal 53 Low Ref./Feedb. Value</i>	0 Hz
D IN	27		
D IN	29	<i>Parameter 6-15 Terminal 53 High Ref./Feedb. Value</i>	50 Hz
D IN	32		
D IN	33	* = Default value	
D IN	37	<b>Notes/comments:</b> Assumptions are 0 V DC input = 0 Hz speed and 10 V DC input = 50 Hz speed.	

Table 7.1 Analog Speed Reference (Voltage)

		Parameters	
FC		Function	Setting
+24 V	12	<i>Parameter 6-12 Terminal 53 Low Current</i>	4 mA*
+24 V	13		
D IN	18	<i>Parameter 6-13 Terminal 53 High Current</i>	20 mA*
D IN	19		
COM	20	<i>Parameter 6-14 Terminal 53 Low Ref./Feedb. Value</i>	0 Hz
D IN	27		
D IN	29	<i>Parameter 6-15 Terminal 53 High Ref./Feedb. Value</i>	50 Hz
D IN	32		
D IN	33	* = Default value	
D IN	37	<b>Notes/comments:</b> Assumptions are 4 mA input = 0 Hz speed and 20 mA input = 50 Hz speed.	

Table 7.2 Analog Speed Reference (Current)

		Parameters	
FC		Function	Setting
+24 V	12	<i>Parameter 6-12 Terminal 53 Low Current</i>	4 mA*
+24 V	13		
D IN	18	<i>Parameter 6-13 Terminal 53 High Current</i>	20 mA*
D IN	19		
COM	20	<i>Parameter 6-14 Terminal 53 Low Ref./Feedb. Value</i>	0 Hz
D IN	27		
D IN	29	<i>Parameter 6-15 Terminal 53 High Ref./Feedb. Value</i>	50 Hz
D IN	32		
D IN	33	* = Default value	
D IN	37	<b>Notes/comments:</b> Assumptions are 0 V DC input = 0 RPM speed and 10 V DC input = 1500 RPM speed.	

Table 7.3 Speed Reference (Using a Manual Potentiometer)



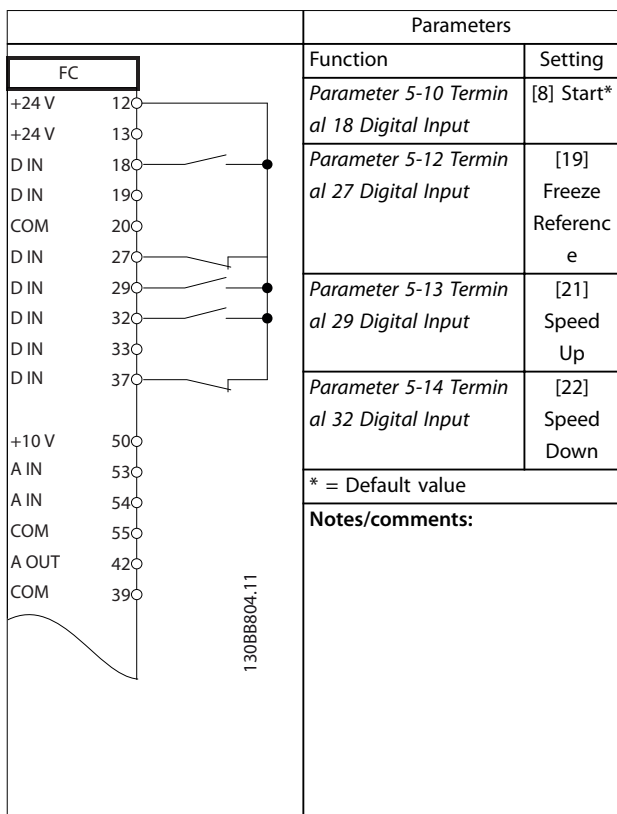


Table 7.4 Speed Up/Speed Down

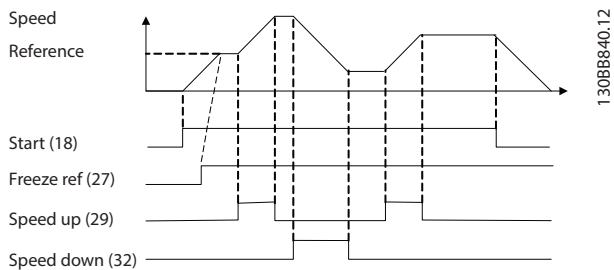


Illustration 7.1 Speed Up/Speed Down

## 7.2 Wiring for Start/Stop

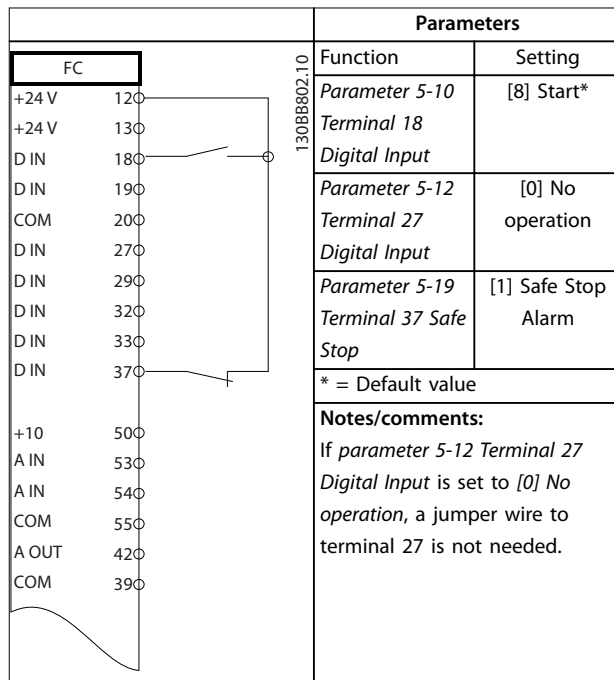


Table 7.5 Start/Stop Command with Safe Torque Off Option

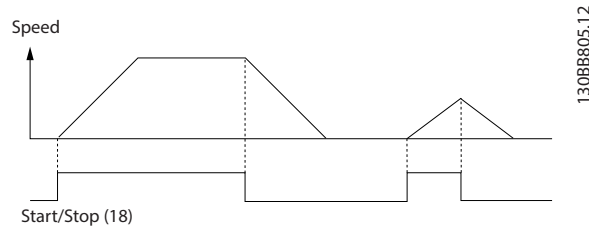


Illustration 7.2 Start/Stop Command with Safe Torque Off

7

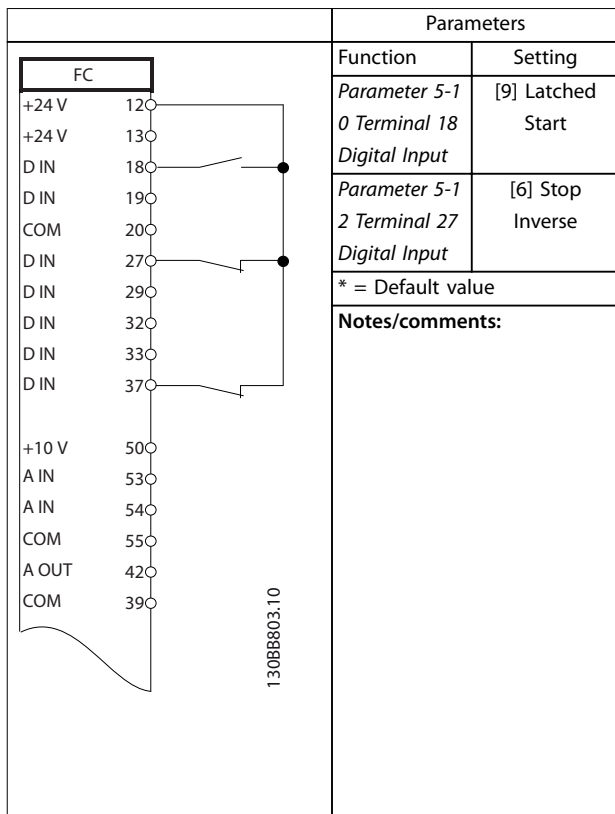


Table 7.6 Pulse Start/Stop

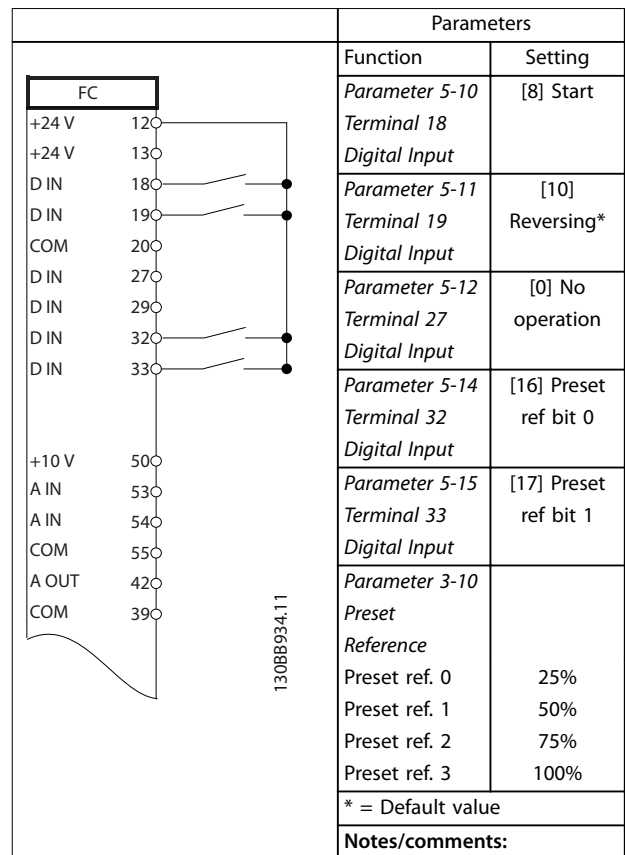


Table 7.7 Start/Stop with Reversing and 4 Preset Speeds

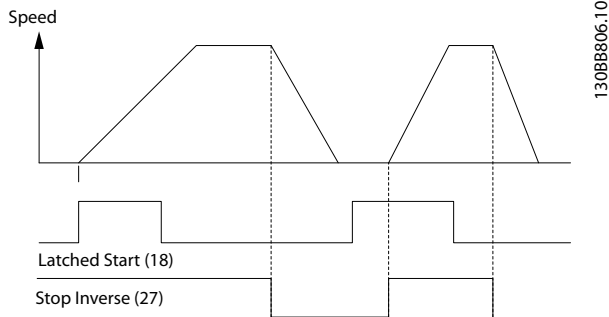


Illustration 7.3 Latched Start/Stop Inverse

### 7.3 Wiring for External Alarm Reset

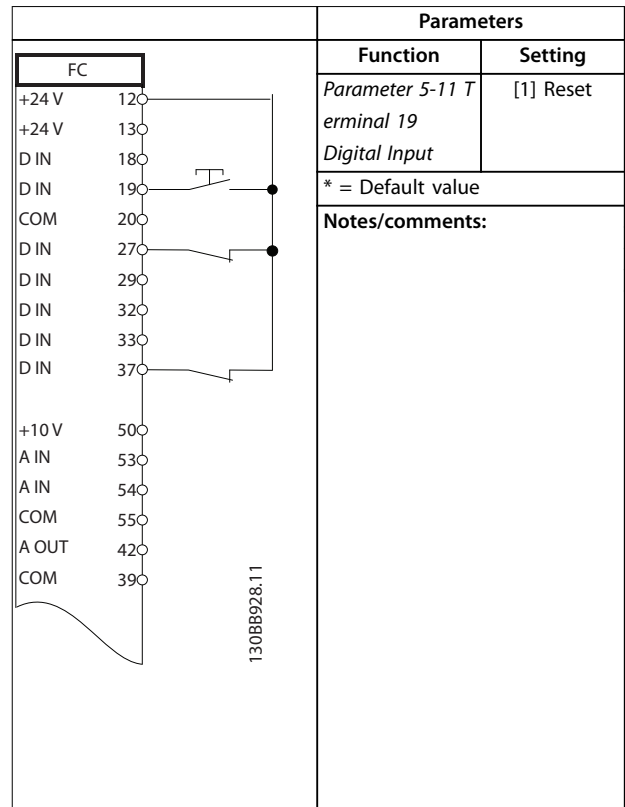


Table 7.8 External Alarm Reset

7.4 Wiring for a Motor Thermistor

**⚠ WARNING**

**THERMISTOR INSULATION**

Risk of personal injury or equipment damage.

- To meet PELV insulation requirements, use only thermistors with reinforced or double insulation.

		Parameters																																										
		Function	Setting																																									
<table border="1"> <thead> <tr> <th colspan="2">VLT</th> </tr> </thead> <tbody> <tr><td>+24 V</td><td>12</td></tr> <tr><td>+24 V</td><td>13</td></tr> <tr><td>D IN</td><td>18</td></tr> <tr><td>D IN</td><td>19</td></tr> <tr><td>COM</td><td>20</td></tr> <tr><td>D IN</td><td>27</td></tr> <tr><td>D IN</td><td>29</td></tr> <tr><td>D IN</td><td>32</td></tr> <tr><td>D IN</td><td>33</td></tr> <tr><td>D IN</td><td>37</td></tr> <tr><td>+10 V</td><td>50</td></tr> <tr><td>A IN</td><td>53</td></tr> <tr><td>A IN</td><td>54</td></tr> <tr><td>COM</td><td>55</td></tr> <tr><td>A OUT</td><td>42</td></tr> <tr><td>COM</td><td>39</td></tr> </tbody> </table> <p style="text-align: right;">1308B686.12</p>		VLT		+24 V	12	+24 V	13	D IN	18	D IN	19	COM	20	D IN	27	D IN	29	D IN	32	D IN	33	D IN	37	+10 V	50	A IN	53	A IN	54	COM	55	A OUT	42	COM	39	<table border="1"> <tbody> <tr> <td><i>Parameter 1-90 Motor Thermal Protection</i></td> <td>[2] Thermistor trip</td> </tr> <tr> <td><i>Parameter 1-93 Thermistor Resource</i></td> <td>[1] Analog input 53</td> </tr> <tr> <td colspan="2">* = Default value</td> </tr> <tr> <td colspan="2"><b>Notes/comments:</b> If only a warning is desired, set <i>parameter 1-90 Motor Thermal Protection</i> to [1] <i>Thermistor warning</i>.</td> </tr> </tbody> </table>	<i>Parameter 1-90 Motor Thermal Protection</i>	[2] Thermistor trip	<i>Parameter 1-93 Thermistor Resource</i>	[1] Analog input 53	* = Default value		<b>Notes/comments:</b> If only a warning is desired, set <i>parameter 1-90 Motor Thermal Protection</i> to [1] <i>Thermistor warning</i> .	
VLT																																												
+24 V	12																																											
+24 V	13																																											
D IN	18																																											
D IN	19																																											
COM	20																																											
D IN	27																																											
D IN	29																																											
D IN	32																																											
D IN	33																																											
D IN	37																																											
+10 V	50																																											
A IN	53																																											
A IN	54																																											
COM	55																																											
A OUT	42																																											
COM	39																																											
<i>Parameter 1-90 Motor Thermal Protection</i>	[2] Thermistor trip																																											
<i>Parameter 1-93 Thermistor Resource</i>	[1] Analog input 53																																											
* = Default value																																												
<b>Notes/comments:</b> If only a warning is desired, set <i>parameter 1-90 Motor Thermal Protection</i> to [1] <i>Thermistor warning</i> .																																												

Table 7.9 Motor Thermistor

7.5 Wiring for Regeneration

		Parameters																																								
		Function	Setting																																							
<table border="1"> <thead> <tr> <th colspan="2">FC</th> </tr> </thead> <tbody> <tr><td>+24 V</td><td>12</td></tr> <tr><td>+24 V</td><td>13</td></tr> <tr><td>D IN</td><td>18</td></tr> <tr><td>D IN</td><td>19</td></tr> <tr><td>COM</td><td>20</td></tr> <tr><td>D IN</td><td>27</td></tr> <tr><td>D IN</td><td>29</td></tr> <tr><td>D IN</td><td>32</td></tr> <tr><td>D IN</td><td>33</td></tr> <tr><td>D IN</td><td>37</td></tr> <tr><td>+10 V</td><td>50</td></tr> <tr><td>A IN</td><td>53</td></tr> <tr><td>A IN</td><td>54</td></tr> <tr><td>COM</td><td>55</td></tr> <tr><td>A OUT</td><td>42</td></tr> <tr><td>COM</td><td>39</td></tr> </tbody> </table> <p style="text-align: right;">1308D667.11</p>		FC		+24 V	12	+24 V	13	D IN	18	D IN	19	COM	20	D IN	27	D IN	29	D IN	32	D IN	33	D IN	37	+10 V	50	A IN	53	A IN	54	COM	55	A OUT	42	COM	39	<table border="1"> <tbody> <tr> <td><i>Parameter 1-90 Motor Thermal Protection</i></td> <td>100%*</td> </tr> <tr> <td colspan="2">* = Default value</td> </tr> <tr> <td colspan="2"><b>Notes/comments:</b> To disable regeneration, decrease <i>parameter 1-90 Motor Thermal Protection</i> to 0%. If the application uses motor brake power and regeneration is not enabled, the unit trips.</td> </tr> </tbody> </table>	<i>Parameter 1-90 Motor Thermal Protection</i>	100%*	* = Default value		<b>Notes/comments:</b> To disable regeneration, decrease <i>parameter 1-90 Motor Thermal Protection</i> to 0%. If the application uses motor brake power and regeneration is not enabled, the unit trips.	
FC																																										
+24 V	12																																									
+24 V	13																																									
D IN	18																																									
D IN	19																																									
COM	20																																									
D IN	27																																									
D IN	29																																									
D IN	32																																									
D IN	33																																									
D IN	37																																									
+10 V	50																																									
A IN	53																																									
A IN	54																																									
COM	55																																									
A OUT	42																																									
COM	39																																									
<i>Parameter 1-90 Motor Thermal Protection</i>	100%*																																									
* = Default value																																										
<b>Notes/comments:</b> To disable regeneration, decrease <i>parameter 1-90 Motor Thermal Protection</i> to 0%. If the application uses motor brake power and regeneration is not enabled, the unit trips.																																										

Table 7.10 Regeneration

## 8 Maintenance, Diagnostics, and Troubleshooting

### 8.1 Maintenance and Service

This chapter includes:

- Maintenance and service guidelines.
- Status messages.
- Warnings and alarms.
- Basic troubleshooting.

Under normal operating conditions and load profiles, the drive is maintenance-free throughout its designed lifetime. To prevent breakdown, danger, and damage, examine the drive at regular intervals depending on the operating conditions. Replace worn or damaged parts with original spare parts or standard parts. For service and support, refer to [www.danfoss.com/contact/sales\\_and\\_services/](http://www.danfoss.com/contact/sales_and_services/).

## 8

### **⚠ WARNING**

#### UNINTENDED START

When the drive is connected to AC mains, DC supply, or load sharing, the motor can start at any time. Unintended start during programming, service, or repair work can result in death, serious injury, or property damage. The motor can start with an external switch, a fieldbus command, an input reference signal from the LCP or LOP, via remote operation using MCT 10 Set-up Software, or after a cleared fault condition.

To prevent unintended motor start:

- Press [Off/Reset] on the LCP before programming parameters.
- Disconnect the drive from the mains.
- Completely wire and assemble the drive, motor, and any driven equipment before connecting the drive to AC mains, DC supply, or load sharing.

### 8.2 Heat Sink Access Panel

The drive can be ordered with an optional access panel in the back of the unit. This access panel provides access to the heat sink and allows the heat sink to be cleaned of any dust buildup.

#### 8.2.1 Removing the Heat Sink Access Panel

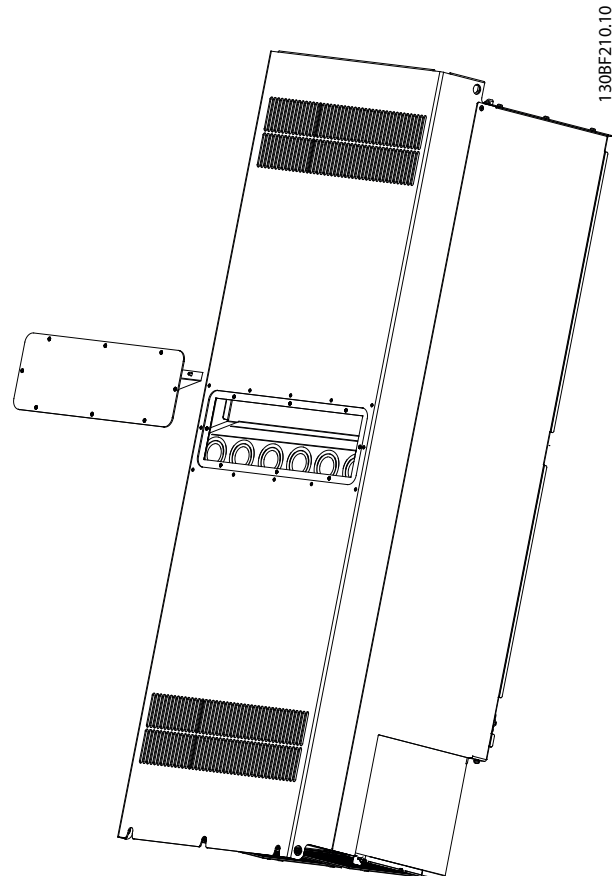


Illustration 8.1 Heat Sink Access Panel Removed from the Rear of the Drive

1. Remove power from the drive and wait 40 minutes for the capacitors to discharge completely. Refer to *chapter 2 Safety*.
2. Position the drive so that the back of the drive is fully accessible.
3. Remove the 8 M5 fasteners securing the access panel to the back of the enclosure using a 3 mm hex bit.
4. Inspect the leading edge of the heat sink for damage or debris.
5. Remove material or debris with a vacuum.
6. Reinstall the panel and secure it to the back of the enclosure with the 8 fasteners. Tighten the fasteners according to *chapter 9.10.1 Fastener Torque Ratings*.


**NOTICE**

**DAMAGE TO HEAT SINK**

Using fasteners that are longer than those originally supplied with the heat sink panel will damage the heat sink cooling fins.

**8.3 Status Messages**

When the drive is in status mode, status messages automatically appear in the bottom line of the LCP display. Refer to *Illustration 8.2*. Status messages are defined in *Table 8.1 – Table 8.3*.

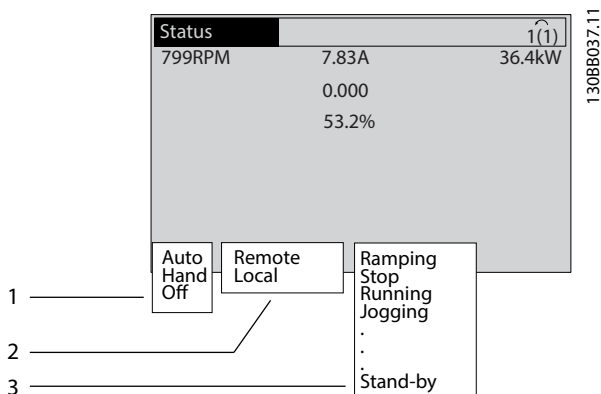

1	Where the stop/start command originates. Refer to <i>Table 8.1</i> .
2	Where the speed control originates. Refer to <i>Table 8.2</i> .
3	Provides the drive status. Refer to <i>Table 8.3</i> .

Illustration 8.2 Status Display

**NOTICE**

In auto/remote mode, the drive requires external commands to execute functions.

*Table 8.1 to Table 8.3* define the meaning of the shown status messages.

Off	The drive does not react to any control signal until [Auto On] or [Hand On] is pressed.
Auto	The start/stop commands are sent via the control terminals and/or the serial communication.
Hand	The navigation keys on the LCP can be used to control the drive. Stop commands, reset, reversing, DC brake, and other signals applied to the control terminals override local control.

Table 8.1 Operating Mode

Remote	The speed reference is given from <ul style="list-style-type: none"> <li>external signals.</li> <li>serial communication.</li> <li>internal preset references.</li> </ul>
Local	The drive uses reference values from the LCP.

Table 8.2 Reference Site

AC brake	AC brake was selected in <i>parameter 2-10 Brake Function</i> . The AC brake overmagnetizes the motor to achieve a controlled slow down.
AMA finish OK	Automatic motor adaptation (AMA) was carried out successfully.
AMA ready	AMA is ready to start. To start, press [Hand On].
AMA running	AMA process is in progress.
Braking	The brake chopper is in operation. The brake resistor absorbs the generative energy.
Braking max.	The brake chopper is in operation. The power limit for the brake resistor defined in <i>parameter 2-12 Brake Power Limit (kW)</i> has been reached.
Coast	<ul style="list-style-type: none"> <li>[2] <i>Coast inverse</i> was selected as a function for a digital input (<i>parameter group 5-1* Digital Inputs</i>). The corresponding terminal is not connected.</li> <li>Coast activated by serial communication.</li> </ul>
Ctrl. ramp-down	<p>[1] <i>Ctrl. ramp-down</i> was selected in <i>parameter 14-10 Mains Failure</i>.</p> <ul style="list-style-type: none"> <li>The mains voltage is below the value set in <i>parameter 14-11 Mains Fault Voltage Level</i> at mains fault.</li> <li>The drive ramps down the motor using a controlled ramp down.</li> </ul>
Current high	The drive output current is above the limit set in <i>parameter 4-51 Warning Current High</i> .
Current low	The drive output current is below the limit set in <i>parameter 4-52 Warning Speed Low</i> .
DC hold	DC hold is selected in <i>parameter 1-80 Function at Stop</i> and a stop command is active. The motor is held by a DC current set in <i>parameter 2-00 DC Hold Current</i> .

DC stop	<p>The motor is held with a DC current (<i>parameter 2-01 DC Brake Current</i>) for a specified time (<i>parameter 2-02 DC Braking Time</i>).</p> <ul style="list-style-type: none"> <li>DC brake is activated in <i>parameter 2-03 DC Brake Cut In Speed [RPM]</i> and a stop command is active.</li> <li>DC brake (inverse) is selected as a function for a digital input (<i>parameter group 5-1* Digital Inputs</i>). The corresponding terminal is not active.</li> <li>The DC brake is activated via serial communication.</li> </ul>
Feedback high	The sum of all active feedbacks is above the feedback limit set in <i>parameter 4-57 Warning Feedback High</i> .
Feedback low	The sum of all active feedbacks is below the feedback limit set in <i>parameter 4-56 Warning Feedback Low</i> .
Freeze output	<p>The remote reference is active, which holds the present speed.</p> <ul style="list-style-type: none"> <li>[20] Freeze Output was selected as a function for a digital input (<i>parameter group 5-1* Digital Inputs</i>). The corresponding terminal is active. Speed control is only possible via the terminal functions speed up and speed down.</li> <li>Hold ramp is activated via serial communication.</li> </ul>
Freeze output request	A freeze output command has been given, but the motor remains stopped until a run permissive signal is received.
Freeze ref.	[19] Freeze Reference was selected as a function for a digital input ( <i>parameter group 5-1* Digital Inputs</i> ). The corresponding terminal is active. The drive saves the actual reference. Changing the reference is now only possible via terminal functions speed up and speed down.
Jog request	A jog command has been given, but the motor is stopped until a run permissive signal is received via a digital input.
Jogging	<p>The motor is running as programmed in <i>parameter 3-19 Jog Speed [RPM]</i>.</p> <ul style="list-style-type: none"> <li>[14] Jog was selected as function for a digital input (<i>parameter group 5-1* Digital Inputs</i>). The corresponding terminal (for example, terminal 29) is active.</li> <li>The jog function is activated via the serial communication.</li> <li>The jog function was selected as a reaction for a monitoring function (for example, No signal). The monitoring function is active.</li> </ul>

Motor check	In <i>parameter 1-80 Function at Stop, [2] Motor Check</i> was selected. A stop command is active. To ensure that a motor is connected to the drive, a permanent test current is applied to the motor.
OVC control	Overvoltage control was activated in <i>parameter 2-17 Over-voltage Control, [2] Enabled</i> . The connected motor is supplying the drive with generative energy. The overvoltage control adjusts the V/Hz ratio to run the motor in controlled mode and to prevent the drive from tripping.
Power unit off	(For drives with a 24 V external supply installed only.) Mains supply to the drive is removed, but the control card is supplied by the external 24 V.
Protection md	<p>Protection mode is active. The unit has detected a critical status (an overcurrent or overvoltage).</p> <ul style="list-style-type: none"> <li>To avoid tripping, the switching frequency is reduced to 1500 kHz if <i>parameter 14-55 Output Filter</i> is set to [2] Sine-Wave Filter Fixed. Otherwise, the switching frequency is reduced to 1000 Hz.</li> <li>If possible, protection mode ends after approximately 10 s.</li> <li>Protection mode can be restricted in <i>parameter 14-26 Trip Delay at Inverter Fault</i>.</li> </ul>
QStop	<p>The motor is decelerating using <i>parameter 3-81 Quick Stop Ramp Time</i>.</p> <ul style="list-style-type: none"> <li>[4] Quick stop inverse was selected as a function for a digital input (<i>parameter group 5-1* Digital Inputs</i>). The corresponding terminal is not active.</li> <li>The quick stop function was activated via serial communication.</li> </ul>
Ramping	The motor is accelerating/decelerating using the active ramp up/down. The reference, a limit value, or a standstill is not yet reached.
Ref. high	The sum of all active references is above the reference limit set in <i>parameter 4-55 Warning Reference High</i> .
Ref. low	The sum of all active references is below the reference limit set in <i>parameter 4-54 Warning Reference Low</i> .
Run on ref.	The drive is running in the reference range. The feedback value matches the setpoint value.
Run request	A start command has been given, but the motor is stopped until a run permissive signal is received via digital input.
Running	The drive is driving the motor.

Sleep mode	The energy saving function is enabled. This function being enabled means that now the motor has stopped, but that it restarts automatically when required.
Speed high	The motor speed is above the value set in <i>parameter 4-53 Warning Speed High</i> .
Speed low	The motor speed is below the value set in <i>parameter 4-52 Warning Speed Low</i> .
Standby	In auto-on mode, the drive starts the motor with a start signal from a digital input or serial communication.
Start delay	In <i>parameter 1-71 Start Delay</i> , a delay starting time was set. A start command is activated and the motor starts after the start delay time expires.
Start fwd/rev	[12] <i>Enable Start Forward</i> and [13] <i>Enable Start Reverse</i> were selected as functions for 2 different digital inputs ( <i>parameter group 5-1* Digital Inputs</i> ). The motor starts in forward or reverse depending on which corresponding terminal is activated.
Stop	The drive has received a stop command from 1 of the following: <ul style="list-style-type: none"> <li>• LCP</li> <li>• Digital input</li> <li>• Serial communication</li> </ul>
Trip	An alarm occurred and the motor is stopped. Once the cause of the alarm is cleared, reset the drive using 1 of the following: <ul style="list-style-type: none"> <li>• Pressing [Reset].</li> <li>• Remotely by control terminals.</li> <li>• Via serial communication.</li> </ul> Pressing [Reset] or remotely by control terminals or via serial communication.
Trip lock	An alarm occurred and the motor is stopped. Once the cause of the alarm is cleared, cycle power to the drive. Reset the drive manually by 1 of the following: <ul style="list-style-type: none"> <li>• Pressing [Reset].</li> <li>• Remotely by control terminals.</li> <li>• Via serial communication.</li> </ul>

Table 8.3 Operation Status

### NOTICE

In auto/remote mode, the drive requires external commands to execute functions.

## 8.4 Warning and Alarm Types

Warning/ alarm type	Description
Warning	A warning indicates an abnormal operating condition that leads to an alarm. A warning stops when the abnormal condition is removed.
Alarm	An alarm indicates a fault that requires immediate attention. The fault always triggers a trip or trip lock. Reset the drive after an alarm. Reset the drive in any of 4 ways: <ul style="list-style-type: none"> <li>• Press [Reset]/[Off/Reset].</li> <li>• Digital reset input command.</li> <li>• Serial communication reset input command.</li> <li>• Auto reset.</li> </ul>

### Trip

When tripping, the drive suspends operation to prevent damage to the drive and other equipment. When a trip occurs, the motor coasts to a stop. The drive logic continues to operate and monitor the drive status. After the fault condition is remedied, the drive is ready for a reset.

### Trip lock

When trip locking, the drive suspends operation to prevent damage to the drive and other equipment. When a trip lock occurs, the motor coasts to a stop. The drive logic continues to operate and monitor the drive status. The drive starts a trip lock only when serious faults occur that can damage the drive or other equipment. After the faults are fixed, cycle the input power before resetting the drive.

### Warning and alarm displays

- A warning is shown in the LCP along with the warning number.
- An alarm flashes along with the alarm number.


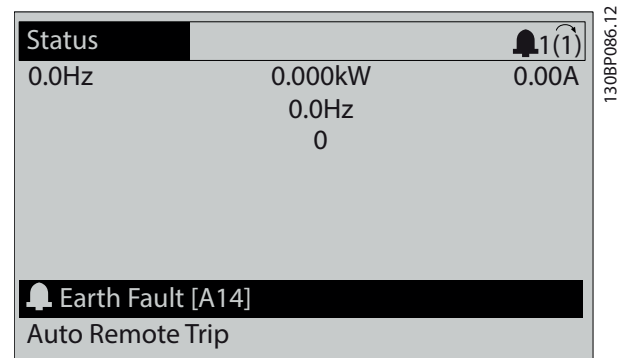


Illustration 8.3 Alarm Example

In addition to the text and alarm code in the LCP, there are 3 status indicator lights.

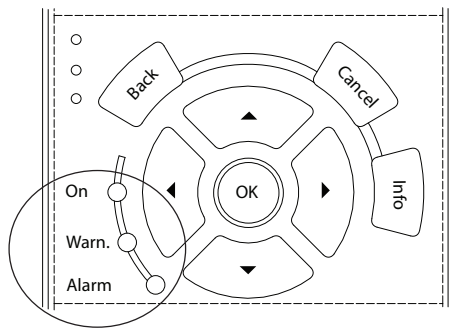

	Warning indicator light	Alarm indicator light
Warning	On	Off
Alarm	Off	On (flashing)
Trip lock	On	On (flashing)

Illustration 8.4 Status Indicator Lights

8

## 8.5 List of Warnings and Alarms

The following warning and alarm information defines each warning or alarm condition, provides the probable cause for the condition, and details a remedy or troubleshooting procedure.

### WARNING 1, 10 Volts low

The control card voltage is less than 10 V from terminal 50. Remove some of the load from terminal 50, as the 10 V supply is overloaded. Maximum 15 mA or minimum 590 Ω.

A short circuit in a connected potentiometer or incorrect wiring of the potentiometer can cause this condition.

#### Troubleshooting

- Remove the wiring from terminal 50. If the warning clears, the problem is with the wiring. If the warning does not clear, replace the control card.

### WARNING/ALARM 2, Live zero error

This warning or alarm only appears if programmed in *parameter 6-01 Live Zero Timeout Function*. The signal on 1 of the analog inputs is less than 50% of the minimum value programmed for that input. Broken wiring or a faulty device sending the signal can cause this condition.

#### Troubleshooting

- Check connections on all analog mains terminals.
  - Control card terminals 53 and 54 for signals, terminal 55 common.
  - VLT® General Purpose I/O MCB 101 terminals 11 and 12 for signals, terminal 10 common.
  - VLT® Analog I/O Option MCB 109 terminals 1, 3, and 5 for signals, terminals 2, 4, and 6 common.
- Check that the drive programming and switch settings match the analog signal type.

- Perform an input terminal signal test.

### WARNING/ALARM 3, No motor

No motor has been connected to the output of the drive.

### WARNING/ALARM 4, Mains phase loss

A phase is missing on the supply side, or the mains voltage imbalance is too high. This message also appears for a fault in the input rectifier. Options are programmed in *parameter 14-12 Function at Mains Imbalance*.

#### Troubleshooting

- Check the supply voltage and supply currents to the drive.

### WARNING 5, DC link voltage high

The DC-link voltage (DC) is higher than the high-voltage warning limit. The limit depends on the drive voltage rating. The unit is still active.

### WARNING 6, DC link voltage low

The DC-link voltage (DC) is lower than the low voltage warning limit. The limit depends on the drive voltage rating. The unit is still active.

### WARNING/ALARM 7, DC overvoltage

If the DC-link voltage exceeds the limit, the drive trips after a time.

#### Troubleshooting

- Extend the ramp time.
- Change the ramp type.
- Increase *parameter 14-26 Trip Delay at Inverter Fault*.
- Check that the supply voltage matches the active front-end drive voltage.
- Perform input voltage test.

### WARNING/ALARM 8, DC under voltage

If the DC-link voltage drops below the undervoltage limit, the drive checks for 24 V DC back-up supply. If no 24 V DC back-up supply is connected, the drive trips after a fixed time delay. The time delay varies with unit size.

#### Troubleshooting

- Check that the supply voltage matches the drive voltage.
- Perform an input voltage test.
- Perform a soft-charge circuit test.

### WARNING/ALARM 9, Inverter overload

The drive has run with more than 100% overload for too long and is about to cut out. The counter for electronic thermal inverter protection issues a warning at 98% and trips at 100% with an alarm. The drive cannot be reset until the counter is below 90%.



**Troubleshooting**

- Compare the output current shown on the LCP with the drive rated current.
- Compare the output current shown on the LCP with the measured motor current.
- Show the thermal drive load on the LCP and monitor the value. When running above the drive continuous current rating, the counter increases. When running below the drive continuous current rating, the counter decreases.

**WARNING/ALARM 10, Motor overload temperature**

According to the electronic thermal protection (ETR), the motor is too hot.

Select 1 of these options:

- The drive issues a warning or an alarm when the counter is >90% if *parameter 1-90 Motor Thermal Protection* is set to warning options.
- The drive trips when the counter reaches 100% if *parameter 1-90 Motor Thermal Protection* is set to trip options.

The fault occurs when the motor runs with more than 100% overload for too long.

**Troubleshooting**

- Check for motor overheating.
- Check if the motor is mechanically overloaded.
- Check that the motor current set in *parameter 1-24 Motor Current* is correct.
- Ensure that the motor data in *parameters 1-20 to 1-25* is set correctly.
- If an external fan is in use, check that it is selected in *parameter 1-91 Motor External Fan*.
- Running AMA in *parameter 1-29 Automatic Motor Adaptation (AMA)* tunes the drive to the motor more accurately and reduces thermal loading.

**WARNING/ALARM 11, Motor thermistor overtemp**

Check whether the thermistor is disconnected. Select whether the drive issues a warning or an alarm in *parameter 1-90 Motor Thermal Protection*.

**Troubleshooting**

- Check for motor overheating.
- Check if the motor is mechanically overloaded.
- When using terminal 53 or 54, check that the thermistor is connected correctly between either terminal 53 or 54 (analog voltage input) and terminal 50 (+10 V supply). Also check that the terminal switch for 53 or 54 is set for voltage. Check that *parameter 1-93 Thermistor Resource* selects terminal 53 or 54.
- When using terminal 18, 19, 31, 32, or 33 (digital inputs), check that the thermistor is connected correctly between the digital input terminal used

(digital input PNP only) and terminal 50. Select the terminal to use in *parameter 1-93 Thermistor Resource*.

**WARNING/ALARM 12, Torque limit**

The torque has exceeded the value in *parameter 4-16 Torque Limit Motor Mode* or the value in *parameter 4-17 Torque Limit Generator Mode*. *Parameter 14-25 Trip Delay at Torque Limit* can change this warning from a warning-only condition to a warning followed by an alarm.

**Troubleshooting**

- If the motor torque limit is exceeded during ramp-up, extend the ramp-up time.
- If the generator torque limit is exceeded during ramp-down, extend the ramp-down time.
- If torque limit occurs while running, increase the torque limit. Make sure that the system can operate safely at a higher torque.
- Check the application for excessive current draw on the motor.

**WARNING/ALARM 13, Over current**

The inverter peak current limit (approximately 200% of the rated current) is exceeded. The warning lasts approximately 1.5 s, then the drive trips and issues an alarm. Shock loading or quick acceleration with high-inertia loads can cause this fault. If the acceleration during ramp-up is quick, the fault can also appear after kinetic back-up. If extended mechanical brake control is selected, a trip can be reset externally.

**Troubleshooting**

- Remove the power and check if the motor shaft can be turned.
- Check that the motor size matches the drive.
- Check that the motor data is correct in *parameters 1-20 to 1-25*.

**ALARM 14, Earth (ground) fault**

There is current from the output phase to ground, either in the cable between the drive and the motor, or in the motor itself. The current transducers detect the ground fault by measuring current going out from the drive and current going into the drive from the motor. Ground fault is issued if the deviation of the 2 currents is too large. The current going out of the drive must be the same as the current going into the drive.

**Troubleshooting**

- Remove power to the drive and repair the ground fault.
- Check for ground faults in the motor by measuring the resistance to ground of the motor cables and the motor with a megohmmeter.
- Reset any potential individual offset in the 3 current transducers in the drive. Perform the

manual initialization or perform a complete AMA. This method is most relevant after changing the power card.

#### ALARM 15, Hardware mismatch

A fitted option is not operational with the present control card hardware or software.

Record the value of the following parameters and contact Danfoss.

- *Parameter 15-40 FC Type.*
- *Parameter 15-41 Power Section.*
- *Parameter 15-42 Voltage.*
- *Parameter 15-43 Software Version.*
- *Parameter 15-45 Actual Typecode String.*
- *Parameter 15-49 SW ID Control Card.*
- *Parameter 15-50 SW ID Power Card.*
- *Parameter 15-60 Option Mounted.*
- *Parameter 15-61 Option SW Version* (for each option slot).

#### ALARM 16, Short circuit

There is short-circuiting in the motor or motor wiring.

##### Troubleshooting

- Remove the power to the drive and repair the short circuit.

### **⚠ WARNING**

#### HIGH VOLTAGE

Drives contain high voltage when connected to AC mains input, DC supply, or load sharing. Failure to use qualified personnel to install, start up, and maintain the drive can result in death or serious injury.

- **Disconnect power before proceeding.**

#### WARNING/ALARM 17, Control word timeout

There is no communication to the drive.

The warning is only active when *parameter 8-04 Control Word Timeout Function* is NOT set to [0] Off.

If *parameter 8-04 Control Word Timeout Function* is set to [5] Stop and trip, a warning appears, and the drive ramps down to a stop and shows an alarm.

##### Troubleshooting

- Check the connections on the serial communication cable.
- Increase *parameter 8-03 Control Word Timeout Time*.
- Check the operation of the communication equipment.
- Verify that proper EMC installation was performed.

#### WARNING/ALARM 20, Temp. input error

The temperature sensor is not connected.

#### WARNING/ALARM 21, Parameter error

The parameter is out of range. The parameter number is reported in the display.

##### Troubleshooting

- Set the affected parameter to a valid value.

#### WARNING 22, Hoist mechanical brake

0 = The torque reference was not reached before timeout.  
1 = There was no brake feedback before the timeout.

#### WARNING 23, Internal fan fault

The fan warning function is a protective function that checks if the fan is running/mounted. The fan warning can be disabled in *parameter 14-53 Fan Monitor ([0] Disabled)*.

There is a feedback sensor mounted in the fan. If the fan is commanded to run and there is no feedback from the sensor, this alarm appears. This alarm also shows if there is a communication error between the fan power card and the control card.

Check the alarm log (see *chapter 3.6 Local Control Panel (LCP)*) for the report value associated with this warning.

If the report value is 2, there is a hardware problem with 1 of the fans. If the report value is 12, there is a communication problem between the fan power card and the control card.

##### Fan troubleshooting

- Cycle power to the drive and check that the fan operates briefly at start-up.
- Check for proper fan operation. Use *parameter group 43-\*\* Unit Readouts* to show the speed of each fan.

##### Fan power card troubleshooting

- Check the wiring between the fan power card and the control card.
- Fan power card may need to be replaced.
- Control card may need to be replaced.

#### WARNING 24, External fan fault

The fan warning function is a protective function that checks if the fan is running/mounted. The fan warning can be disabled in *parameter 14-53 Fan Monitor ([0] Disabled)*.

There is a feedback sensor mounted in the fan. If the fan is commanded to run and there is no feedback from the sensor, this alarm appears. This alarm also shows if there is a communication error between the power card and the control card.

Check the alarm log (see *chapter 3.6 Local Control Panel (LCP)*) for the report value associated with this warning.

If the report value is 1, there is a hardware problem with 1 of the fans. If the report value is 11, there is a communication problem between the power card and the control card.

**Fan troubleshooting**

- Cycle power to the drive and check that the fan operates briefly at start-up.
- Check for proper fan operation. Use *parameter group 43-\*\* Unit Readouts* to show the speed of each fan.

**Power card troubleshooting**

- Check the wiring between the power card and the control card.
- Power card may need to be replaced.
- Control card may need to be replaced.

**WARNING 25, Brake resistor short circuit**

The brake resistor is monitored during operation. If a short circuit occurs, the brake function is disabled and the warning appears. The drive is still operational, but without the brake function.

**Troubleshooting**

- Remove the power to the drive and replace the brake resistor (refer to *parameter 2-15 Brake Check*).

**WARNING/ALARM 26, Brake resistor power limit**

The power transmitted to the brake resistor is calculated as a mean value over the last 120 s of run time. The calculation is based on the DC-link voltage and the brake resistor value set in *parameter 2-16 AC brake Max. Current*. The warning is active when the dissipated braking power is higher than 90% of the brake resistor power. If option [2] *Trip* is selected in *parameter 2-13 Brake Power Monitoring*, the drive trips when the dissipated braking power reaches 100%.

**WARNING/ALARM 27, Brake chopper fault**

The brake transistor is monitored during operation, and if a short circuit occurs, the brake function is disabled, and a warning is issued. The drive is still operational, but since the brake transistor has short-circuited, substantial power is transmitted to the brake resistor, even if it is inactive.

**Troubleshooting**

- Remove power to the drive and remove the brake resistor.

**WARNING/ALARM 28, Brake check failed**

The brake resistor is not connected or not working.

**Troubleshooting**

- Check *parameter 2-15 Brake Check*.

**ALARM 29, Heat Sink temp**

The maximum temperature of the heat sink has been exceeded. This alarm is based on the temperature measured by the heat sink sensor mounted inside the IGBT modules. The temperature fault does not reset until the temperature drops below a defined heat sink temperature. The trip and reset points are different based on the drive power size.

**Troubleshooting**

- Check for the following conditions:
  - Ambient temperature too high
  - Motor cable too long
  - Incorrect airflow clearance above and below the drive
  - Blocked airflow around the drive
  - Damaged heat sink fan
  - Dirty heat sink
- Check fan resistance.
- Check soft charge fuses.
- Check IGBT thermal.

**ALARM 30, Motor phase U missing**

Motor phase U between the drive and the motor is missing.

**⚠ WARNING****HIGH VOLTAGE**

Drives contain high voltage when connected to AC mains input, DC supply, or load sharing. Failure to use qualified personnel to install, start up, and maintain the drive can result in death or serious injury.

- Disconnect power before proceeding.

**Troubleshooting**

- Remove the power from the drive and check motor phase U.

**ALARM 31, Motor phase V missing**

Motor phase V between the drive and the motor is missing.

**⚠ WARNING****HIGH VOLTAGE**

Drives contain high voltage when connected to AC mains input, DC supply, or load sharing. Failure to use qualified personnel to install, start up, and maintain the drive can result in death or serious injury.

- Disconnect power before proceeding.

**Troubleshooting**

- Remove the power from the drive and check motor phase V.

**ALARM 32, Motor phase W missing**

Motor phase W between the drive and the motor is missing.

## **⚠ WARNING**

### **HIGH VOLTAGE**

Drives contain high voltage when connected to AC mains input, DC supply, or load sharing. Failure to use qualified personnel to install, start up, and maintain the drive can result in death or serious injury.

- Disconnect power before proceeding.

#### **Troubleshooting**

- Remove the power from the drive and check motor phase W.

### **ALARM 33, Inrush fault**

Too many power-ups have occurred within a short time period.

#### **Troubleshooting**

- Let the unit cool to operating temperature.
- Check potential DC-link fault to ground.

### **WARNING/ALARM 34, Fieldbus communication fault**

The fieldbus on the communication option card is not working.

### **WARNING/ALARM 35, Option fault**

An option alarm is received. The alarm is option-specific. The most likely cause is a power-up or a communication fault.

### **WARNING/ALARM 36, Mains failure**

This warning/alarm is only active if the supply voltage to the drive system is lost and *parameter 14-10 Mains Failure* is not set to option [0] *No Function*.

- Check the fuses to the drive system and the mains supply to the unit.
- Check that mains voltage conforms to product specifications.
- Check that the following conditions are not present:  
*Alarm 307, Excessive THD(V), alarm 321, Voltage imbalance, warning 417, Mains undervoltage, or warning 418, Mains overvoltage* is reported if any of the listed conditions are true:
  - The 3-phase voltage magnitude drops below 25% of the nominal mains voltage.
  - Any single-phase voltage exceeds 10% of the nominal mains voltage.
  - Percent of phase or magnitude imbalance exceeds 8%.
  - Voltage THD exceeds 10%.

### **ALARM 37, Phase imbalance**

There is a current imbalance between the power units.

### **ALARM 38, Internal fault**

When an internal fault occurs, a code number defined in *Table 8.4* is shown.

#### **Troubleshooting**

- Cycle power.
- Check that the option is properly installed.
- Check for loose or missing wiring.

It may be necessary to contact the Danfoss supplier or service department. Note the code number for further troubleshooting directions.

Number	Text
0	The serial port cannot be initialized. Contact the Danfoss supplier or Danfoss Service Department.
256–259, 266, 268	The power EEPROM data is defective or too old. Replace power card.
512–519	Internal fault. Contact the Danfoss supplier or Danfoss Service Department.
783	Parameter value outside of minimum/maximum limits.
1024–1284	Internal fault. Contact the Danfoss supplier or the Danfoss Service Department.
1299	Option SW in slot A is too old.
1300	Option SW in slot B is too old.
1301	Option SW in slot C0 is too old.
1302	Option SW in slot C1 is too old.
1315	Option SW in slot A is not supported (not allowed).
1316	Option SW in slot B is not supported (not allowed).
1317	Option SW in slot C0 is not supported (not allowed).
1318	Option SW in slot C1 is not supported (not allowed).
1360–2819	Internal fault. Contact the Danfoss supplier or Danfoss Service Department.
2561	Replace control card.
2820	LCP stack overflow.
2821	Serial port overflow.
2822	USB port overflow.
3072–5122	Parameter value is outside its limits.
5123	Option in slot A: Hardware incompatible with control board hardware.
5124	Option in slot B: Hardware incompatible with control board hardware.
5125	Option in slot C0: Hardware incompatible with control board hardware.
5126	Option in slot C1: Hardware incompatible with control board hardware.
5127	Illegal option combination (2 options of the same kind mounted, or encoder in E0 and resolver in E1 or similar).

Number	Text
5168	Safe stop/safe torque off was detected on a control card that does not have safe stop/safe torque off.
5376-65535	Internal fault. Contact the Danfoss supplier or Danfoss Service Department.

**Table 8.4 Internal Fault Codes**
**ALARM 39, Heat sink sensor**

No feedback from the heat sink temperature sensor.

The signal from the IGBT thermal sensor is not available on the power card. The problem could be on the power card, on the gatedrive card, or the ribbon cable between the power card and gatedrive card.

**WARNING 40, Overload of digital output terminal 27**

Check the load connected to terminal 27 or remove the short circuit connection. Check *parameter 5-00 Digital I/O Mode* and *parameter 5-01 Terminal 27 Mode*.

**WARNING 41, Overload of digital output terminal 29**

Check the load connected to terminal 29 or remove the short-circuit connection. Also check *parameter 5-00 Digital I/O Mode* and *parameter 5-02 Terminal 29 Mode*.

**WARNING 42, Overload of digital output on X30/6 or overload of digital output on X30/7**

For terminal X30/6, check the load connected to terminal X30/6 or remove the short-circuit connection. Also check *parameter 5-32 Term X30/6 Digi Out (MCB 101) (VLT® General Purpose I/O MCB 101)*.

For terminal X30/7, check the load connected to terminal X30/7 or remove the short-circuit connection. Check *parameter 5-33 Term X30/7 Digi Out (MCB 101) (VLT® General Purpose I/O MCB 101)*.

**ALARM 43, Ext. supply**

VLT® Extended Relay Option MCB 113 is mounted without external 24 V DC. Either connect a 24 V DC external supply or specify that no external supply is used via *parameter 14-80 Option Supplied by External 24VDC, [0] No*. A change in *parameter 14-80 Option Supplied by External 24VDC* requires a power cycle.

**ALARM 45, Earth fault 2**

Ground fault.

**Troubleshooting**

- Check for proper grounding and loose connections.
- Check for proper wire size.
- Check the motor cables for short circuits or leakage currents.

**ALARM 46, Power card supply**

The supply on the power card is out of range.

There are 3 supplies generated by the switch mode supply (SMPS) on the power card:

- 24 V.
- 5 V.
- $\pm 18$  V.

When powered with VLT® 24 V DC Supply MCB 107, only the 24 V and 5 V supplies are monitored. When powered with 3-phase mains voltage, all 3 supplies are monitored.

**Troubleshooting**

- Check for a defective power card.
- Check for a defective control card.
- Check for a defective option card.
- If a 24 V DC supply is used, verify proper supply power.

**WARNING 47, 24 V supply low**

The supply on the power card is out of range.

There are 3 supplies generated by the switch mode supply (SMPS) on the power card:

- 24 V.
- 5 V.
- $\pm 18$  V.

**Troubleshooting**

- Check for a defective power card.

**WARNING 48, 1.8 V supply low**

The 1.8 V DC supply used on the control card is outside of the allowable limits. The supply is measured on the control card.

**Troubleshooting**

- Check for a defective control card.
- If an option card is present, check for overvoltage.

**WARNING 49, Speed limit**

The warning is shown when the speed is outside of the specified range in *parameter 4-11 Motor Speed Low Limit [RPM]* and *parameter 4-13 Motor Speed High Limit [RPM]*. When the speed is below the specified limit in *parameter 1-86 Trip Speed Low [RPM]* (except when starting or stopping), the drive trips.

**ALARM 50, AMA calibration failed**

Contact the Danfoss supplier or Danfoss service department.

**ALARM 51, AMA check  $U_{nom}$  and  $I_{nom}$** 

The settings for motor voltage, motor current, and motor power are wrong.

**Troubleshooting**

- Check the settings in *parameters 1-20 to 1-25*.

**ALARM 52, AMA low  $I_{nom}$** 

The motor current is too low.

**Troubleshooting**

- Check the settings in *parameter 1-24 Motor Current*.

**ALARM 53, AMA motor too big**

The motor is too large for the AMA to operate.

**ALARM 54, AMA motor too small**

The motor is too small for the AMA to operate.

**ALARM 55, AMA parameter out of range**

The AMA cannot run because the parameter values of the motor are outside of the acceptable range.

**ALARM 56, AMA interrupted by user**

The AMA is manually interrupted.

**ALARM 57, AMA internal fault**

Try to restart the AMA. Repeated restarts can overheat the motor.

**ALARM 58, AMA Internal fault**

Contact the Danfoss supplier.

**WARNING 59, Current limit**

The current is higher than the value in *parameter 4-18 Current Limit*. Ensure that the motor data in *parameters 1-20 to 1-25* is set correctly. Increase the current limit if necessary. Ensure that the system can operate safely at a higher limit.

**WARNING 60, External interlock**

A digital input signal indicates a fault condition external to the drive. An external interlock has commanded the drive to trip. Clear the external fault condition. To resume normal operation, apply 24 V DC to the terminal programmed for external interlock, and reset the drive.

**WARNING 61, Tracking Error**

An error has been detected between the calculated motor speed and the speed measurement from the feedback device. The function for Warning/Alarm/Disable is set in *parameter 4-30 Motor Feedback Loss Function*. Error setting is found in *parameter 4-31 Motor Feedback Speed Error*. Allowed error time is found in *parameter 4-32 Motor Feedback Loss Timeout*. During the commissioning process, this function can be useful.

**WARNING 62, Output frequency at maximum limit**

The output frequency has reached the value set in *parameter 4-19 Max Output Frequency*. Check the application for possible causes. Possibly increase the output frequency limit. Be sure that the system can operate safely at a higher output frequency. The warning clears when the output drops below the maximum limit.

**ALARM 63, Mechanical brake low**

The actual motor current has not exceeded the release brake current within the start delay time window.

**WARNING 64, Voltage Limit**

The load and speed combination demands a motor voltage higher than the actual DC-link voltage.

**WARNING/ALARM 65, Control card over temperature**

The cutout temperature of the control card is 85 °C (185 °F).

**Troubleshooting**

- Check that the ambient operating temperature is within the limits.
- Check for clogged filters.
- Check the fan operation.
- Check the control card.

**WARNING 66, Heat sink temperature low**

The drive is too cold to operate. This warning is based on the temperature sensor in the IGBT module. Increase the ambient temperature of the unit. Also, a trickle amount of current can be supplied to the drive whenever the motor is stopped by setting *parameter 2-00 DC Hold/Preheat Current* to 5% and *parameter 1-80 Function at Stop*.

**ALARM 67, Option module configuration has changed**

One or more options have either been added or removed since the last power-down. Check that the configuration change is intentional and reset the unit.

**ALARM 68, Safe Stop activated**

Safe torque off (STO) has been activated. To resume normal operation, apply 24 V DC to terminal 37, then send a reset signal (via bus, digital I/O, or by pressing [Reset]).

**ALARM 69, Power card temperature**

The temperature sensor on the power card is either too hot or too cold.

**Troubleshooting**

- Check that the ambient operating temperature is within limits.
- Check for clogged filters.
- Check fan operation.
- Check the power card.

**ALARM 70, Illegal FC configuration**

The control card and power card are incompatible. To check compatibility, contact the Danfoss supplier with the type code from the unit nameplate and the part numbers of the cards.

**WARNING/ALARM 71, PTC 1 Safe Stop**

Safe torque off (STO) has been activated from the VLT® PTC Thermistor Card MCB 112 because the motor is too warm. Once the motor cools and the digital input from the MCB 112 is deactivated, normal operation can resume when the MCB 112 applies 24 V DC to terminal 37 again. When the motor is ready for normal operation, a reset signal is sent (via serial communication, digital I/O, or by pressing [Reset] on the LCP). If automatic restart is enabled, the motor can start when the fault is cleared.

**ALARM 72, Dangerous failure**

Safe torque off (STO) with trip lock. Unexpected signal levels on safe torque off and digital input from the VLT® PTC Thermistor Card MCB 112.

**WARNING 73, Safe Stop auto restart**

Safe torque off (STO). With automatic restart enabled, the motor can start when the fault is cleared.

**ALARM 74, PTC Thermistor**

Alarm related to VLT<sup>®</sup> PTC Thermistor Card MCB 112. The PTC is not working.

**ALARM 75, Illegal profile sel.**

Do not write the parameter value while the motor is running. Stop the motor before writing the MCO profile to *parameter 8-10 Control Word Profile*.

**WARNING 76, Power unit setup**

The required number of power units does not match the detected number of active power units. When replacing an enclosure size F module, this warning occurs if the power-specific data in the module power card does not match the rest of the drive. If the power card connection is lost, the unit also triggers this warning.

**Troubleshooting**

- Confirm that the spare part and its power card are the correct part number.
- Ensure that the 44-pin cables between the MDCIC and power cards are mounted properly.

**WARNING 77, Reduced power mode**

This warning indicates that the drive is operating in reduced power mode (that is, less than the allowed number of inverter sections). This warning is generated on power cycle when the drive is set to run with fewer inverters and remains on.

**ALARM 78, Tracking error**

The difference between setpoint value and actual value exceeds the value in *parameter 4-35 Tracking Error*.

**Troubleshooting**

- Disable the function or select an alarm/warning in *parameter 4-34 Tracking Error Function*.
- Investigate the mechanics around the load and motor. Check feedback connections from motor encoder to drive.
- Select motor feedback function in *parameter 4-30 Motor Feedback Loss Function*.
- Adjust the tracking error band in *parameter 4-35 Tracking Error* and *parameter 4-37 Tracking Error Ramping*.

**ALARM 79, Illegal power section configuration**

The scaling card is the incorrect part number or not installed. Also, the MK102 connector on the power card could not be installed.

**ALARM 80, Drive initialised to default value**

Parameter settings are initialized to default settings after a manual reset. To clear the alarm, reset the unit.

**ALARM 81, CSIV corrupt**

CSIV file has syntax errors.

**ALARM 82, CSIV parameter error**

CSIV failed to initialize a parameter.

**ALARM 83, Illegal option combination**

The mounted options are incompatible.

**ALARM 84, No safety option**

The safety option was removed without applying a general reset. Reconnect the safety option.

**ALARM 85, Dang fail PB**

PROFIBUS/PROFIsafe error.

**ALARM 88, Option detection**

A change in the option layout is detected.

*Parameter 14-89 Option Detection* is set to [0] Frozen configuration and the option layout has been changed.

- To apply the change, enable option layout changes in *parameter 14-89 Option Detection*.
- Alternatively, restore the correct option configuration.

**WARNING 89, Mechanical brake sliding**

The hoist brake monitor detects a motor speed exceeding 10 RPM.

**ALARM 90, Feedback monitor**

Check the connection to encoder/resolver option and, if necessary, replace VLT<sup>®</sup> Encoder Input MCB 102 or VLT<sup>®</sup> Resolver Input MCB 103.

**ALARM 91, Analog input 54 wrong settings**

Set switch S202 in position OFF (voltage input) when a KTY sensor is connected to analog input terminal 54.

**ALARM 99, Locked rotor**

Rotor is blocked.

**WARNING/ALARM 104, Mixing fan fault**

The fan is not operating. The fan monitor checks that the fan is spinning at power-up or whenever the mixing fan is turned on. The mixing-fan fault can be configured as a warning or an alarm trip in *parameter 14-53 Fan Monitor*.

**Troubleshooting**

- Cycle power to the drive to determine if the warning/alarm returns.

**WARNING/ALARM 122, Mot. rotat. unexp.**

The drive performs a function that requires the motor to be at standstill, for example DC hold for PM motors.

**WARNING 163, ATEX ETR cur.lim.warning**

The drive has run above the characteristic curve for more than 50 s. The warning is activated at 83% and deactivated at 65% of the allowed thermal overload.

**ALARM 164, ATEX ETR cur.lim.alarm**

Operating above the characteristic curve for more than 60 s within a period of 600 s activates the alarm, and the drive trips.

**WARNING 165, ATEX ETR freq.lim.warning**

The drive is running for more than 50 s below the allowed minimum frequency (*parameter 1-98 ATEX ETR interpol. points freq.*).

**ALARM 166, ATEX ETR freq.lim.alarm**

The drive has operated for more than 60 s (in a period of 600 s) below the allowed minimum frequency (*parameter 1-98 ATEX ETR interpol. points freq.*).

**ALARM 244, Heat Sink temperature**

The maximum temperature of the heat sink has been exceeded. The temperature fault cannot reset until the temperature drops below a defined heat sink temperature. The trip and reset points are different based on the power size. This alarm is equivalent to *Alarm 29, Heat Sink Temp.*

**Troubleshooting:**

Check for the following conditions:

- Ambient temperature too high.
- Motor cables too long.
- Incorrect airflow clearance above or below the AC drive.
- Blocked airflow around the unit.
- Damaged heat sink fan.
- Dirty heat sink.

**WARNING 251, New typecode**

The power card or other components are replaced, and the type code has changed.

**ALARM 421, Temperature fault**

A fault caused by the on-board temperature sensor is detected on the fan power card.

**Troubleshooting:**

- Check wiring.
- Check sensor.
- Replace fan power card.

**ALARM 423, FPC updating**

The alarm is generated when the fan power card reports it has an invalid PUD. The control card attempts to update the PUD. A subsequent alarm can result depending on the update. See A424 and A425.

**ALARM 424, FPC update successful**

This alarm is generated when the control card has successfully updated the fan power card PUD. The drive must be reset to stop the alarm.

**ALARM 425, FPC update failure**

This alarm is generated after the control card failed to update the fan power card PUD.

**Troubleshooting:**

- Check the fan power card wiring.
- Replace fan power card.
- Contact supplier.

**ALARM 426, FPC config**

The number of found fan power cards does not match the number of configured fan power cards. See *parameter group 15-6\* Option Ident* for the number of configured fan power cards.

**Troubleshooting:**

- Check fan power card wiring.
- Replace fan power card.

**ALARM 427, FPC supply**

Supply voltage fault (5 V, 24 V, or 48 V) on fan power card is detected.

**Troubleshooting:**

- Check fan power card wiring.
- Replace fan power card.



## 8.6 Troubleshooting

Symptom	Possible cause	Test	Solution
Display dark/No function	Missing input power.	See <i>Table 5.4</i> .	Check the input power source.
	Missing or open fuses.	See <i>Open power fuses</i> in this table for possible causes.	Follow the recommendations provided.
	No power to the LCP.	Check the LCP cable for proper connection or damage.	Replace the faulty LCP or connection cable.
	Shortcut on control voltage (terminal 12 or 50) or at control terminals.	Check the 24 V control voltage supply for terminal 12/13 to 20–39, or 10 V supply for terminals 50–55.	Wire the terminals properly.
	Incompatible LCP (LCP from VLT® 2800 or 5000/6000/8000/FCD or FCM).	–	Use only LCP 101 (P/N 130B1124) or LCP 102 (P/N. 130B1107).
	Wrong contrast setting.	–	Press [Status] + [▲]/[▼] to adjust the contrast.
	Display (LCP) is defective.	Test using a different LCP.	Replace the faulty LCP or connection cable.
	Internal voltage supply fault or SMPS is defective.	–	Contact supplier.
Intermittent display	Overloaded supply (SMPS) due to improper control wiring or a fault within the AC drive.	To rule out a problem in the control wiring, disconnect all control wiring by removing the terminal blocks.	If the display stays lit, the problem is in the control wiring. Check the wiring for shorts or incorrect connections. If the display continues to cut out, follow the procedure for <i>Display dark/No function</i> .
Motor not running	Service switch open or missing motor connection.	Check if the motor is connected and the connection is not interrupted by a service switch or other device.	Connect the motor and check the service switch.
	No mains power with 24 V DC option card.	If the display is functioning, but there is no output, check that mains power is applied to the AC drive.	Apply mains power.
	LCP Stop.	Check if [Off] has been pressed.	Press [Auto On] or [Hand On] (depending on operating mode).
	Missing start signal (Standby).	Check <i>parameter 5-10 Terminal 18 Digital Input</i> for correct setting for terminal 18. Use default setting.	Apply a valid start signal.
	Motor coast signal active (Coasting).	Check <i>parameter 5-12 Terminal 27 Digital Input</i> for correct setting for terminal 27 (use default setting).	Apply 24 V on terminal 27 or program this terminal to [0] <i>No operation</i> .
	Wrong reference signal source.	Check reference signal: <ul style="list-style-type: none"> <li>• Local</li> <li>• Remote or bus reference?</li> <li>• Preset reference active?</li> <li>• Terminal connection correct?</li> <li>• Scaling of terminals correct?</li> <li>• Reference signal available?</li> </ul>	Program correct settings. Check <i>parameter 3-13 Reference Site</i> . Set preset reference active in <i>parameter group 3-1* References</i> . Check for correct wiring. Check scaling of terminals. Check reference signal.
Motor running in wrong direction	Motor rotation limit.	Check that <i>parameter 4-10 Motor Speed Direction</i> is programmed correctly.	Program correct settings.
	Active reversing signal.	Check if a reversing command is programmed for the terminal in <i>parameter group 5-1* Digital inputs</i> .	Deactivate reversing signal.
	Wrong motor phase connection.	–	See <i>chapter 6.5.1 Warning - Motor Start</i> .

Symptom	Possible cause	Test	Solution
Motor is not reaching maximum speed	Frequency limits set wrong.	Check output limits in <i>parameter 4-13 Motor Speed High Limit [RPM]</i> , <i>parameter 4-14 Motor Speed High Limit [Hz]</i> , and <i>parameter 4-19 Max Output Frequency</i>	Program correct limits.
	Reference input signal not scaled correctly.	Check reference input signal scaling in <i>parameter group 6-0* Analog I/O mode</i> and <i>parameter group 3-1* References</i> .	Program correct settings.
Motor speed unstable	Possible incorrect parameter settings.	Check the settings of all motor parameters, including all motor compensation settings. For closed-loop operation, check PID settings.	Check settings in <i>parameter group 1-6* Load Depen. Setting</i> . For closed-loop operation, check settings in <i>parameter group 20-0* Feedback</i> .
Motor runs rough	Possible overmagnetization.	Check for incorrect motor settings in all motor parameters.	Check motor settings in <i>parameter groups 1-2* Motor data</i> , <i>1-3* Adv Motor Data</i> , and <i>1-5* Load Indep. Setting</i> .
Motor does not brake	Possible incorrect settings in the brake parameters. Ramp-down times may be too short.	Check brake parameters. Check ramp time settings.	Check <i>parameter groups 2-0* DC Brake</i> and <i>3-0* Reference Limits</i> .
Open power fuses	Phase-to-phase short.	Motor or panel has a short phase-to-phase. Check motor and panel phases for shorts.	Eliminate any shorts detected.
	Motor overload.	Motor is overloaded for the application.	Perform start-up test and verify that motor current is within specifications. If motor current is exceeding the nameplate full load current, the motor can run only with reduced load. Review the specifications for the application.
	Loose connections.	Perform pre-start-up check for loose connections.	Tighten loose connections.
Mains current imbalance greater than 3%	Problem with mains power (see <i>Alarm 4, Mains phase loss</i> description).	Rotate input power leads into the 1 position: A to B, B to C, C to A.	If imbalanced leg follows the wire, it is a power problem. Check the mains supply.
	Problem with the AC drive.	Rotate input power leads into the AC drive 1 position: A to B, B to C, C to A.	If the imbalanced leg stays on same input terminal, it is a problem with the AC drive. Contact supplier.
Motor current imbalance greater than 3%	Problem with motor or motor wiring.	Rotate output motor cables 1 position: U to V, V to W, W to U.	If the imbalanced leg follows the wire, the problem is in the motor or motor wiring. Check motor and motor wiring.
	Problem with AC drive.	Rotate output motor cables 1 position: U to V, V to W, W to U.	If the imbalanced leg stays on same output terminal, it is a problem with the unit. Contact supplier.
AC drive acceleration problems	Motor data are entered incorrectly.	If warnings or alarms occur, see <i>chapter 8.5 List of Warnings and Alarms</i> . Check that motor data are entered correctly.	Increase the ramp-up time in <i>parameter 3-41 Ramp 1 Ramp Up Time</i> . Increase current limit in <i>parameter 4-18 Current Limit</i> . Increase torque limit in <i>parameter 4-16 Torque Limit Motor Mode</i> .
AC drive deceleration problems	Motor data are entered incorrectly.	If warnings or alarms occur, see <i>chapter 8.5 List of Warnings and Alarms</i> . Check that motor data are entered correctly.	Increase the ramp-down time in <i>parameter 3-42 Ramp 1 Ramp Down Time</i> . Enable overvoltage control in <i>parameter 2-17 Over-voltage Control</i> .

Table 8.5 Troubleshooting

## 9 Specifications

### 9.1 Electrical Data

#### 9.1.1 Mains Supply 3x380–500 V AC

VLT® AutomationDrive FC 302	N315		N355		N400	
High/normal overload (High overload=150% current during 60 s, normal overload=110% current during 60 s)	HO	NO	HO	NO	HO	NO
Typical shaft output at 400 V [kW]	315	355	355	400	400	450
Typical shaft output at 460 V [hp]	450	500	500	600	550	600
Typical shaft output at 500 V [kW]	355	400	400	500	500	530
Enclosure size	E1h/E3h		E1h/E3h		E1h/E3h	
<b>Output current (3-phase)</b>						
Continuous (at 400 V) [A]	600	658	658	745	695	800
Intermittent (60 s overload) (at 400 V) [A]	900	724	987	820	1043	880
Continuous (at 460/500 V) [A]	540	590	590	678	678	730
Intermittent (60 s overload) (at 460/500 V) [A]	810	649	885	746	1017	803
Continuous kVA (at 400 V) [kVA]	416	456	456	516	482	554
Continuous kVA (at 460 V) [kVA]	430	470	470	540	540	582
Continuous kVA (at 500 V) [kVA]	468	511	511	587	587	632
<b>Maximum input current</b>						
Continuous (at 400 V) [A]	578	634	634	718	670	771
Continuous (at 460/500 V) [A]	520	569	569	653	653	704
<b>Maximum number and size of cables per phase (E1h)</b>						
- Mains and motor without brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	5x240 (5x500 mcm)		5x240 (5x500 mcm)		5x240 (5x500 mcm)	
- Mains and motor with brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	4x240 (4x500 mcm)		4x240 (4x500 mcm)		4x240 (4x500 mcm)	
- Brake or regeneration [mm <sup>2</sup> (AWG)] <sup>1)</sup>	2x185 (2x350 mcm)		2x185 (2x350 mcm)		2x185 (2x350 mcm)	
<b>Maximum number and size of cables per phase (E3h)</b>						
- Mains and motor [mm <sup>2</sup> (AWG)] <sup>1)</sup>	6x240 (6x500 mcm)		6x240 (6x500 mcm)		6x240 (6x500 mcm)	
- Brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	2x185 (2x350 mcm)		2x185 (2x350 mcm)		2x185 (2x350 mcm)	
- Load share or regeneration [mm <sup>2</sup> (AWG)] <sup>1)</sup>	4x185 (4x350 mcm)		4x185 (4x350 mcm)		4x185 (4x350 mcm)	
Maximum external mains fuses [A] <sup>2)</sup>	800		800		800	
Estimated power loss at 400 V [W] <sup>3) 4)</sup>	6178	6928	6851	8036	7297	8783
Estimated power loss at 460 V [W] <sup>3)4)</sup>	5322	5910	5846	6933	7240	7969
Efficiency <sup>4)</sup>	0.98		0.98		0.98	
Output frequency	0–590 Hz		0–590 Hz		0–590 Hz	
Heat sink overtemperature trip [°C (°F)]	110 (230)		110 (230)		110 (230)	
Control card overtemperature trip [°C (°F)]	80 (176)		80 (176)		80 (176)	
Power card overtemperature trip [°C (°F)]	85 (185)		85 (185)		85 (185)	
Fan power card overtemperature trip [°C (°F)]	85 (185)		85 (185)		85 (185)	
Active in-rush card overtemperature trip [°C (°F)]	85 (185)		85 (185)		85 (185)	

Table 9.1 Technical Specifications, Mains Supply 3x380–500 V AC

VLT® AutomationDrive FC 302	N450		N500	
High/normal overload (High overload=150% current during 60 s, normal overload=110% current during 60 s)	HO	NO	HO	NO
Typical shaft output at 400 V [kW]	450	500	500	560
Typical shaft output at 460 V [hp]	600	650	650	750
Typical shaft output at 500 V [kW]	530	560	560	630
Enclosure size	E2h/E4h		E2h/E4h	
<b>Output current (3-phase)</b>				
Continuous (at 400 V) [A]	800	880	880	990
Intermittent (60 s overload) (at 400 V) [A]	1200	968	1320	1089
Continuous (at 460/500 V) [A]	730	780	780	890
Intermittent (60 s overload) (at 460/500 V) [A]	1095	858	1170	979
Continuous kVA (at 400 V) [kVA]	554	610	610	686
Continuous kVA (at 460 V) [kVA]	582	621	621	709
Continuous kVA (at 500 V) [kVA]	632	675	675	771
<b>Maximum input current</b>				
Continuous (at 400 V) [A]	771	848	848	954
Continuous (at 460/500 V) [A]	704	752	752	858
<b>Maximum number and size of cables per phase (E2h)</b>				
- Mains and motor without brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	6x240 (6x500 mcm)		6x240 (6x500 mcm)	
- Mains and motor with brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	5x240 (5x500 mcm)		5x240 (5x500 mcm)	
- Brake or regeneration [mm <sup>2</sup> (AWG)] <sup>1)</sup>	2x185 (2x350 mcm)		2x185 (2x350 mcm)	
<b>Maximum number and size of cables per phase (E4h)</b>				
- Mains and motor [mm <sup>2</sup> (AWG)] <sup>1)</sup>	6x240 (6x500 mcm)		6x240 (6x500 mcm)	
- Brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	2x185 (2x350 mcm)		2x185 (2x350 mcm)	
- Load share or regeneration [mm <sup>2</sup> (AWG)] <sup>1)</sup>	4x185 (4x350 mcm)		4x185 (4x350 mcm)	
Maximum external mains fuses [A] <sup>2)</sup>	1200		1200	
Estimated power loss at 400 V [W] <sup>3)4)</sup>	8352	9473	9449	11102
Estimated power loss at 460 V [W] <sup>3) 4)</sup>	7182	7809	7771	9236
Efficiency <sup>4)</sup>	0.98		0.98	
Output frequency [Hz]	0–590		0–590	
Heat sink overtemperature trip [°C (°F)]	110 (230)		100 (212)	
Control card overtemperature trip [°C (°F)]	80 (176)		80 (176)	
Power card overtemperature trip [°C (°F)]	85 (185)		85 (185)	
Fan power card overtemperature trip [°C (°F)]	85 (185)		85 (185)	
Active in-rush card overtemperature trip [°C (°F)]	85 (185)		85 (185)	

**Table 9.2 Technical Specifications, Mains Supply 3x380–500 V AC**

1) American Wire Gauge.

2) For fuse ratings, see chapter 9.7 Fuses.

3) Typical power loss is at normal conditions and expected to be within ±15% (tolerance relates to variety in voltage and cable conditions.) These values are based on a typical motor efficiency (IE/IE3 border line). Lower efficiency motors add to the power loss in the drive. Applies for dimensioning of drive cooling. If the switching frequency is higher than the default setting, the power losses can increase. LCP and typical control card power consumptions are included. For power loss data according to EN 50598-2, refer to [www.danfoss.com/vltenergyefficiency](http://www.danfoss.com/vltenergyefficiency). Options and customer load can add up to 30 W to the losses, though usually a fully loaded control card and options for slots A and B each add only 4 W.

4) Measured using 5 m (16.4 ft) shielded motor cables at rated load and rated frequency. Efficiency measured at nominal current. For energy efficiency class, see chapter 9.4 Ambient Conditions. For part load losses, see [www.danfoss.com/vltenergyefficiency](http://www.danfoss.com/vltenergyefficiency).

**9.1.2 Mains Supply 3x525–690 V AC**

VLT® AutomationDrive FC 302	N355		N400		N500	
High/normal overload (High overload=150% current during 60 s, normal overload=110% current during 60 s)	HO	NO	HO	NO	HO	NO
Typical shaft output at 550 V [kW]	315	355	315	400	400	450
Typical shaft output at 575 V [hp]	400	450	400	500	500	600
Typical shaft output at 690 V [kW]	355	450	400	500	500	560
Enclosure size	E1h/E3h		E1h/E3h		E1h/E3h	
<b>Output current (3-phase)</b>						
Continuous (at 550 V) [A]	395	470	429	523	523	596
Intermittent (60 s overload) (at 550 V) [A]	593	517	644	575	785	656
Continuous (at 575/690 V) [A]	380	450	410	500	500	570
Intermittent (60 s overload) (at 575/690 V) [A]	570	495	615	550	750	627
Continuous kVA (at 550 V) [kVA]	376	448	409	498	498	568
Continuous kVA (at 575 V) [kVA]	378	448	408	498	498	568
Continuous kVA (at 690 V) [kVA]	454	538	490	598	598	681
<b>Maximum input current</b>						
Continuous (at 550 V) [A]	381	453	413	504	504	574
Continuous (at 575 V) [A]	366	434	395	482	482	549
Continuous (at 690 V) [A]	366	434	395	482	482	549
<b>Maximum number and size of cables per phase (E1h)</b>						
- Mains and motor without brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	5x240 (5x500 mcm)		5x240 (5x500 mcm)		5x240 (5x500 mcm)	
- Mains and motor with brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	4x240 (4x500 mcm)		4x240 (4x500 mcm)		4x240 (4x500 mcm)	
- Brake or regeneration [mm <sup>2</sup> (AWG)] <sup>1)</sup>	2x185 (2x350 mcm)		2x185 (2x350 mcm)		2x185 (2x350 mcm)	
<b>Maximum number and size of cables per phase (E3h)</b>						
- Mains and motor [mm <sup>2</sup> (AWG)] <sup>1)</sup>	6x240 (6x500 mcm)		6x240 (6x500 mcm)		6x240 (6x500 mcm)	
- Brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	2x185 (2x350 mcm)		2x185 (2x350 mcm)		2x185 (2x350 mcm)	
- Load share or regeneration [mm <sup>2</sup> (AWG)] <sup>1)</sup>	4x185 (4x350 mcm)		4x185 (4x350 mcm)		4x185 (4x350 mcm)	
Maximum external mains fuses [A] <sup>2)</sup>	800		800		800	
Estimated power loss at 600 V [W] <sup>3)4)</sup>	4989	6062	5419	6879	6833	8076
Estimated power loss at 690 V [W] <sup>3)4)</sup>	4920	5939	5332	6715	6678	7852
Efficiency <sup>4)</sup>	0.98		0.98		0.98	
Output frequency [Hz]	0–590		0–590		0–590	
Heat sink overtemperature trip [°C (°F)]	110 (230)		110 (230)		110 (230)	
Control card overtemperature trip [°C (°F)]	80 (176)		80 (176)		80 (176)	
Power card overtemperature trip [°C (°F)]	85 (185)		85 (185)		85 (185)	
Fan power card overtemperature trip [°C (°F)]	85 (185)		85 (185)		85 (185)	
Active in-rush card overtemperature trip [°C (°F)]	85 (185)		85 (185)		85 (185)	

**Table 9.3 Technical Specifications, Mains Supply 3x525–690 V AC**

VLT® AutomationDrive FC 302	N560		N630		N710	
High/normal overload (High overload=150% current during 60 s, normal overload=110% current during 60 s)	HO	NO	HO	NO	HO	NO
Typical shaft output at 550 V [kW]	450	500	500	560	560	670
Typical shaft output at 575 V [hp]	600	650	650	750	750	950
Typical shaft output at 690 V [kW]	560	630	630	710	710	800
Enclosure size	E1h/E3h		E2h/E4h		E2h/E4h	
<b>Output current (3-phase)</b>						
Continuous (at 550 V) [A]	596	630	659	763	763	889
Intermittent (60 s overload) (at 550 V) [A]	894	693	989	839	1145	978
Continuous (at 575/690 V) [A]	570	630	630	730	730	850
Intermittent (60 s overload) (at 575/690 V) [A]	855	693	945	803	1095	935
Continuous kVA (at 550 V) [kVA]	568	600	628	727	727	847
Continuous kVA (at 575 V) [kVA]	568	627	627	727	727	847
Continuous kVA (at 690 V) [kVA]	681	753	753	872	872	1016
<b>Maximum input current</b>						
Continuous (at 550 V) [A]	574	607	635	735	735	857
Continuous (at 575 V) [A]	549	607	607	704	704	819
Continuous (at 690 V) [A]	549	607	607	704	704	819
<b>Maximum number and size of cables per phase (E2h)</b>						
- Mains and motor without brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	6x240 (6x500 mcm)		6x240 (6x500 mcm)		6x240 (6x500 mcm)	
- Mains and motor with brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	5x240 (5x500 mcm)		5x240 (5x500 mcm)		5x240 (5x500 mcm)	
- Brake or regeneration [mm <sup>2</sup> (AWG)] <sup>1)</sup>	2x185 (2x350 mcm)		2x185 (2x350 mcm)		2x185 (2x350 mcm)	
<b>Maximum number and size of cables per phase (E4h)</b>						
- Mains and motor [mm <sup>2</sup> (AWG)] <sup>1)</sup>	6x240 (6x500 mcm)		6x240 (6x500 mcm)		6x240 (6x500 mcm)	
- Brake [mm <sup>2</sup> (AWG)] <sup>1)</sup>	2x185 (2x350 mcm)		2x185 (2x350 mcm)		2x185 (2x350 mcm)	
- Load share or regeneration [mm <sup>2</sup> (AWG)] <sup>1)</sup>	4x185 (4x350 mcm)		4x185 (4x350 mcm)		4x185 (4x350 mcm)	
Maximum external mains fuses [A] <sup>2)</sup>	800		1200		1200	
Estimated power loss at 600 V [W] <sup>3)4)</sup>	8069	9208	8543	10346	10319	12723
Estimated power loss at 690 V [W] <sup>3)4)</sup>	7848	8921	8363	10066	10060	12321
Efficiency <sup>4)</sup>	0.98		0.98		0.98	
Output frequency [Hz]	0–590		0–590		0–590	
Heat sink overtemperature trip [°C (°F)]	110 (230)		110 (230)		110 (230)	
Control card overtemperature trip [°C (°F)]	80 (176)		80 (176)		80 (176)	
Power card overtemperature trip [°C (°F)]	85 (185)		85 (185)		85 (185)	
Fan power card overtemperature trip [°C (°F)]	85 (185)		85 (185)		85 (185)	
Active in-rush card overtemperature trip [°C (°F)]	85 (185)		85 (185)		85 (185)	

**Table 9.4 Technical Specifications, Mains Supply 3x525–690 V AC**

1) American Wire Gauge.

2) For fuse ratings, see chapter 9.7 Fuses.

3) Typical power loss is at normal conditions and expected to be within ±15% (tolerance relates to variety in voltage and cable conditions.) These values are based on a typical motor efficiency (IE/IE3 border line). Lower efficiency motors add to the power loss in the drive. Applies for dimensioning of drive cooling. If the switching frequency is higher than the default setting, the power losses can increase. LCP and typical control card power consumptions are included. For power loss data according to EN 50598-2, refer to [www.danfoss.com/vltenergyefficiency](http://www.danfoss.com/vltenergyefficiency). Options and customer load can add up to 30 W to the losses, though usually a fully loaded control card and options for slots A and B each add only 4 W.

4) Measured using 5 m shielded motor cables at rated load and rated frequency. Efficiency measured at nominal current. For energy efficiency class, see chapter 9.4 Ambient Conditions. For part load losses, see [www.danfoss.com/vltenergyefficiency](http://www.danfoss.com/vltenergyefficiency).

## 9.2 Mains Supply

### Mains supply (L1, L2, L3)

Supply voltage	380–500 V $\pm$ 10%, 525–690 V $\pm$ 10%
----------------	--

#### Mains voltage low/mains voltage drop-out:

During low mains voltage or a mains drop-out, the drive continues until the DC-link voltage drops below the minimum stop level, which corresponds typically to 15% below the drive's lowest rated supply voltage. Power-up and full torque cannot be expected at mains voltage lower than 10% below the drive's lowest rated supply voltage.

Supply frequency	50/60 Hz $\pm$ 5%
Maximum imbalance temporary between mains phases	3.0% of rated supply voltage <sup>1)</sup>
True power factor ( $\lambda$ )	$\geq$ 0.9 nominal at rated load
Displacement power factor (cos $\Phi$ ) near unity	(>0.98)
Switching on input supply L1, L2, L3 (power ups)	Maximum 1 time/2 minutes
Environment according to EN60664-1	Overvoltage category III/pollution degree 2

The drive is suitable for use on a circuit capable of delivering up to 100kA short-circuit current rating (SCCR) at 480/600 V.

1) Calculations based on UL/IEC61800-3.

## 9.3 Motor Output and Motor Data

### Motor output (U, V, W)

Output voltage	0–100% of supply voltage
Output frequency	0–590 Hz <sup>1)</sup>
Switching on output	Unlimited
Ramp times	0.01–3600 s

1) Dependent on voltage and power.

### Torque characteristics

Starting torque (constant torque)	Maximum 150% for 60 s <sup>1)2)</sup>
Overload torque (constant torque)	maximum 150% for 60 s <sup>1)2)</sup>

1) Percentage relates to the drive's nominal current.

2) Once every 10 minutes.

## 9.4 Ambient Conditions

### Environment

E1h/E2h enclosure	IP21/Type 1, IP54/Type 12
E3h/E4h enclosure	IP20/Chassis
Vibration test (standard/ruggedized)	0.7 g/1.0 g
Relative humidity	5%-95% (IEC 721-3-3; Class 3K3 (non-condensing) during operation)
Aggressive environment (IEC 60068-2-43) H <sub>2</sub> S test	class Kd
Aggressive gases (IEC 60721-3-3)	class 3C3
Test method according to IEC 60068-2-43	H2S (10 days)
Ambient temperature (at SFAVM switching mode)	
- with derating	maximum 55 °C (maximum 131 °F) <sup>1)</sup>
- with full output power of typical EFF2 motors (up to 90% output current)	maximum 50 °C (maximum 122 °F) <sup>1)</sup>
- at full continuous FC output current	maximum 45 °C (maximum 113 °F) <sup>1)</sup>
Minimum ambient temperature during full-scale operation	0 °C (32 °F)
Minimum ambient temperature at reduced performance	10 °C (50 °F)
Temperature during storage/transport	-25 to +65/70 °C (13 to 149/158 °F)
Maximum altitude above sea level without derating	1000 m (3281 ft)
Maximum altitude above sea level with derating	3000 m (9842 ft)

1) For more information on derating, refer to the product-specific design guide.

EMC standards, Emission	EN 61800-3
-------------------------	------------

EMC standards, Immunity	EN 61800-3
Energy efficiency class <sup>2)</sup>	IE2

2) Determined according to EN 50598-2 at:

- Rated load.
- 90% rated frequency.
- Switching frequency factory setting.
- Switching pattern factory setting.

## 9.5 Cable Specifications

Cable lengths and cross-sections for control cables<sup>1)</sup>

Maximum motor cable length, shielded/armored	150 m (492 ft)
Maximum motor cable length, unshielded/unarmored	300 m (984 ft)
Maximum cross-section to motor, mains, load sharing, and brake	See chapter 9.1 Electrical Data
Maximum cross-section to control terminals, rigid wire	1.5 mm <sup>2</sup> /16 AWG (2x0.75 mm <sup>2</sup> )
Maximum cross-section to control terminals, flexible cable	1 mm <sup>2</sup> /18 AWG
Maximum cross-section to control terminals, cable with enclosed core	0.5 mm <sup>2</sup> /20 AWG
Minimum cross-section to control terminals	0.25 mm <sup>2</sup> /23 AWG

1) For power cables, see electrical tables in chapter 9.1 Electrical Data.

## 9

## 9.6 Control Input/Output and Control Data

Digital inputs

Programmable digital inputs	4 (6)
Terminal number	18, 19, 27 <sup>1)</sup> , 29 <sup>1)</sup> , 32, 33
Logic	PNP or NPN
Voltage level	0–24 V DC
Voltage level, logic 0 PNP	<5 V DC
Voltage level, logic 1 PNP	>10 V DC
Voltage level, logic 0 NPN	>19 V DC
Voltage level, logic 1 NPN	<14 V DC
Maximum voltage on input	28 V DC
Input resistance, R <sub>i</sub>	Approximately 4 kΩ

All digital inputs are galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.


1) Terminals 27 and 29 can also be programmed as outputs.

Analog inputs

Number of analog inputs	2
Terminal number	53, 54
Modes	Voltage or current
Mode select	Switches A53 and A54
Voltage mode	Switch A53/A54=(U)
Voltage level	-10 V to +10 V (scaleable)
Input resistance, R <sub>i</sub>	Approximately 10 kΩ
Maximum voltage	±20 V
Current mode	Switch A53/A54=(I)
Current level	0/4 to 20 mA (scaleable)
Input resistance, R <sub>i</sub>	Approximately 200 Ω
Maximum current	30 mA
Resolution for analog inputs	10 bit (+ sign)
Accuracy of analog inputs	Maximum error 0.5% of full scale
Bandwidth	100 Hz

The analog inputs are galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.



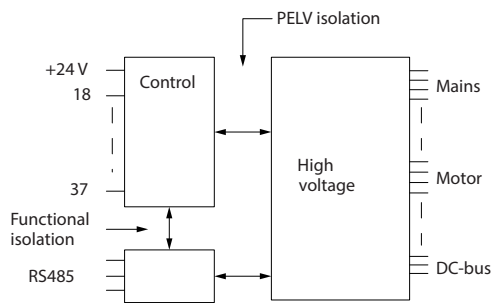

1306A117:10

Illustration 9.1 PELV Isolation

Pulse inputs

Programmable pulse inputs	2
Terminal number pulse	29, 33
Maximum frequency at terminal 29, 33	110 kHz (push-pull driven)
Maximum frequency at terminal 29, 33	5 kHz (open collector)
Minimum frequency at terminal 29, 33	4 Hz
Voltage level	See <i>Digital Inputs</i> in chapter 9.6 <i>Control Input/Output and Control Data</i>
Maximum voltage on input	28 V DC
Input resistance, $R_i$	Approximately 4 k $\Omega$
Pulse input accuracy (0.1–1 kHz)	Maximum error: 0.1% of full scale

Analog output

Number of programmable analog outputs	1
Terminal number	42
Current range at analog output	0/4-20 mA
Maximum resistor load to common at analog output	500 $\Omega$
Accuracy on analog output	Maximum error: 0.8% of full scale
Resolution on analog output	8 bit

The analog output is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

Control card, RS485 serial communication

Terminal number	68 (P, TX+, RX+), 69 (N, TX-, RX-)
Terminal number 61	Common for terminals 68 and 69

The RS485 serial communication circuit is functionally separated from other central circuits and galvanically isolated from the supply voltage (PELV).

Digital output

Programmable digital/pulse outputs	2
Terminal number	27, 29 <sup>1)</sup>
Voltage level at digital/frequency output	0–24 V
Maximum output current (sink or source)	40 mA
Maximum load at frequency output	1 k $\Omega$
Maximum capacitive load at frequency output	10 nF
Minimum output frequency at frequency output	0 Hz
Maximum output frequency at frequency output	32 kHz
Accuracy of frequency output	Maximum error: 0.1% of full scale
Resolution of frequency outputs	12 bit

1) Terminals 27 and 29 can also be programmed as inputs.

The digital output is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

**Control card, 24 V DC output**

Terminal number	12, 13
Maximum load	200 mA

The 24 V DC supply is galvanically isolated from the supply voltage (PELV), but has the same potential as the analog and digital inputs and outputs.

**Relay outputs**

Programmable relay outputs	2
Maximum cross-section to relay terminals	2.5 mm <sup>2</sup> (12 AWG)
Minimum cross-section to relay terminals	0.2 mm <sup>2</sup> (30 AWG)
Length of stripped wire	8 mm (0.3 in)
<b>Relay 01 terminal number</b>	1–3 (break), 1–2 (make)
Maximum terminal load (AC-1) <sup>1)</sup> on 1–2 (NO) (Resistive load) <sup>2)3)</sup>	400 V AC, 2 A
Maximum terminal load (AC-15) <sup>1)</sup> on 1–2 (NO) (Inductive load @ cosφ 0.4)	240 V AC, 0.2 A
Maximum terminal load (DC-1) <sup>1)</sup> on 1–2 (NO) (Resistive load)	80 V DC, 2 A
Maximum terminal load (DC-13) <sup>1)</sup> on 1–2 (NO) (Inductive load)	24 V DC, 0.1 A
Maximum terminal load (AC-1) <sup>1)</sup> on 1–3 (NC) (Resistive load)	240 V AC, 2 A
Maximum terminal load (AC-15) <sup>1)</sup> on 1–3 (NC) (Inductive load @ cosφ 0.4)	240 V AC, 0.2 A
Maximum terminal load (DC-1) <sup>1)</sup> on 1–3 (NC) (Resistive load)	50 V DC, 2 A
Maximum terminal load (DC-13) <sup>1)</sup> on 1–3 (NC) (Inductive load)	24 V DC, 0.1 A
Minimum terminal load on 1–3 (NC), 1–2 (NO)	24 V DC 10 mA, 24 V AC 2 mA
Environment according to EN 60664-1	Overvoltage category III/pollution degree 2
<b>Relay 02 terminal number</b>	4–6 (break), 4–5 (make)
Maximum terminal load (AC-1) <sup>1)</sup> on 4–5 (NO) (Resistive load) <sup>2)3)</sup>	400 V AC, 2 A
Maximum terminal load (AC-15) <sup>1)</sup> on 4–5 (NO) (Inductive load @ cosφ 0.4)	240 V AC, 0.2 A
Maximum terminal load (DC-1) <sup>1)</sup> on 4–5 (NO) (Resistive load)	80 V DC, 2 A
Maximum terminal load (DC-13) <sup>1)</sup> on 4–5 (NO) (Inductive load)	24 V DC, 0.1 A
Maximum terminal load (AC-1) <sup>1)</sup> on 4–6 (NC) (Resistive load)	240 V AC, 2 A
Maximum terminal load (AC-15) <sup>1)</sup> on 4–6 (NC) (Inductive load @ cosφ 0.4)	240 V AC, 0.2 A
Maximum terminal load (DC-1) <sup>1)</sup> on 4–6 (NC) (Resistive load)	50 V DC, 2 A
Maximum terminal load (DC-13) <sup>1)</sup> on 4–6 (NC) (Inductive load)	24 V DC, 0.1 A
Minimum terminal load on 4–6 (NC), 4–5 (NO)	24 V DC 10 mA, 24 V AC 2 mA
Environment according to EN 60664-1	Overvoltage category III/pollution degree 2

1) IEC 60947 part 4 and 5.

The relay contacts are galvanically isolated from the rest of the circuit by reinforced isolation (PELV).

2) Overvoltage Category II.

3) UL applications 300 V AC 2 A.

**Control card, +10 V DC output**

Terminal number	50
Output voltage	10.5 V ±0.5 V
Maximum load	25 mA

The 10 V DC supply is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

**Control characteristics**

Resolution of output frequency at 0–1000 Hz	±0.003 Hz
System response time (terminals 18, 19, 27, 29, 32, 33)	≤2 ms
Speed control range (open loop)	1:100 of synchronous speed
Speed accuracy (open loop)	30–4000 RPM: Maximum error of ±8 RPM

All control characteristics are based on a 4-pole asynchronous motor.

Control card performance

Scan interval	5 ms
---------------	------

Control card, USB serial communication

USB standard	1.1 (full speed)
USB plug	USB type B device plug

**NOTICE**

Connection to PC is carried out via a standard host/device USB cable.  
 The USB connection is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.  
 The USB connection is not galvanically isolated from ground. Use only isolated laptop/PC as connection to the USB connector on the drive or an isolated USB cable/converter.

9.7 Fuses

Fuses ensure that possible damage to the drive is limited to damages inside the unit. To ensure compliance with EN 50178, use identical Bussmann fuses as replacements. Refer to *Table 9.5*.

**NOTICE**

Use of fuses on the supply side is mandatory for IEC 60364 (CE) and NEC 2009 (UL) compliant installations.

Input voltage (V)	Bussmann part number
380–500	170M7309
525–690	170M7342

Table 9.5 Fuse Options

The fuses listed in *Table 9.5* are suitable for use on a circuit capable of delivering 100000 A<sub>rms</sub> (symmetrical), depending on the drive voltage rating. With the proper fusing, the drive short-circuit current rating (SCCR) is 100000 A<sub>rms</sub>. E1h and E2h drives are supplied with internal drive fusing to meet the 100 kA SCCR. E3h and E4h drives must be fitted with Type aR fuses to meet the 100 kA SCCR.

**NOTICE**


**DISCONNECT SWITCH**

All units ordered and supplied with a factory-installed disconnect switch require Class L branch circuit fusing to meet the 100 kA SCCR for the drive. If a circuit breaker is used, the SCCR rating is 42 kA. The specific Class L fuse is determined by the input voltage and power rating of the drive. The input voltage and power rating is found on the product nameplate. See *chapter 4.1 Items Supplied*.

Input voltage (V)	Power rating (kW)	Short circuit rating (A)	Required protection
380–500	315–400	42000	Circuit breaker
		100000	Class L fuse, 800 A
380–500	450–500	42000	Circuit breaker
		100000	Class L fuse, 1200 A
525–690	355–560	40000	Circuit breaker
		100000	Class L fuse, 800 A
525–690	630–710	42000	Circuit breaker
		100000	Class L fuse, 1200 A

9.8 Enclosure Dimensions


9.8.1 E1h Exterior Dimensions

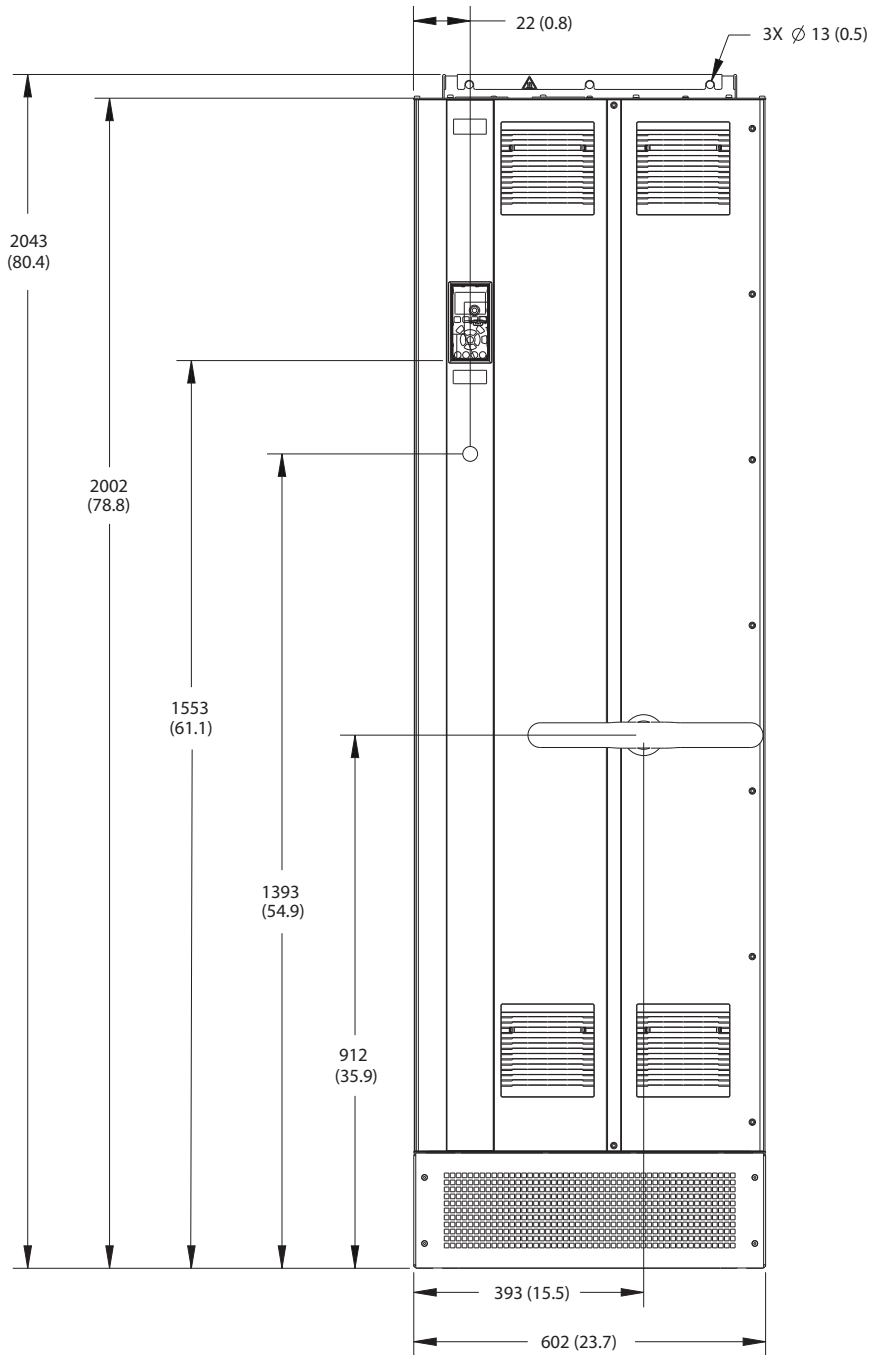

130BF648:10

9


Illustration 9.2 Front View of E1h

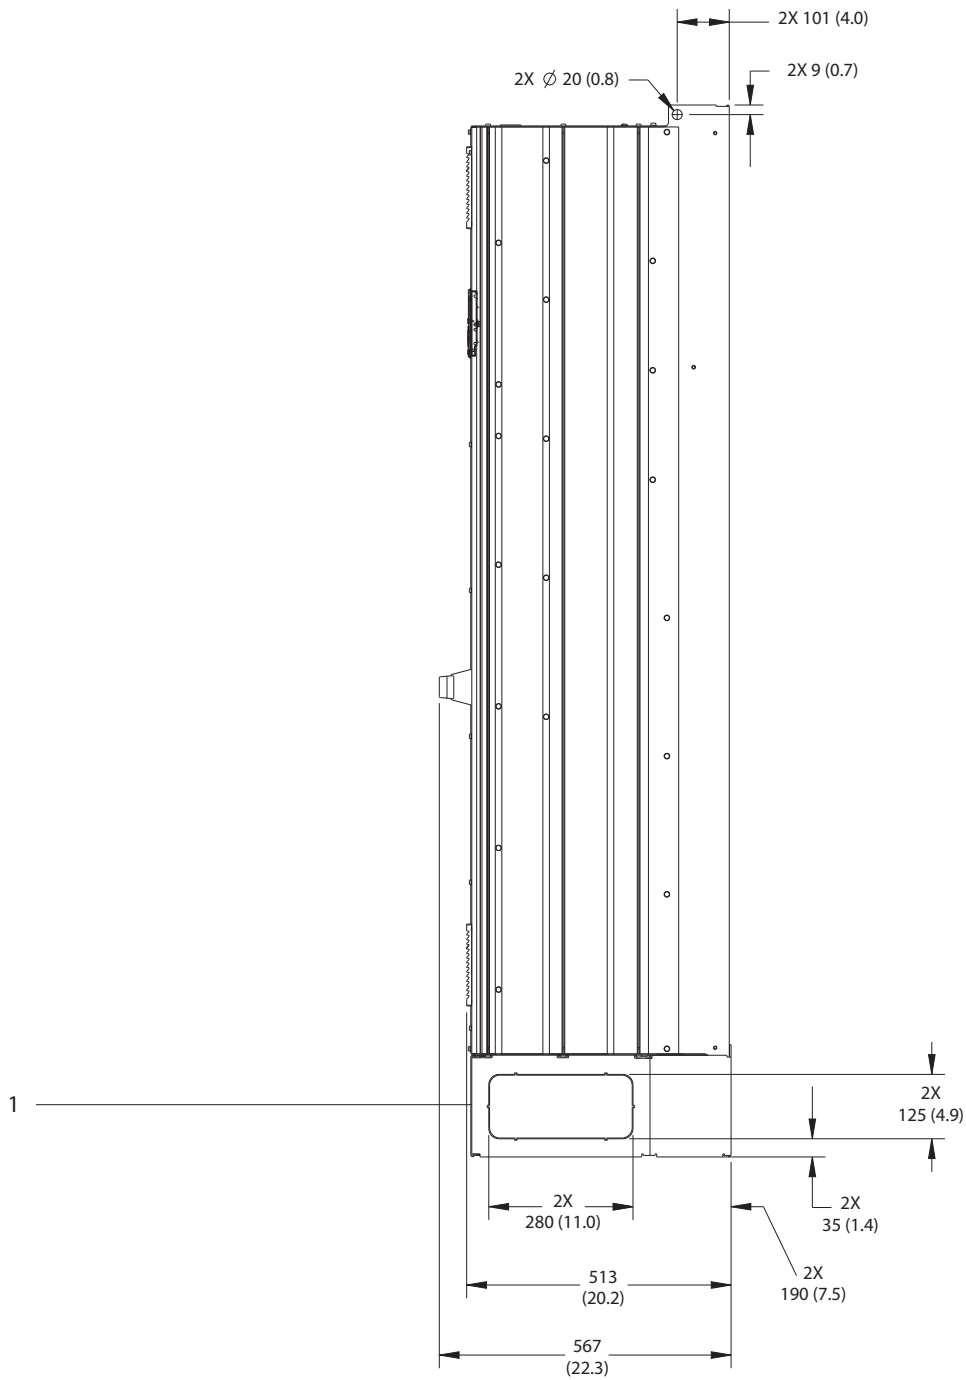

9

1	Knockout panel
---	----------------



Illustration 9.3 Side View of E1h

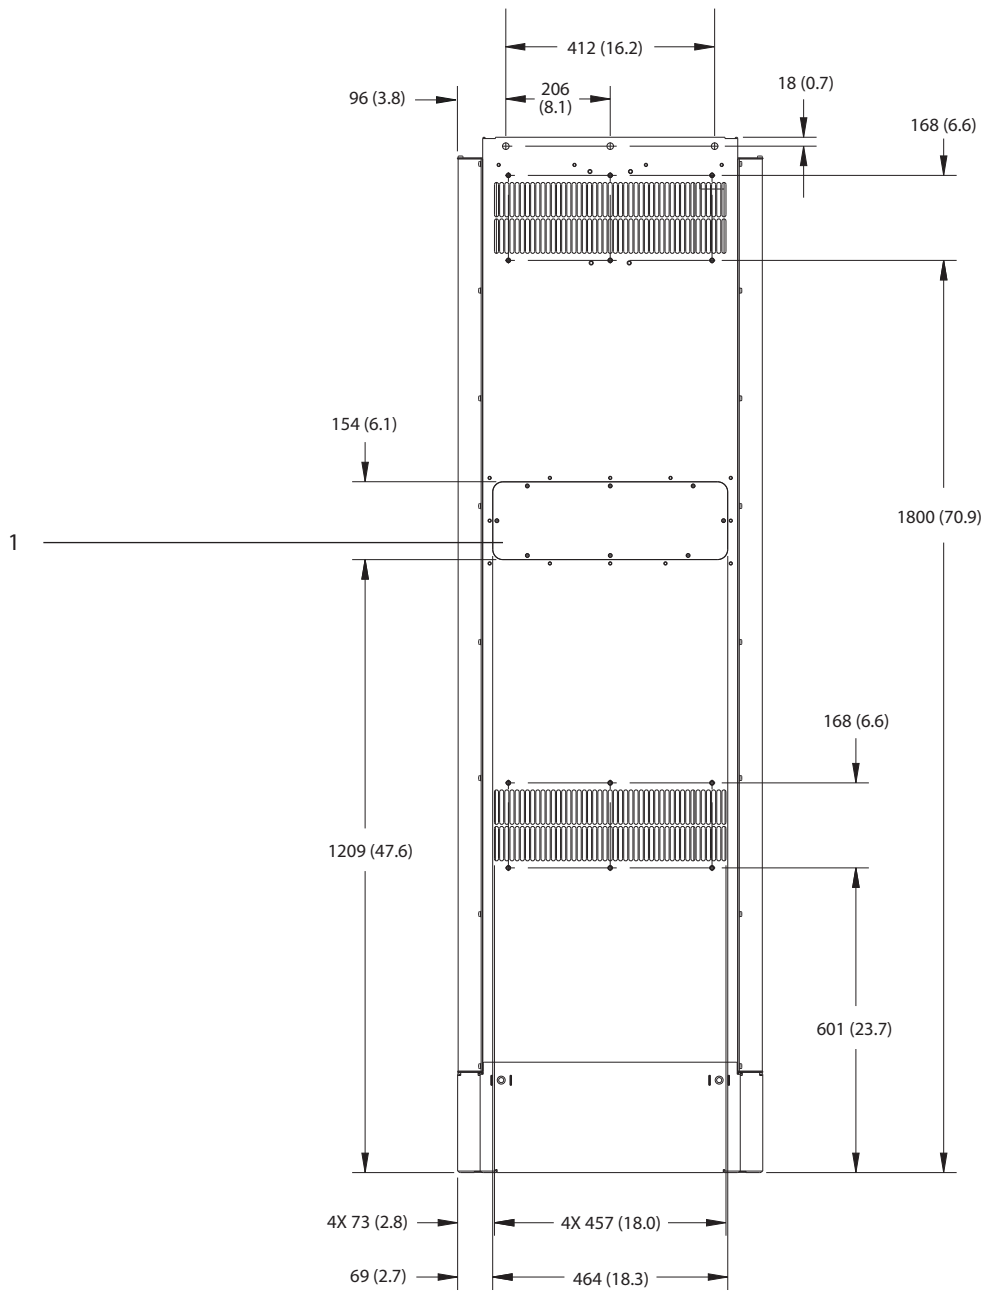

1	Heat sink access panel (optional)
---	-----------------------------------

Illustration 9.4 Back View of E1h


130BF651.10

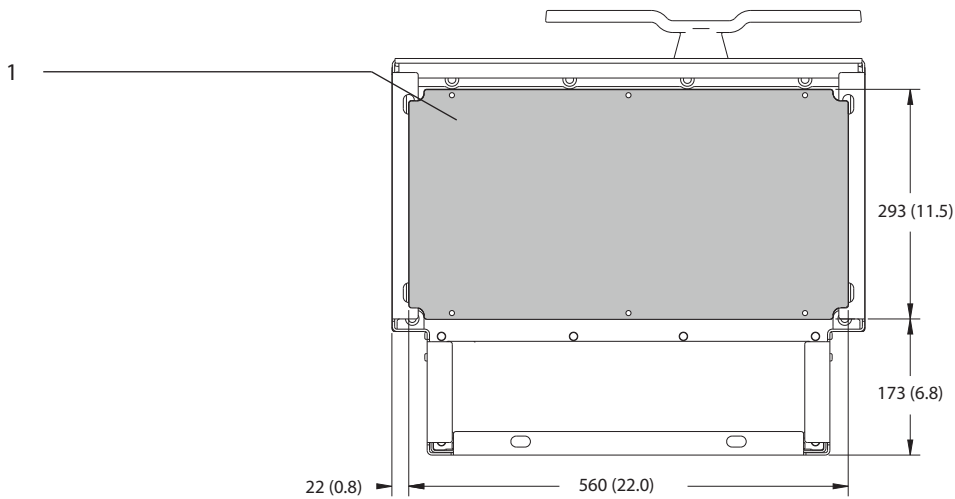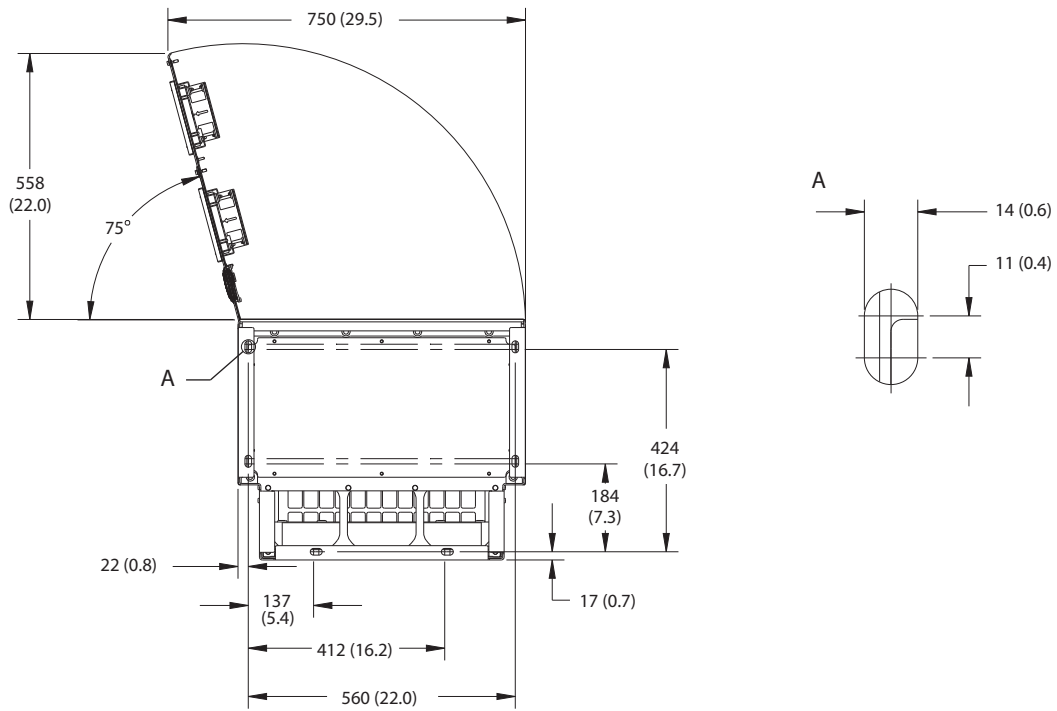

1	Gland plate
---	-------------

Illustration 9.5 Door Clearance and Gland Plate Dimensions for E1h

9.8.2 E2h Exterior Dimensions

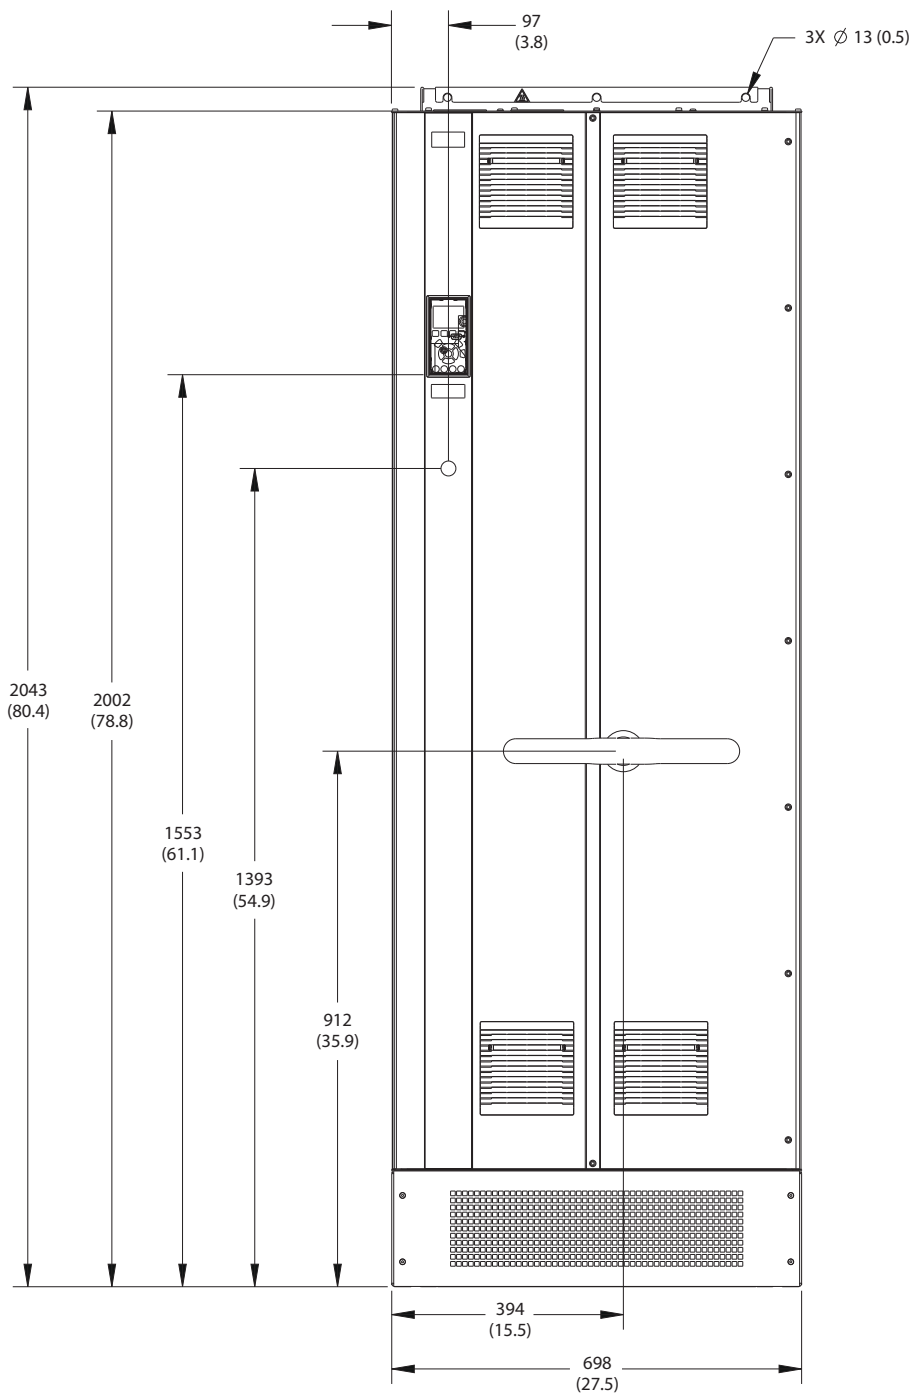


130BF654.10

9


Illustration 9.6 Front View of E2h



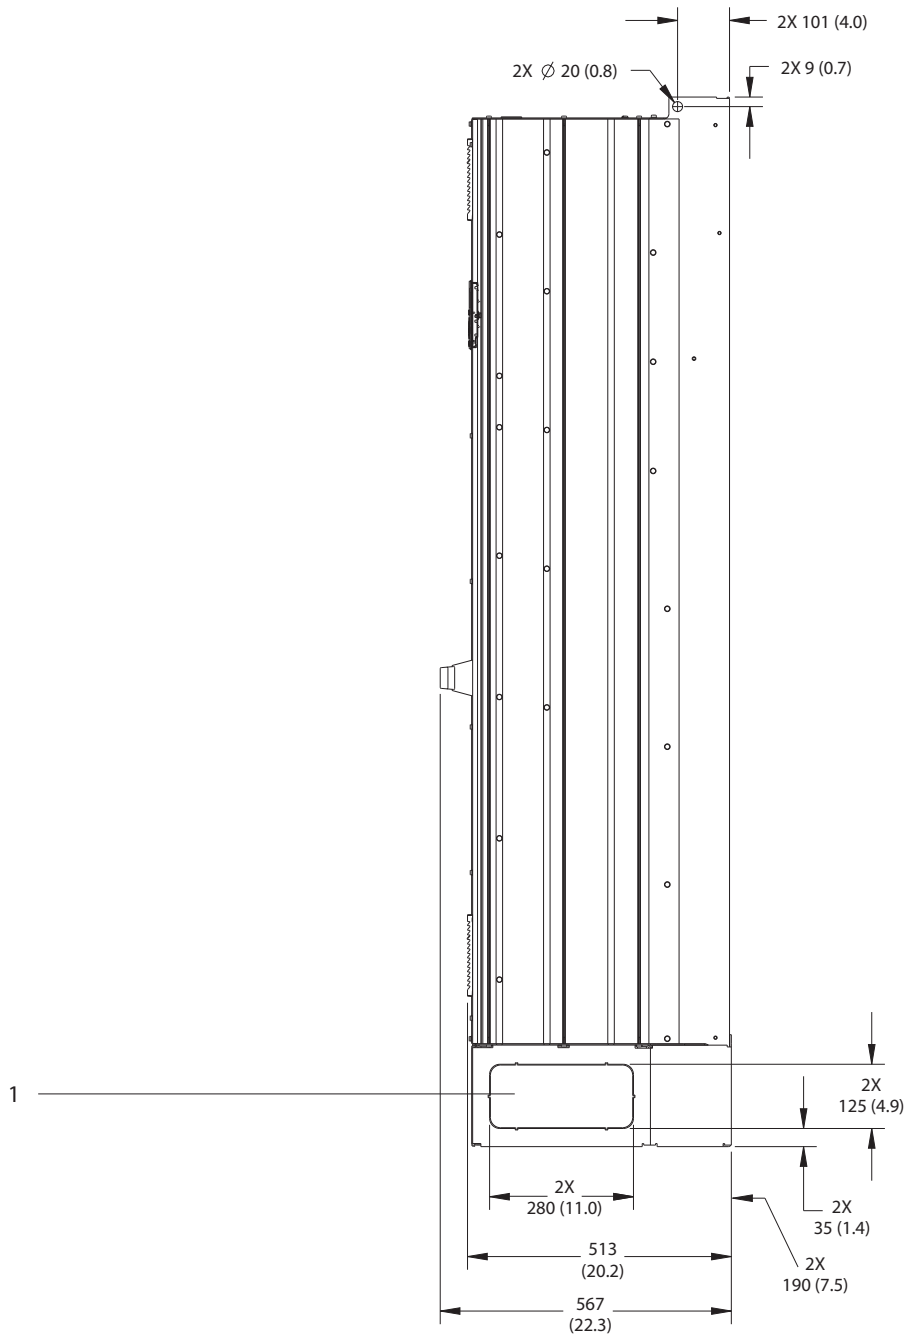

1	Knockout panel
---	----------------

Illustration 9.7 Side View of E2h


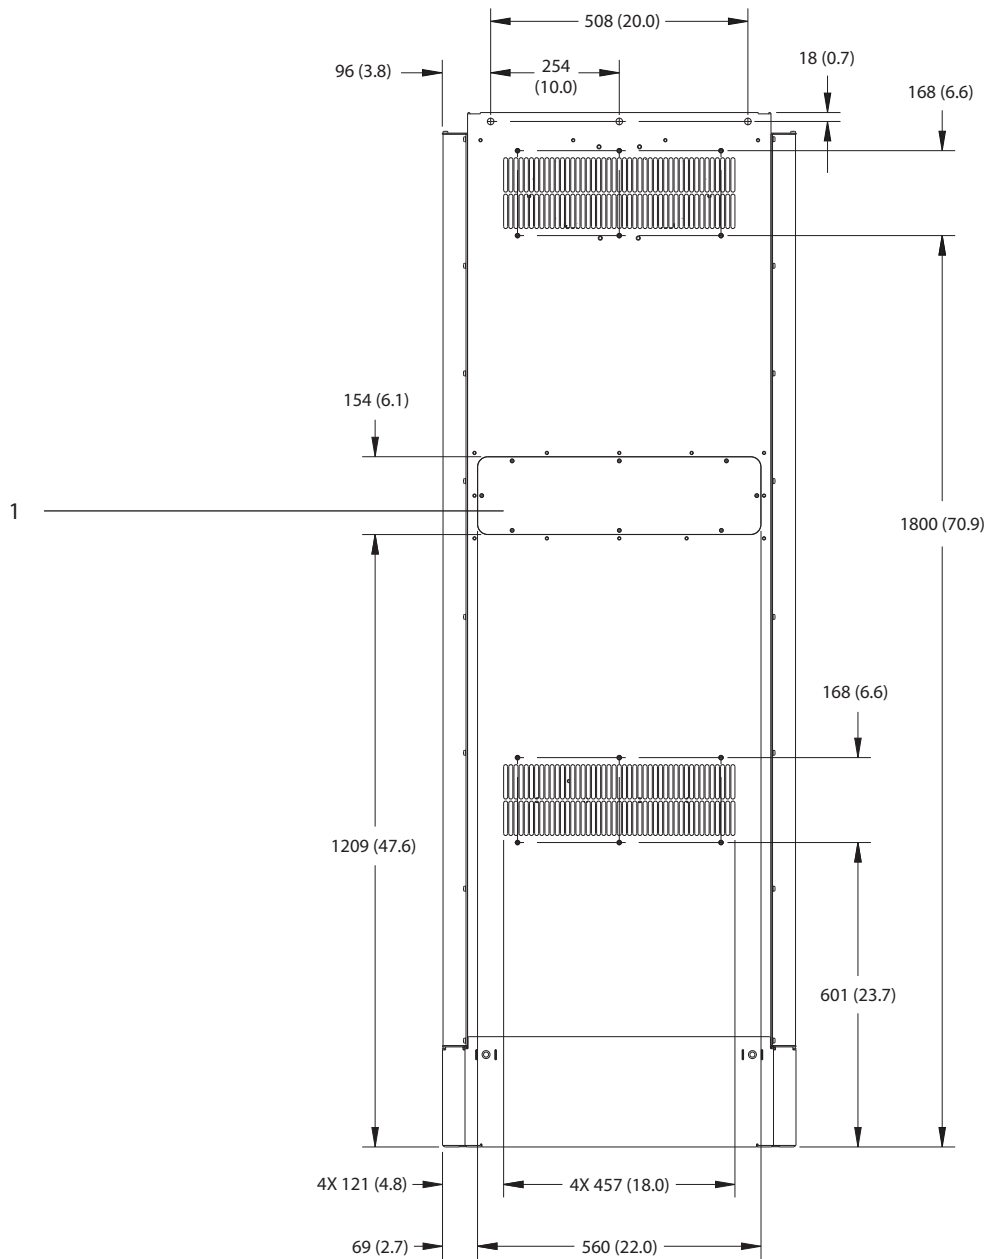


9

1	Heat sink access panel (optional)
---	-----------------------------------

Illustration 9.8 Back View of E2h

1308F652.10

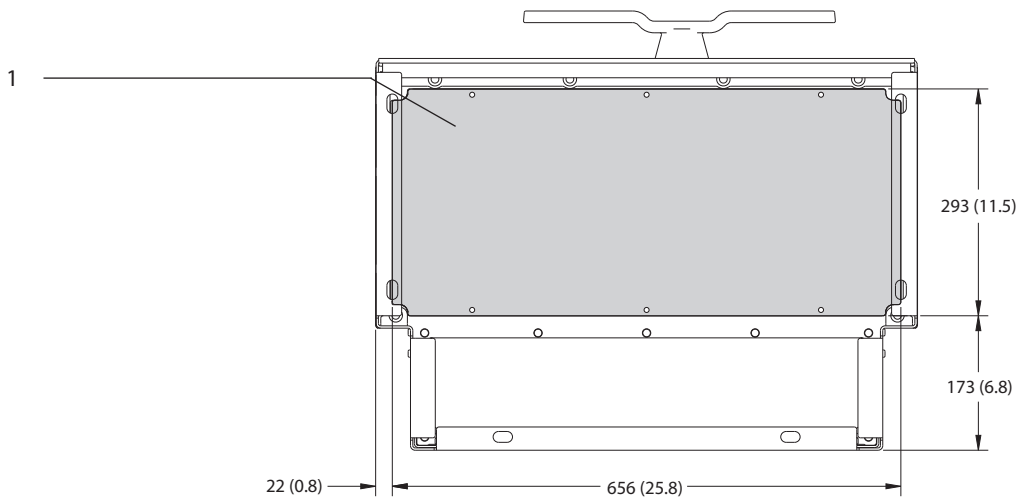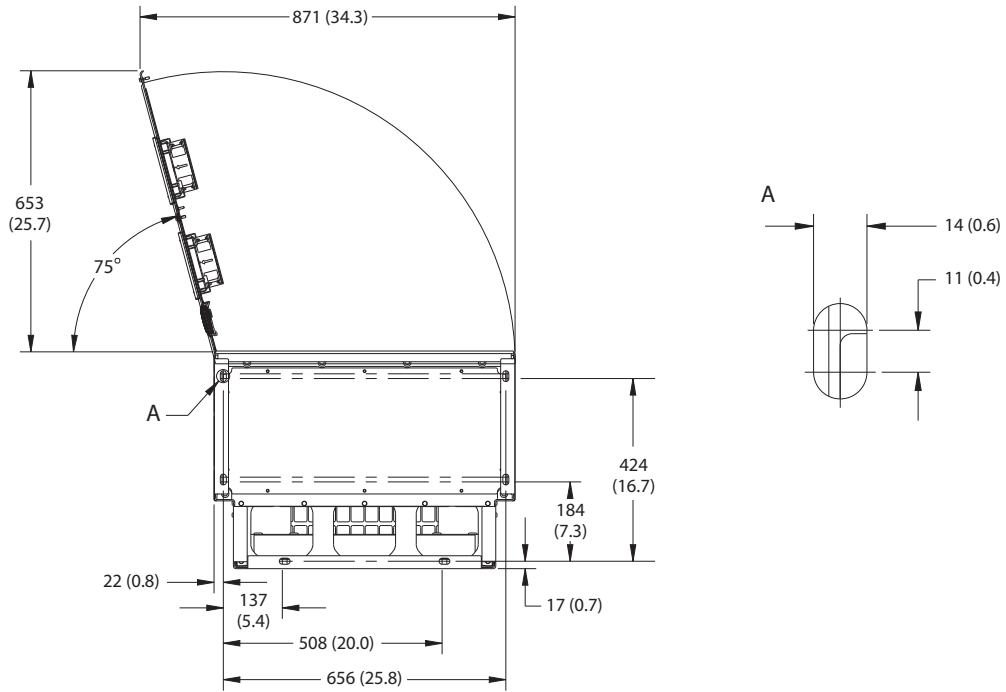

1	Gland plate
---	-------------

Illustration 9.9 Door Clearance and Gland Plate Dimensions for E2h

9.8.3 E3h Exterior Dimensions


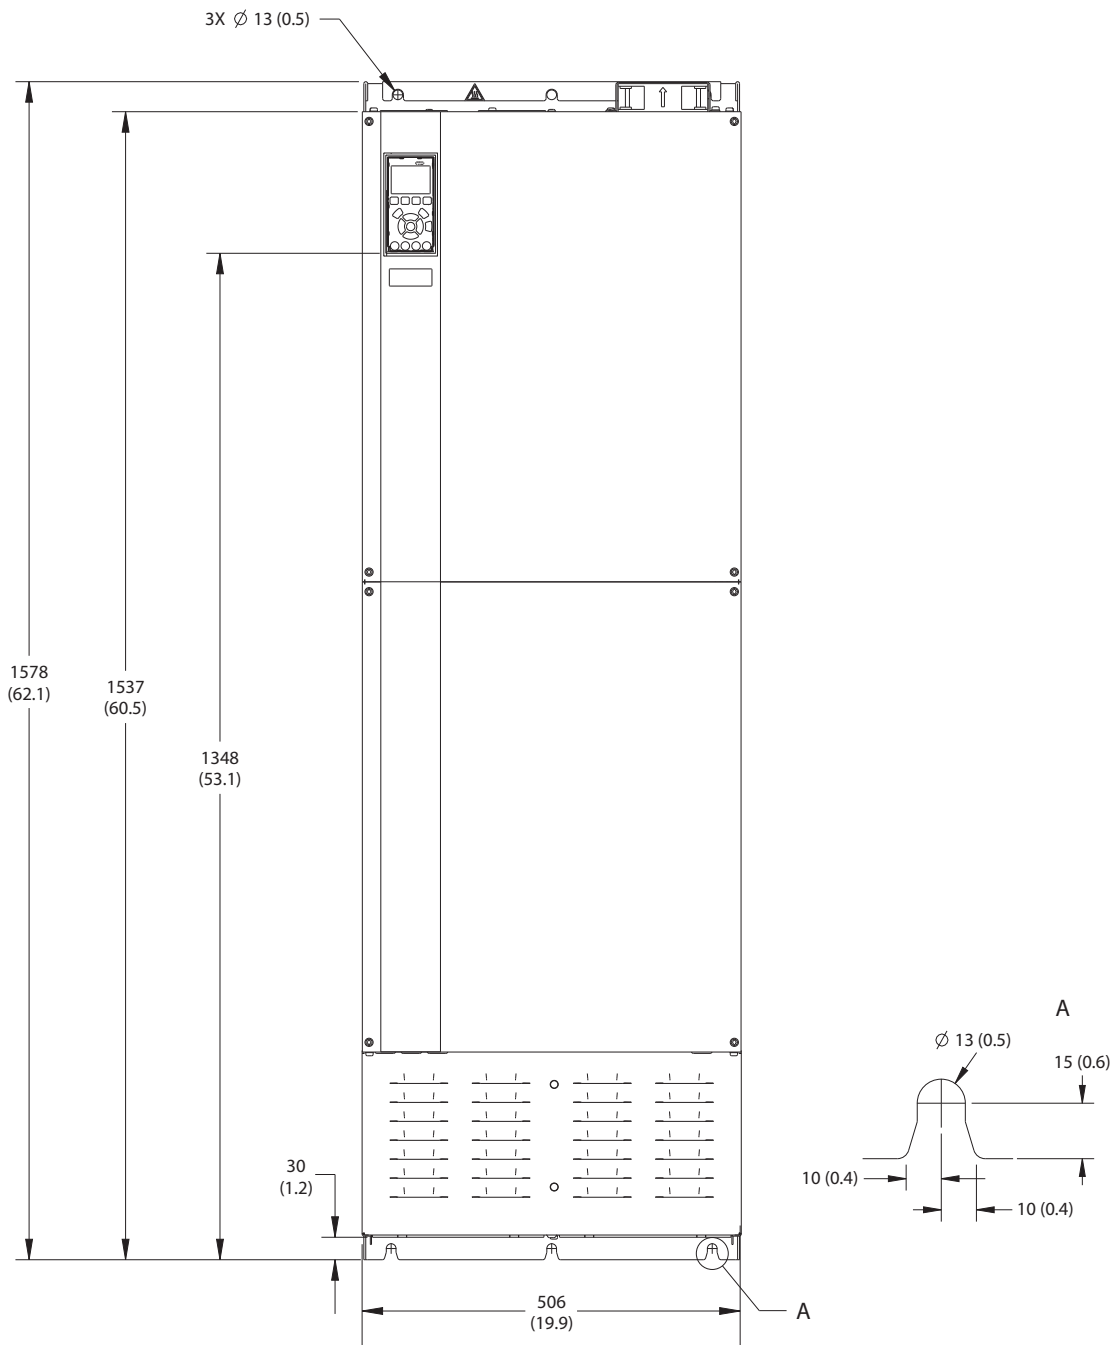



Illustration 9.10 Front View of E3h

130BF658.10

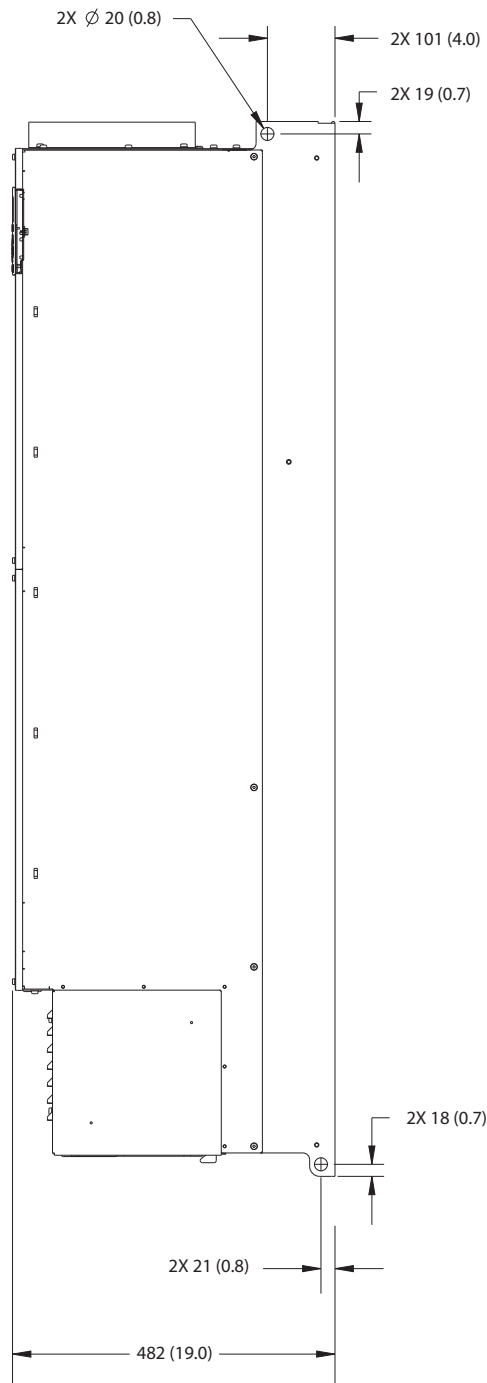

9



Illustration 9.11 Side View of E3h

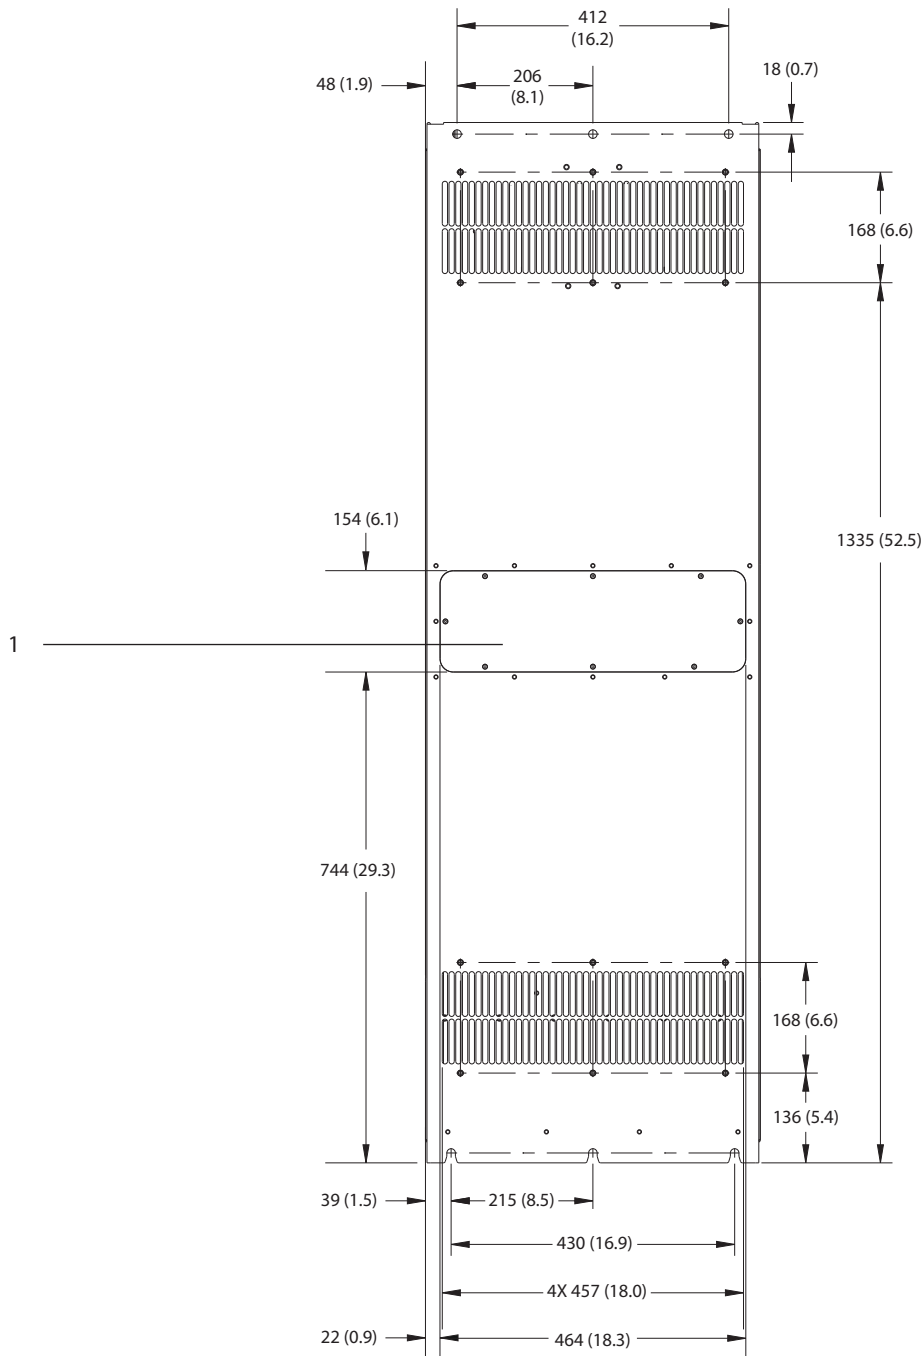

9

1	Heat sink access panel (optional)
---	-----------------------------------


Illustration 9.12 Back View of E3h

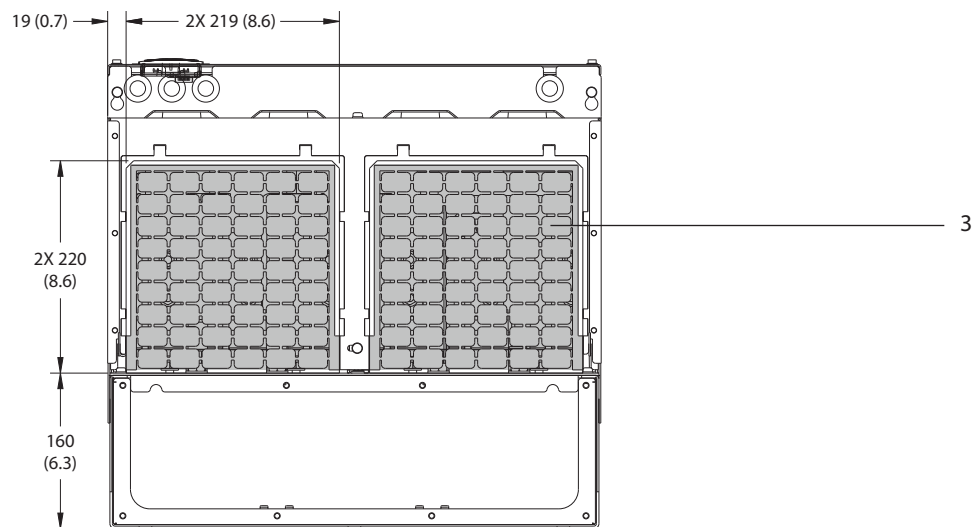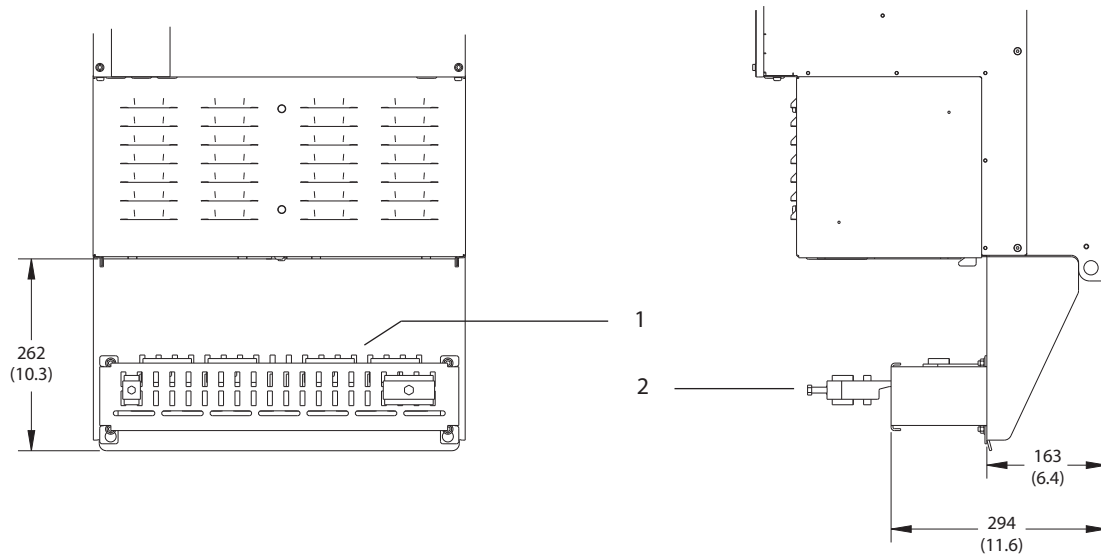

1	RFI shield termination (standard with RFI option)
2	Cable/EMC clamp
3	Gland plate

Illustration 9.13 RFI Shield Termination and Gland Plate Dimensions for E3h

9.8.4 E4h Exterior Dimensions

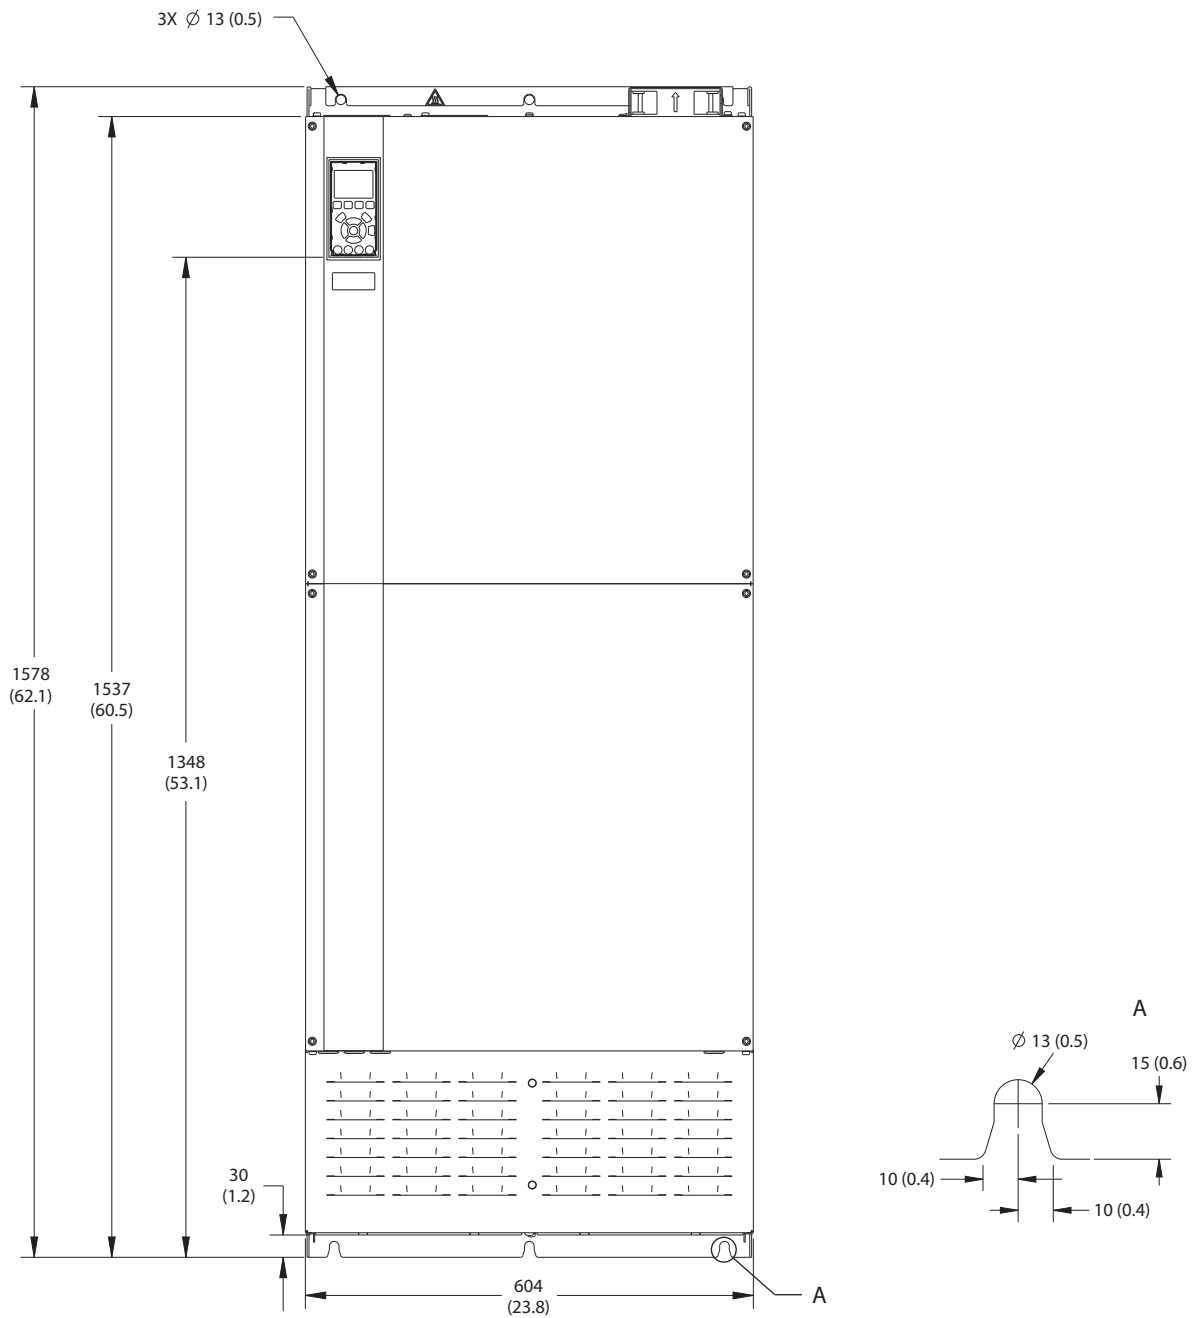


130BF664.10

9

Illustration 9.14 Front View of E4h




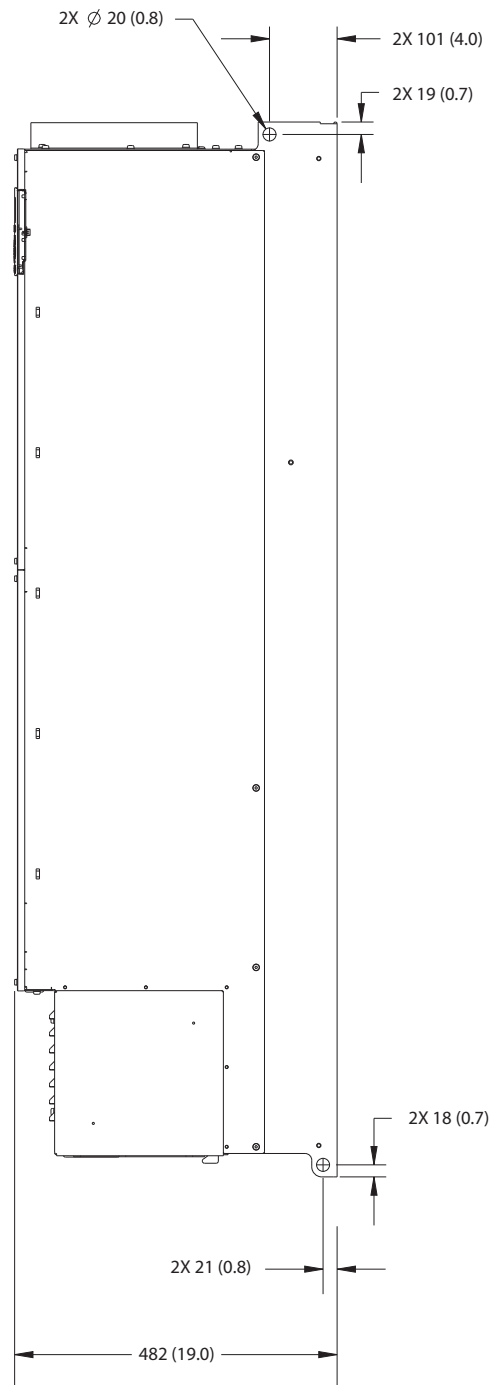

130BF666.10

9

Illustration 9.15 Side View of E4h


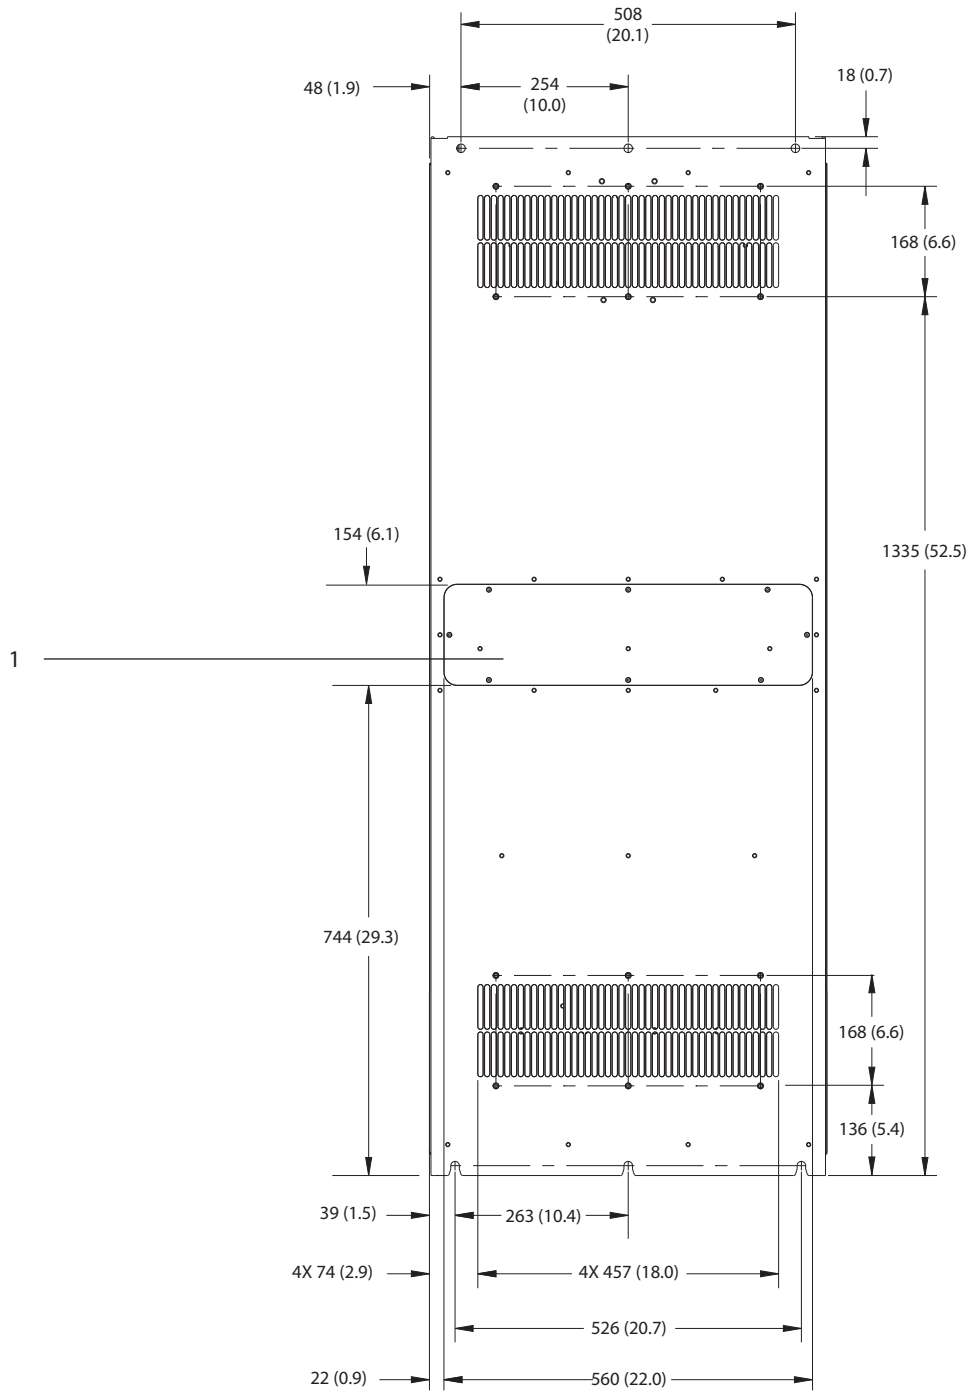


9

1	Heat sink access panel (optional)
---	-----------------------------------

Illustration 9.16 Back View of E4h


130BF667.10

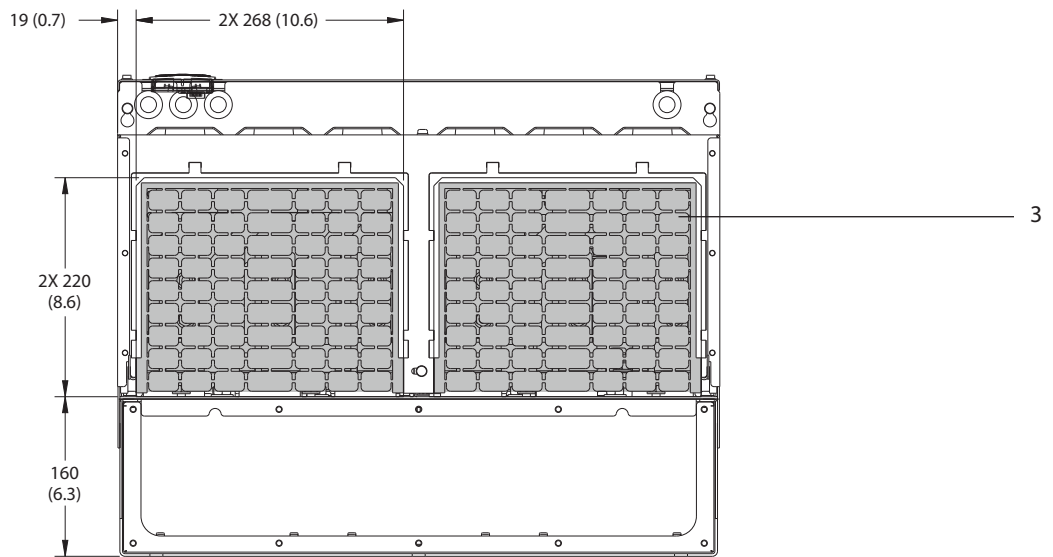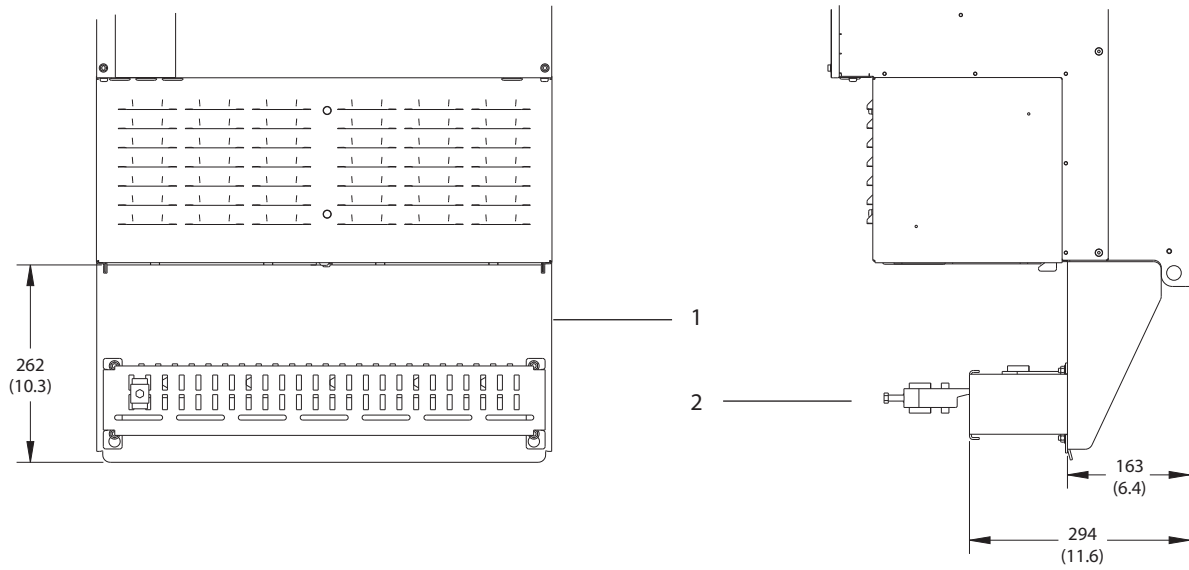

1	RFI shield termination (standard with RFI option)
2	Cable/EMC clamp
3	Gland plate

Illustration 9.17 RFI Shield Termination and Gland Plate Dimensions for E4h


9.9 Enclosure Airflow

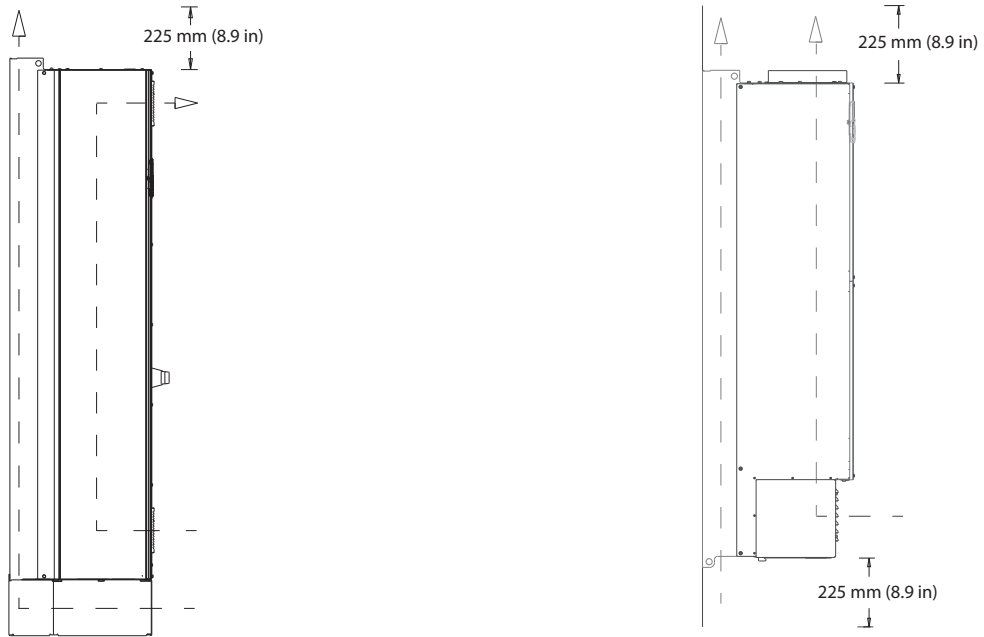

130BF699.10

Illustration 9.18 Airflow for E1h/E2h (Left) and E3h/E4h (Right)

9

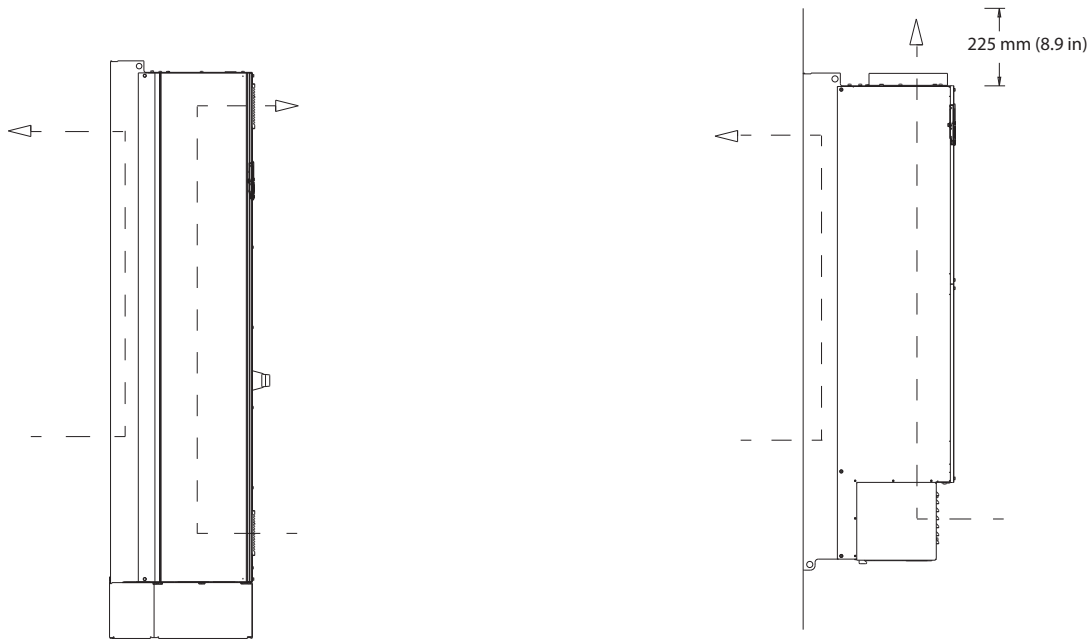

130BF700.10

Illustration 9.19 Airflow Using Back-wall Cooling Kits on E1h/E2h (Left) and E3h/E4h (Right)

## 9.10 Fastener Torque Ratings

Apply the correct torque when tightening fasteners in the locations that are listed in *Table 9.6*. Too low or too high torque when fastening an electrical connection results in a bad electrical connection. To ensure correct torque, use a torque wrench.

Location	Bolt size	Torque [Nm (in-lb)]
Mains terminals	M10/M12	19 (168)/37 (335)
Motor terminals	M10/M12	19 (168)/37 (335)
Ground terminals	M8/M10	9.6 (84)/19.1 (169)
Brake terminals	M8	9.6 (84)
Load sharing terminals	M10/M12	19 (168)/37 (335)
Regeneration terminals (Enclosures E1h/E2h)	M8	9.6 (84)
Regeneration terminals (Enclosures E3h/E4h)	M10/M12	19 (168)/37 (335)
Relay terminals	–	0.5 (4)
Door/panel cover	M5	2.3 (20)
Gland plate	M5	2.3 (20)
Heat sink access panel	M5	3.9 (35)
Serial communication cover	M5	2.3 (20)

**Table 9.6 Fastener Torque Ratings**

# 10 Appendix

## 10.1 Abbreviations and Conventions

°C	Degrees Celsius
°F	Degrees Fahrenheit
Ω	Ohm
AC	Alternating current
AEO	Automatic energy optimization
ACP	Application control processor
AMA	Automatic motor adaptation
AWG	American wire gauge
CPU	Central processing unit
CSIV	Customer-specific initialization values
CT	Current transformer
DC	Direct current
DVM	Digital voltmeter
EEPROM	Electrically erasable programmable read-only memory
EMC	Electromagnetic compatibility
EMI	Electromagnetic interference
ESD	Electrostatic discharge
ETR	Electronic thermal relay
$f_{M,N}$	Nominal motor frequency
HF	High frequency
HVAC	Heating, ventilation, and air conditioning
Hz	Hertz
$I_{LIM}$	Current limit
$I_{INV}$	Rated inverter output current
$I_{M,N}$	Nominal motor current
$I_{VLT,MAX}$	Maximum output current
$I_{VLT,N}$	Rated output current supplied by the drive
IEC	International electrotechnical commission
IGBT	Insulated-gate bipolar transistor
I/O	Input/output
IP	Ingress protection
kHz	Kilohertz
kW	Kilowatt
$L_d$	Motor d-axis inductance
$L_q$	Motor q-axis inductance
LC	Inductor-capacitor
LCP	Local control panel
LED	Light-emitting diode
LOP	Local operation pad
mA	Milliamp
MCB	Miniature circuit breakers
MCO	Motion control option
MCP	Motor control processor
MCT	Motion control tool
MDCIC	Multi-drive control interface card

mV	Millivolts
NEMA	National Electrical Manufacturers Association
NTC	Negative temperature coefficient
$P_{M,N}$	Nominal motor power
PCB	Printed circuit board
PE	Protective earth
PELV	Protective extra low voltage
PID	Proportional integral derivative
PLC	Programmable logic controller
P/N	Part number
PROM	Programmable read-only memory
PS	Power section
PTC	Positive temperature coefficient
PWM	Pulse width modulation
$R_s$	Stator resistance
RAM	Random-access memory
RCD	Residual current device
Regen	Regenerative terminals
RFI	Radio frequency interference
RMS	Root means square (cyclically alternating electric current)
RPM	Revolutions per minute
SCR	Silicon controlled rectifier
SMPS	Switch mode power supply
S/N	Serial number
STO	Safe Torque Off
$T_{LIM}$	Torque limit
$U_{M,N}$	Nominal motor voltage
V	Volt
VVC	Voltage vector control
$X_h$	Motor main reactance

Table 10.1 Abbreviations, Acronyms, and Symbols

### Conventions

- Numbered lists indicate procedures.
- Bullet lists indicate other information and description of illustrations.
- Italicized text indicates:
  - Cross reference
  - Link
  - Footnote
  - Parameter name
  - Parameter group name
  - Parameter option
- All dimensions are in mm (inch).

## 10.2 International/North American Default Parameter Settings

Setting *parameter 0-03 Regional Settings* to [0] *International* or [1] *North America* changes the default settings for some parameters. *Table 10.2* lists those parameters that are effected.

Parameter	International default parameter value	North American default parameter value
<i>Parameter 0-03 Regional Settings</i>	International	North America
<i>Parameter 0-71 Date Format</i>	DD-MM-YYYY	MM/DD/YYYY
<i>Parameter 0-72 Time Format</i>	24 h	12 h
<i>Parameter 1-20 Motor Power [kW]</i>	1)	1)
<i>Parameter 1-21 Motor Power [HP]</i>	2)	2)
<i>Parameter 1-22 Motor Voltage</i>	230 V/400 V/575 V	208 V/460 V/575 V
<i>Parameter 1-23 Motor Frequency</i>	50 Hz	60 Hz
<i>Parameter 3-03 Maximum Reference</i>	50 Hz	60 Hz
<i>Parameter 3-04 Reference Function</i>	Sum	External/Preset
<i>Parameter 4-13 Motor Speed High Limit [RPM]<sup>3)</sup></i>	1500 RPM	1800 RPM
<i>Parameter 4-14 Motor Speed High Limit [Hz]<sup>4)</sup></i>	50 Hz	60 Hz
<i>Parameter 4-19 Max Output Frequency</i>	100 Hz	120 Hz
<i>Parameter 4-53 Warning Speed High</i>	1500 RPM	1800 RPM
<i>Parameter 5-12 Terminal 27 Digital Input</i>	Coast inverse	External interlock
<i>Parameter 5-40 Function Relay</i>	Alarm	No alarm
<i>Parameter 6-15 Terminal 53 High Ref./Feedb. Value</i>	50	60
<i>Parameter 6-50 Terminal 42 Output</i>	Speed 0-HighLim	Speed 4-20 mA
<i>Parameter 14-20 Reset Mode</i>	Manual reset	Infinite auto reset
<i>Parameter 22-85 Speed at Design Point [RPM]<sup>3)</sup></i>	1500 RPM	1800 RPM
<i>Parameter 22-86 Speed at Design Point [Hz]</i>	50 Hz	60 Hz
<i>Parameter 24-04 Fire Mode Max Reference</i>	50 Hz	60 Hz

**Table 10.2 International/North American Default Parameter Settings**

1) *Parameter 1-20 Motor Power [kW]* is only visible when *parameter 0-03 Regional Settings* is set to [0] *International*.

2) *Parameter 1-21 Motor Power [HP]*, is only visible when *parameter 0-03 Regional Settings* is set to [1] *North America*.

3) This parameter is only visible when *parameter 0-02 Motor Speed Unit* is set to [0] *RPM*.

4) This parameter is only visible when *parameter 0-02 Motor Speed Unit* is set to [1] *Hz*.

## 10.3 Parameter Menu Structure

<b>0-0*</b>	<b>Operation / Display</b>	Motor Construction	1-10	Start Speed [RPM]	3-00	Reference Range	3-93	Maximum Limit
<b>0-0*</b>	<b>Basic Settings</b>	Motor Model	1-11	Start Speed [Hz]	3-01	Reference/Feedback Unit	3-94	Minimum Limit
0-01	Language	Damping Gain	1-14	Start Current	3-02	Minimum Reference	3-95	Ramp Delay
0-02	Motor Speed Unit	Low Speed Filter Time Const.	1-15	<b>Stop Adjustments</b>	3-03	Maximum Reference	<b>4-3*</b>	<b>Limits / Warnings</b>
0-03	Regional Settings	High Speed Filter Time Const.	1-16	Function at Stop	3-04	Reference Function	4-1*	<b>Motor Limits</b>
0-04	Operating State at Power-up (Hand)	Voltage filter time const.	1-17	Min Speed for Function at Stop [RPM]	3-10	References	4-10	Motor Speed Direction
0-09	Performance Monitor	Min. Current at No Load	1-18	Min Speed for Function at Stop [Hz]	3-11	Preset Reference	4-11	Motor Speed Low Limit [RPM]
<b>0-1*</b>	<b>Set-up Operations</b>	Motor Data	1-20	Min Speed for Function at Stop [Hz]	3-12	Jog Speed [Hz]	4-12	Motor Speed Low Limit [Hz]
0-10	Active Set-up	Motor Power [kW]	1-21	Min Speed for Function at Stop [Hz]	3-13	Catch up/slow Down Value	4-13	Motor Speed High Limit [RPM]
0-11	Edit Set-up	Motor Power [HP]	1-22	Precise Stop Function	3-14	Reference Site	4-14	Motor Speed High Limit [Hz]
0-12	This Set-up Linked to	Motor Voltage	1-23	Precise Stop Counter Value	3-15	Preset Relative Reference	4-16	Torque Limit Motor Mode
0-13	Readout: Linked Set-ups	Motor Frequency	1-24	Precise Stop Compensation	3-16	Reference Resource 1	4-17	Torque Limit Generator Mode
0-14	Readout: Edit Set-ups / Channel	Motor Current	1-25	Delay	3-17	Reference Resource 2	4-18	Current Limit
0-15	Readout: actual setup	Motor Nominal Speed	1-26	<b>Motor Temperature</b>	3-18	Reference Resource 3	4-19	Max Output Frequency
<b>0-2*</b>	<b>LCP Display</b>	Motor Cont. Rated Torque	1-29	Motor Thermal Protection	3-19	Relative Scaling Reference Resource	<b>4-2*</b>	<b>Limit Factors</b>
0-20	Display Line 1.1 Small	Automatic Motor Adaptation (AMA)	1-30	Motor External Fan	3-20	Jog Speed [RPM]	4-20	Torque Limit Factor Source
0-21	Display Line 1.2 Small	Adv. Motor Data	1-31	Motor External Fan	3-21	Ramp 1	4-21	Speed Limit Factor Source
0-22	Display Line 1.3 Small	Stator Resistance (Rs)	1-32	KTY Thermistor Resource	3-22	Ramp 1 Type	4-22	Brake Check Limit Factor Source
0-23	Display Line 2 Large	Stator Resistance (Rr)	1-33	KTY Threshold level	3-23	Ramp 1 Ramp Up Time	4-23	Brake Check Limit Factor Source
0-24	Display Line 3 Large	Stator Leakage Reactance (X1)	1-34	ATEX ETR cur.lim. speed reduction	3-24	Ramp 1 Ramp Down Time	<b>4-3*</b>	<b>Motor Speed Mon.</b>
0-25	My Personal Menu	Rotor Leakage Reactance (X2)	1-35	ATEX ETR interpole points current	3-25	Ramp 1 S-ramp Ratio at Accel. Start	4-30	Motor Feedback Loss Function
<b>0-3*</b>	<b>LCP Custom Readout</b>	Main Reactance (Xh)	1-36	<b>Brakes</b>	3-26	Ramp 1 S-ramp Ratio at Accel. End	4-31	Motor Feedback Speed Error
0-30	Unit for User-defined Readout	Iron Loss Resistance (Rfe)	1-37	<b>2-0*</b> DC-Brake	3-27	Ramp 1 S-ramp Ratio at Decel. Start	4-32	Motor Feedback Loss Timeout
0-31	Min Value of User-defined Readout	d-axis Inductance (Ld)	1-38	2-00 DC Hold Current	3-28	Ramp 1 S-ramp Ratio at Decel. End	4-34	Tracking Error Function
0-32	Max Value of User-defined Readout	d-axis Inductance (Lq)	1-39	2-01 DC Brake Current	3-29	<b>Ramp 2</b>	4-35	Tracking Error
0-33	Source for User-defined Readout	Motor Poles	1-40	2-02 DC Braking Time	3-30	Ramp 2 Type	4-36	Tracking Error Timeout
0-37	Display Text 1	Back EMF at 1000 RPM	1-41	2-03 DC Brake Cut In Speed [RPM]	3-31	Ramp 2 Ramp Up Time	4-37	Tracking Error Ramping
0-38	Display Text 2	Motor Angle Offset	1-42	2-04 DC Brake Cut In Speed [Hz]	3-32	Ramp 2 Ramp Down Time	4-38	Tracking Error Ramping Timeout
0-39	Display Text 3	d-axis Inductance Sat. (LdSat)	1-44	2-05 Maximum Reference	3-33	Ramp 2 S-ramp Ratio at Accel. Start	4-39	Tracking Error After Ramping Timeout
<b>0-4*</b>	<b>LCP Keypad</b>	q-axis Inductance Sat. (LqSat)	1-45	2-06 Parking Current	3-34	Ramp 2 S-ramp Ratio at Accel. End	<b>4-4*</b>	<b>Speed Monitor</b>
0-40	[Hand on] Key on LCP	Torque Calibration	1-46	2-07 Position Detection Gain	3-35	Ramp 2 S-ramp Ratio at Decel. Start	4-43	Motor Speed Monitor Function
0-41	[Off] Key on LCP	Inductance Sat. Point	1-47	<b>2-1*</b> Brake Energy Funct.	3-36	Ramp 2 S-ramp Ratio at Decel. End	4-44	Motor Speed Monitor Max
0-42	[Auto on] Key on LCP	Load Indep. Setting	1-48	2-10 Brake Function	3-37	<b>Ramp 3</b>	4-45	Motor Speed Monitor Timeout
0-43	[Reset] Key on LCP	Motor Magnetisation at Zero Speed	1-50	2-11 Brake Resistor (ohm)	3-38	Ramp 3 Type	<b>4-5*</b>	<b>Adj. Warnings</b>
0-44	[Off/Reset] Key on LCP	Min Speed Normal Magnetising [RPM]	1-51	2-12 Brake Power Limit (kW)	3-39	Ramp 3 Ramp up Time	4-50	Warning Current Low
0-45	[Drive Bypass] Key on LCP	Min Speed Normal Magnetising [Hz]	1-52	2-13 Brake Power Monitoring	3-40	Ramp 3 Ramp down Time	4-51	Warning Current High
<b>0-5*</b>	<b>Copy/Save</b>	Model Shift Frequency	1-53	2-15 Brake Check	3-41	Ramp 3 S-ramp Ratio at Accel. Start	4-52	Warning Speed Low
0-50	LCP Copy	Voltage reduction in fieldweakening	1-54	2-16 AC brake Max. Current	3-42	Ramp 3 S-ramp Ratio at Accel. End	4-53	Warning Speed High
0-51	Set-up Copy	U/f Characteristic - U	1-55	2-17 Over-voltage Control	3-43	Ramp 3 S-ramp Ratio at Decel. Start	4-54	Warning Reference Low
<b>0-6*</b>	<b>Password</b>	U/f Characteristic - F	1-56	2-18 Brake Check Condition	3-44	Ramp 3 S-ramp Ratio at Decel. End	4-55	Warning Reference High
0-60	Main Menu Password	Flying Start Test Pulses Current	1-58	2-19 Over-voltage Gain	3-45	<b>Ramp 4</b>	4-56	Warning Feedback Low
0-61	Access to Main Menu w/o Password	Flying Start Test Pulses Frequency	1-59	<b>2-2*</b> Mechanical Brake	3-46	Ramp 4 Type	4-57	Warning Feedback High
0-65	Quick Menu Password	Load Depen. Setting	1-60	2-20 Release Brake Current	3-47	Ramp 4 Ramp up Time	4-58	Missing Motor Phase Function
0-66	Access to Quick Menu w/o Password	Low Speed Load Compensation	1-61	2-21 Activate Brake Speed [RPM]	3-48	Ramp 4 Ramp Down Time	4-59	Motor Check At Start
0-67	Bus Password Access	High Speed Load Compensation	1-62	2-22 Activate Brake Speed [Hz]	3-49	Ramp 4 S-ramp Ratio at Accel. Start	<b>4-6*</b>	<b>Speed Bypass</b>
0-68	Safety Parameters Password	Slip Compensation	1-63	2-23 Activate Brake Delay	3-50	Ramp 4 S-ramp Ratio at Accel. End	4-60	Bypass Speed From [RPM]
0-69	Password Protection of Safety Parameters	Slip Compensation Time Constant	1-64	2-24 Stop Delay	3-51	Ramp 4 S-ramp Ratio at Decel. Start	4-61	Bypass Speed From [Hz]
<b>1-1*</b>	<b>Load and Motor</b>	Resonance Damping	1-65	2-25 Brake Release Time	3-52	Ramp 4 S-ramp Ratio at Decel. End	4-62	Bypass Speed To [RPM]
1-00	Configuration Mode	Resonance Damping Time Constant	1-66	2-26 Torque Ref	3-53	<b>Other Ramps</b>	4-63	Bypass Speed To [Hz]
1-01	Motor Control Principle	Min. Current at Low Speed	1-67	2-27 Torque Ramp Up Time	3-54	Jog Ramp Time	<b>5-3*</b>	<b>Digital In/Out</b>
1-02	Flux Motor Feedback Source	Load Type	1-68	2-28 Gain Boost Factor	3-55	Quick Stop Ramp Type	5-0*	<b>Digital I/O mode</b>
1-03	Torque Characteristics	Motor Inertia	1-69	2-29 Torque Ramp Down Time	3-56	Quick Stop Ramp Ratio	5-00	Digital I/O Mode
1-04	Overload Mode	System Inertia	1-70	<b>2-3*</b> Adv. Mech Brake	3-57	Quick Stop S-ramp Ratio at Decel. Start	5-01	Terminal 27 Mode
1-05	Local Mode Configuration	<b>Start Adjustments</b>	1-71	2-30 Position P Start Proportional Gain	3-58	Quick Stop S-ramp Ratio at Decel. End	5-02	Terminal 29 Mode
1-06	Clockwise Direction	PM Start Mode	1-72	2-31 Speed PID Start Proportional Gain	3-59	Ramp Lowpass Filter Time	<b>5-1*</b>	<b>Digital Inputs</b>
1-07	Motor Angle Offset Adjust	Start Delay	1-73	2-32 Speed PID Start Integral Time	3-60	Step Size	5-10	Terminal 18 Digital Input
<b>1-1*</b>	<b>Special Settings</b>	Flying Start	1-73	<b>3-3*</b> Reference / Ramps	3-90	Ramp Time	5-11	Terminal 19 Digital Input
					3-92	Power Restore	5-12	Terminal 27 Digital Input
							5-13	Terminal 29 Digital Input



5-14	Terminal 32 Digital Input	6-11	Terminal 53 High Voltage	7-06	Speed PID Lowpass Filter Time	8-30	Protocol	9-72	ProfibusDriverReset
5-15	Terminal 33 Digital Input	6-12	Terminal 53 Low Current	7-07	Speed PID Feedback Gear Ratio	8-31	Address	9-75	DO Identification
5-16	Terminal X30/2 Digital Input	6-13	Terminal 53 High Current	7-08	Speed PID Feed Forward Factor	8-32	FC Port Baud Rate	9-80	Defined Parameters (1)
5-17	Terminal X30/3 Digital Input	6-14	Terminal 53 Low Ref./Feedb. Value	7-09	Speed PID Error Correction w/ Ramp	8-33	Parity / Stop Bits	9-81	Defined Parameters (2)
5-18	Terminal X30/4 Digital Input	6-15	Terminal 53 High Ref./Feedb. Value	7-1*	<b>Torque PI Ctrl.</b>	8-34	Estimated cycle time	9-82	Defined Parameters (3)
5-19	Terminal 37 Safe Stop	6-16	Terminal 53 Filter Time Constant	7-10	Torque PI Feedback Source	8-35	Minimum Response Delay	9-83	Defined Parameters (4)
5-20	Terminal X46/1 Digital Input	6-2*	<b>Analog Input 2</b>	7-12	Torque PI Proportional Gain	8-36	Max Response Delay	9-84	Defined Parameters (5)
5-21	Terminal X46/3 Digital Input	6-20	Terminal 54 Low Voltage	7-13	Torque PI Integration Time	8-37	Max Inter-Char Delay	9-85	Defined Parameters (6)
5-22	Terminal X46/5 Digital Input	6-21	Terminal 54 High Voltage	7-16	Torque PI Lowpass Filter Time	8-4*	<b>FC MC protocol set</b>	9-90	Changed Parameters (1)
5-23	Terminal X46/7 Digital Input	6-22	Terminal 54 Low Current	7-18	Torque PI Feed Forward Factor	8-41	Telegram Selection	9-91	Changed Parameters (2)
5-24	Terminal X46/9 Digital Input	6-23	Terminal 54 High Current	7-19	Current Controller Rise Time	8-40	Parameters for Signals	9-92	Changed Parameters (3)
5-25	Terminal X46/11 Digital Input	6-24	Terminal 54 Low Ref./Feedb. Value	7-2*	<b>Process Ctrl. Feedb</b>	8-42	PCD Write Configuration	9-93	Changed Parameters (4)
5-26	Terminal X46/13 Digital Input	6-25	Terminal 54 High Ref./Feedb. Value	7-20	Process CL Feedback 1 Resource	8-43	PCD Read Configuration	9-94	Changed Parameters (5)
5-3*	<b>Digital Outputs</b>	6-26	Terminal 54 Filter Time Constant	7-22	Process CL Feedback 2 Resource	8-45	BTM Transaction Command	9-99	Profibus Revision Counter
5-30	Terminal 27 Digital Output	6-3*	<b>Analog Input 3</b>	7-3*	<b>Process PID Ctrl.</b>	8-46	BTM Transaction Status	<b>10-*</b>	<b>CAN Fieldsbus</b>
5-31	Terminal 29 Digital Output	6-30	Terminal X30/11 High Voltage	7-30	Process PID Normal/ Inverse Control	8-47	BTM Timeout	10-0*	<b>Common Settings</b>
5-32	Term X30/6 Digi Out (MCB 101)	6-31	Terminal X30/11 Low Voltage	7-31	Process PID Anti Windup	8-48	BTM Maximum Errors	10-00	CAN Protocol
5-33	Term X30/7 Digi Out (MCB 101)	6-34	Term. X30/11 Low Ref./Feedb. Value	7-32	Process PID Start Speed	8-49	BTM Error Log	10-01	Baud Rate Select
5-4*	<b>Relays</b>	6-35	Term. X30/11 High Ref./Feedb. Value	7-33	Process PID Proportional Gain	8-5*	<b>Digital/Bus</b>	10-02	MAC ID
5-40	Function Relay	6-36	Term. X30/11 Filter Time Constant	7-34	Process PID Integral Time	8-50	Coasting Select	10-05	Readout Transmit Error Counter
5-41	On Delay, Relay	6-4*	<b>Analog Input 4</b>	7-35	Process PID Differentiation Time	8-51	Quick Stop Select	10-06	Readout Receive Error Counter
5-42	Off Delay, Relay	6-40	Terminal X30/12 Low Voltage	7-36	Process PID Diff. Gain Limit	8-52	DC Brake Select	10-07	Readout Bus Off Counter
5-5*	<b>Pulse Input</b>	6-41	Terminal X30/12 High Voltage	7-40	Process PID I-part Reset	8-55	Reversing Select	10-1*	<b>DeviceNet</b>
5-50	Term. 29 Low Frequency	6-44	Term. X30/12 Low Ref./Feedb. Value	7-41	Process PID Output Neg. Clamp	8-57	Set-up Select	10-10	Process Data Type Selection
5-51	Term. 29 High Frequency	6-45	Term. X30/12 High Ref./Feedb. Value	7-42	Process PID Output Pos. Clamp	8-57	Profdrive OFF2 Select	10-11	Process Data Config Write
5-52	Term. 29 Low Ref./Feedb. Value	6-46	Term. X30/12 Filter Time Constant	7-43	Process PID Gain Scale at Min. Ref.	8-58	Profdrive OFF3 Select	10-12	Process Data Config Read
5-53	Term. 29 High Ref./Feedb. Value	6-5*	<b>Analog Output 1</b>	7-44	Process PID Gain Scale at Max. Ref.	8-8*	<b>FC Port Diagnostics</b>	10-13	Warning Parameter
5-54	Pulse Filter Time Constant #29	6-50	Terminal 42 Output	7-45	Process PID Feed Fwd Resource	8-81	Bus Error Count	10-14	Net Reference
5-55	Term. 33 Low Frequency	6-51	Terminal 42 Output Min Scale	7-46	Process PID Feed Fwd Resource	8-82	Slave Messages Rcvd	10-15	Net Control
5-56	Term. 33 High Frequency	6-52	Terminal 42 Output Max Scale	7-47	Process PID Feed Fwd Normal/ Inv. Ctrl.	8-83	Slave Error Count	10-2*	<b>COS Filters</b>
5-57	Term. 33 Low Ref./Feedb. Value	6-53	Term 42 Output Bus Ctrl	7-48	PCD Feed Forward	8-90	Bus Jog 1 Speed	10-20	COS Filter 1
5-58	Term. 33 High Ref./Feedb. Value	6-54	Terminal 42 Output Timeout Preset	7-49	Process PID Output Normal/ Inv. Ctrl.	8-90	Bus Jog 2 Speed	10-21	COS Filter 2
5-59	Pulse Filter Time Constant #33	6-55	Analog Output Filter	7-5*	<b>Adv. Process PID II</b>	8-91	<b>PROFIdrive</b>	10-22	COS Filter 3
5-6*	<b>Pulse Output</b>	6-6*	<b>Analog Output 2</b>	7-48	Process PID Extended PID	9-00	Setpoint	10-23	COS Filter 4
5-60	Terminal 27 Pulse Output Variable	6-60	Terminal X30/8 Output	7-49	Process PID Feed Fwd Ramp up	9-07	Actual Value	10-3*	<b>Parameter Access</b>
5-62	Pulse Output Max Freq #27	6-61	Terminal X30/8 Min. Scale	7-50	Process PID Feed Fwd Ramp down	9-15	PCD Write Configuration	10-30	Array Index
5-63	Terminal 29 Pulse Output Variable	6-62	Terminal X30/8 Max. Scale	7-51	Process PID Ref. Filter Time	9-16	Node Address	10-31	Store Data Values
5-65	Pulse Output Max Freq #29	6-63	Terminal X30/8 Bus Control	7-52	Process PID Fb. Filter Time	9-18	Telegram Selection	10-32	DeviceNet Revision
5-66	Terminal X30/6 Pulse Output Variable	6-64	Terminal X30/8 Output Timeout Preset	7-53	Process PID Fwd Filter Time	9-19	Parameters for Signals	10-33	Store Always
5-68	Pulse Output Max Freq #X30/6	6-7*	<b>Analog Output 3</b>	7-56	Process PID Fwd Filter Time	9-22	Parameter Edit	10-34	DeviceNet Product Code
5-7*	<b>24V Encoder Input</b>	6-70	Terminal X45/1 Output	8-0*	<b>Comm. and Options</b>	9-23	Process Control	10-39	DeviceNet F Parameters
5-70	Term 32/33 Pulses Per Revolution	6-71	Terminal X45/1 Min. Scale	8-01	<b>General Settings</b>	9-23	Fault Message Counter	10-5*	<b>CANopen</b>
5-71	Term 32/33 Encoder Direction	6-72	Terminal X45/1 Max. Scale	8-02	Control Site	9-23	Fault Code	10-50	Process Data Config Write.
5-8*	<b>I/O Options</b>	6-73	Terminal X45/1 Bus Control	8-02	Control Word Source	9-27	Process Control	10-51	Process Data Config Read.
5-80	AHF Cap Reconnect Delay	6-74	Terminal X45/1 Output Timeout Preset	8-03	Control Word Timeout Time	9-28	Fault Situation Counter	<b>12-*</b>	<b>Ethernet</b>
5-9*	<b>Bus Controlled</b>	6-8*	<b>Analog Output 4</b>	8-04	Control Word Timeout Function	9-44	Actual Baud Rate	12-00	<b>IP Settings</b>
5-90	Digital & Relay Bus Control	6-80	Terminal X45/3 Output	8-05	End-of-Timeout Function	9-45	Profile Number	12-00	IP Address Assignment
5-93	Pulse Out #27 Bus Control	6-81	Terminal X45/3 Min. Scale	8-06	Reset Control Word Timeout	9-47	Status Word 1	12-01	IP Address
5-94	Pulse Out #27 Timeout Preset	6-82	Terminal X45/3 Max. Scale	8-07	Diagnosis Trigger	9-52	Profibus Warning Word	12-03	Subnet Mask
5-95	Pulse Out #29 Bus Control	6-83	Terminal X45/3 Bus Control	8-08	Readout Filtering	9-63	Actual Baud Rate	12-03	Default Gateway
5-96	Pulse Out #29 Timeout Preset	7-0*	<b>Controllers</b>	8-1	<b>Ctrl. Word Settings</b>	9-64	Device Identification	12-04	DHCP Server
5-97	Pulse Out #X30/6 Bus Control	7-00	Speed PID Ctrl.	8-10	Control Word Profile	9-64	Profile Number	12-05	Lease Expires
5-98	Pulse Out #X30/6 Timeout Preset	7-01	Speed PID Feedback Source	8-13	Configurable Status Word STW	9-65	Control Word 1	12-06	Name Servers
6-0*	<b>Analog In/Out</b>	7-02	Speed PID Droop	8-14	Configurable Control Word CTW	9-67	Status Word 1	12-07	Domain Name
6-00	Live Zero Timeout Time	7-03	Speed PID Proportional Gain	8-17	Configurable Alarm and Warningword	9-70	Edit Set-up	12-08	Host Name
6-01	Live Zero Timeout Function	7-04	Speed PID Integration Time	8-19	Product Code	9-71	Profibus Save Data Values	12-09	Physical Address
6-1*	<b>Analog Input 1</b>	7-05	Speed PID Differentiation Time	8-3*	<b>FC Port Settings</b>	9-71	Profibus Save Data Values	12-1*	<b>Ethernet Link Parameters</b>
6-10	Terminal 53 Low Voltage		Speed PID Diff. Gain Limit					12-10	Link Status
								12-11	Link Duration

12-12	Auto Negotiation	14-5*	Environment	15-6*	Option Ident	16-40	Logging Buffer Full
12-13	Link Speed	14-50	RFI Filter	15-60	Option Mounted	16-41	LCP Bottom Statusline
12-14	Link Duplex	14-51	DC-Link Compensation	15-61	Option SW Version	16-45	Motor Phase U Current
12-18	Supervisor MAC	14-52	Fan Control	15-62	Option Ordering No	16-46	Motor Phase V Current
12-19	Supervisor IP Addr.	14-53	Fan Monitor	15-63	Option Serial No	16-47	Motor Phase W Current
12-2*	Process Data	14-55	Output Filter	15-70	Option in Slot A	16-48	Speed Ref. After Ramp [RPM]
12-20	Control Instance	13-10	Comparator Operand	15-71	Slot A Option SW Version	16-49	Current Fault Source
12-21	Process Data Config Write	13-11	Comparator Operator	15-72	Option in Slot B	16-5*	Ref. & Feeds.
12-22	Process Data Config Read	13-12	Comparator Value	15-73	Slot B Option SW Version	16-50	External Reference
12-23	Process Data Config Write Size	13-1*	RS Flip Flops	15-74	Option in Slot C0/E0	16-51	Pulse Reference
12-24	Process Data Config Read Size	13-15	RS-FF Operand S	14-72	Slot C0/E0 Option SW Version	16-52	Feedback[Unit]
12-27	Master Address	13-16	RS-FF Operand R	14-73	Option in Slot C1/E1	16-53	Digi Pot Reference
12-28	Store Data Values	13-2*	Timers	14-74	Leg. Ext. Status Word	16-57	Feedback [RPM]
12-29	Store Always	13-20	SL Controller Timer	15-8*	Operating Data II	16-6*	Inputs & Outputs
12-3*	EtherNet/IP	13-4*	Logic Rules	15-80	Fan Running Hours	16-60	Digital Input
12-30	Warning Parameter	13-40	Logic Rule Boolean 1	14-80	Option Supplied by External 24VDC	16-61	Terminal 53 Switch Setting
12-31	Net Reference	13-41	Logic Rule Operator 1	14-88	Option Data Storage	16-62	Analog Input 53
12-32	Net Control	13-42	Logic Rule Boolean 2	14-89	Option Detection	16-63	Terminal 54 Switch Setting
12-33	CIP Revision	13-43	Logic Rule Operator 2	14-9*	Fault Settings	16-63	Terminal 54 Switch Setting
12-34	CIP Product Code	13-44	Logic Rule Boolean 3	14-90	Fault Level	16-64	Analog Input 54
12-35	EDS Parameter	13-5*	States	15-0*	Operating Data	16-65	Analog Output 42 [mA]
12-37	COS Inhibit Timer	13-51	SL Controller Event	15-00	Operating hours	16-66	Digital Output [bin]
12-38	COS Filter	13-52	SL Controller Action	15-01	Running hours	16-67	Freq. Input #29 [Hz]
12-4*	Modbus TCP	14-0*	Special Functions	15-02	kWh Counter	16-69	Pulse Output #27 [Hz]
12-40	Status Parameter	14-0*	Inverter Switching	15-03	Power Up's	16-70	Pulse Output #29 [Hz]
12-41	Slave Message Count	14-00	Switching Pattern	15-04	Over Temp's	16-71	Relay Output [bin]
12-42	Slave Exception Message Count	14-01	Switching Frequency	15-05	Over Volt's	16-72	Counter A
12-5*	EtherCAT	14-03	Overmodulation	15-06	Reset kWh Counter	16-73	Counter B
12-50	Configured Station Alias	14-04	Acoustic Noise Reduction	15-07	Reset Running Hours Counter	16-74	Prec. Stop Counter
12-51	Configured Station Address	14-06	Dead Time Compensation	15-1*	Data Log Settings	16-75	Analog In X30/11
12-59	EtherCAT Status	14-1*	Mains Failure	15-10	Logging Source	16-76	Analog In X30/12
12-6*	Ethernet PowerLink	14-10	Mains Failure	15-11	Logging Interval	16-77	Analog Out X30/8 [mA]
12-60	Node ID	14-11	Mains Fault Voltage Level	15-12	Trigger Event	16-78	Analog Out X45/1 [mA]
12-62	SDO Timeout	14-12	Response to Mains Imbalance	15-13	Logging Mode	16-79	Analog Out X45/3 [mA]
12-63	Basic Ethernet Timeout	14-14	Kin. Back-up Time-out	15-14	Samples Before Trigger	16-8*	Fieldbus & FC Port
12-66	Threshold	14-15	Kin. Back-up Trip Recovery Level	15-2*	Historic Log	16-80	Fieldbus CTW 1
12-67	Threshold Counters	14-16	Kin. Back-up Gain	15-20	Historic Log: Event	16-82	Fieldbus REF 1
12-68	Cumulative Counters	14-2*	Trip Reset	15-21	Historic Log: Value	16-84	Comm. Option STW
12-69	Ethernet PowerLink Status	14-20	Reset Mode	15-22	Historic Log: Time	16-85	FC Port CTW 1
12-8*	Other Ethernet Services	14-21	Automatic Restart Time	15-3*	Fault Log	16-86	FC Port REF 1
12-80	FTP Server	14-22	Operation Mode	15-30	Fault Log: Error Code	16-87	Bus Readout Alarm/Warning
12-81	HTTP Server	14-23	Typecode Setting	15-31	Fault Log: Value	16-89	Configurable Alarm/Warning Word
12-82	SMTP Service	14-24	Trip Delay at Current Limit	15-32	Fault Log: Time	16-9*	Diagnosis Readouts
12-83	SNMP Agent	14-25	Trip Delay at Torque Limit	15-4*	Drive Identification	16-90	Alarm Word
12-84	Address Conflict Detection	14-26	Trip Delay at Inverter Fault	15-40	FC Type	16-91	Alarm Word 2
12-85	ACD Last Conflict	14-28	Production Settings	15-41	Power Section	16-92	Warning Word
12-89	Transparent Socket Channel Port	14-29	Service Code	15-42	Voltage	16-93	Warning Word 2
12-9*	Advanced Ethernet Services	14-3*	Current Limit Ctrl.	15-43	Software Version	16-94	Ext. Status Word
12-90	Cable Diagnostic	14-30	Current Lim Ctrl, Proportional Gain	15-44	Ordered Typecode String	17-1*	Inc. Enc. Interface
12-91	Auto Cross Over	14-31	Current Lim Ctrl, Integration Time	15-45	Actual Typecode String	17-10	Signal Type
12-92	IGMP Snooping	14-32	Current Lim Ctrl, Filter Time	15-46	Frequency Converter Ordering No	17-11	Resolution (PPR)
12-93	Cable Error Length	14-35	Stall Protection	15-47	Power Card Ordering No	17-2*	Abs. Enc. Interface
12-94	Broadcast Storm Protection	14-36	Field-weakening Function	15-48	LCP ID No	17-20	Protocol Selection
12-95	Inactivity timeout	14-37	Fieldweakening Speed	15-49	SW ID Control Card	17-21	Resolution (Positions/Rev)
12-96	Port Config	14-4*	Energy Optimising	15-50	SW ID Power Card	17-22	Multiturn Revolutions
12-97	QoS Priority	14-40	VT Level	15-51	Frequency Converter Serial Number	17-24	SSI Data Length
12-98	Interface Counters	14-41	AEO Minimum Magnetisation	15-53	Power Card Serial Number	17-25	Clock Rate
12-99	Media Counters	14-42	Minimum AEO Frequency	15-54	Config File Name	17-26	SSI Data Format
13-3**	Smart Logic	14-43	Motor Cosphi	15-59	Filename	16-39	Control Card Temp.

17-34	HIPERFACE Baudrate	30-12	Wobble Random Ratio Min.	32-5*	Feedback Source	33-27	Offset Filter Time	34-04	PCD 4 Write to MCO
17-5*	Resolver Interface	30-19	Wobble Delta Freq. Scaled	32-50	Source Slave	33-28	Marker Filter Configuration	34-05	PCD 5 Write to MCO
17-50	Poles	30-2*	Adv. Start Adjust	32-51	MCO 302 Last Will	33-29	Filter Time for Marker Filter	34-06	PCD 6 Write to MCO
17-51	Input Voltage	30-20	High Starting Torque Time [s]	32-52	Source Master	33-30	Maximum Marker Correction	34-07	PCD 7 Write to MCO
17-52	Input Frequency	30-21	High Starting Torque Current [%]	32-6*	PID Controller	33-31	Synchronisation Type	34-08	PCD 8 Write to MCO
17-53	Transformation Ratio	30-22	Locked Rotor Protection	32-60	Proportional factor	33-32	Feed Forward Velocity Adaptation	34-09	PCD 9 Write to MCO
17-56	Encoder Sim. Resolution	30-23	Locked Rotor Detection Time [s]	32-61	Derivative factor	33-33	Velocity Filter Window	34-10	PCD 10 Write to MCO
17-59	Resolver Interface	30-24	Locked Rotor Detection Speed Error [%]	32-62	Integral factor	33-34	Slave Marker filter time	34-2*	PCD Read Par.
17-6*	Monitoring and App.			32-63	Limit Value for Integral Sum	33-4*	Limit Handling	34-21	PCD 1 Read from MCO
17-60	Feedback Direction	30-25	Light Load Delay [s]	32-64	PID Bandwidth	33-40	Behaviour atEnd Limit Switch	34-22	PCD 2 Read from MCO
17-61	Feedback Signal Monitoring	30-26	Light Load Current [%]	32-65	Velocity Feed-Forward	33-41	Negative Software End Limit	34-23	PCD 3 Read from MCO
17-7*	Position Scaling	30-27	Light Load Speed [%]	32-66	Acceleration Feed-Forward	33-42	Positive Software End Limit	34-24	PCD 4 Read from MCO
17-70	Position Unit	30-5*	Unit Configuration	32-67	Max. Tolerated Position Error	33-43	Negative Software End Limit Active	34-25	PCD 5 Read from MCO
17-71	Position Unit Scale	30-50	Heat Sink Fan Mode	32-68	Reverse Behavior for Slave	33-44	Positive Software End Limit Active	34-26	PCD 6 Read from MCO
17-72	Position Unit Numerator	30-8*	Compatibility (I)	32-69	Sampling Time for PID Control	33-45	Time in Target Window	34-27	PCD 7 Read from MCO
17-73	Position Unit Denominator	30-80	d-axis Inductance (Ld)	32-70	Scan Time for Profile Generator	33-46	Target Window LimitValue	34-28	PCD 8 Read from MCO
17-74	Position Offset	30-81	Brake Resistor (ohm)	32-71	Size of the Control Window (Activation)	33-47	Size of Target Window	34-29	PCD 9 Read from MCO
18-*	Data Readouts 2	30-83	Speed PID Proportional Gain	32-72	Size of the Control Window (Deactiv.)	33-5*	I/O Configuration	34-30	PCD 10 Read from MCO
18-3*	Analog Readouts	30-84	Process PID Proportional Gain	32-73	Integral limit filter time	33-50	Terminal X57/1 Digital Input	34-4*	Inputs & Outputs
18-36	Analog Input X48/2 [mA]	31-*	Bypass Option	32-74	Position error filter time	33-51	Terminal X57/2 Digital Input	34-40	Digital Inputs
18-37	Temp. Input X48/4	31-00	Bypass Mode	32-7*	Velocity & Accel.	33-52	Terminal X57/3 Digital Input	34-41	Digital Outputs
18-38	Temp. Input X48/7	31-01	Bypass Start Time Delay	32-8*	Maximum Velocity (Encoder)	33-53	Terminal X57/4 Digital Input	34-5*	Process Data
18-39	Temp. Input X48/10	31-02	Bypass Trip Time Delay	32-81	Shortest Ramp	33-54	Terminal X57/5 Digital Input	34-50	Actual Position
18-4*	PGIO Data Readouts	31-03	Test Mode Activation	32-82	Temp Ramp	33-55	Terminal X57/6 Digital Input	34-51	Commanded Position
18-43	Analog Out X49/7	31-10	Bypass Status Word	32-83	Velocity Resolution	33-56	Terminal X57/7 Digital Input	34-52	Actual Master Position
18-44	Analog Out X49/9	31-11	Bypass Running Hours	32-84	Default Velocity	33-57	Terminal X57/8 Digital Input	34-53	Slave Index Position
18-45	Analog Out X49/11	31-19	Remote Bypass Activation	32-85	Default Acceleration	33-58	Terminal X57/9 Digital Input	34-54	Master Index Position
18-5*	Active Alarms/Warnings	32-0*	MCO Basic Settings	32-86	Acc. up for limited jerk	33-59	Terminal X57/10 Digital Input	34-55	Curve Position
18-55	Active Alarm Numbers	32-0*	Encoder 2	32-86	Acc. up for limited jerk	33-60	Terminal X59/1 and X59/2 Mode	34-56	Track Error
18-56	Active Warning Numbers	32-00	Incremental Signal Type	32-87	Acc. down for limited jerk	33-61	Terminal X59/1 Digital Input	34-57	Synchronizing Error
18-6*	Inputs & Outputs 2	32-01	Incremental Resolution	32-88	Dec. up for limited jerk	33-62	Terminal X59/2 Digital Input	34-58	Actual Velocity
18-60	Digital Input 2	32-02	Absolute Protocol	32-89	Dec. down for limited jerk	33-63	Terminal X59/1 Digital Output	34-59	Actual Master Velocity
18-7*	Rectifier Status	32-03	Absolute Resolution	32-9*	Development	33-64	Terminal X59/2 Digital Output	34-60	Synchronizing Status
18-70	Mains Voltage	32-04	Absolute Encoder Baudrate X55	32-90	Debug Source	33-65	Terminal X59/3 Digital Output	34-61	Axis Status
18-71	Mains Frequency	32-05	Absolute Encoder Data Length	33-0*	MCO Adv. Settings	33-66	Terminal X59/4 Digital Output	34-62	Program Status
18-72	Mains Imbalance	32-06	Absolute Encoder Clock Frequency	33-0*	Home Motion	33-67	Terminal X59/5 Digital Output	34-64	MCO 302 Status
18-75	Rectifier DC Volt.	32-07	Absolute Encoder Clock Generation	33-01	Force HOME	33-68	Terminal X59/6 Digital Output	34-65	MCO 302 Control
18-9*	PID Readouts	32-08	Absolute Encoder Cable Length	33-02	Zero Point Offset from Home Pos.	33-69	Terminal X59/7 Digital Output	34-66	SPI Error Counter
18-90	Process PID Error	32-09	Encoder Monitoring	33-04	Behaviour during HomeMotion	33-70	Terminal X59/8 Digital Output	34-7*	Diagnosis readouts
18-91	Process PID Output	32-10	Rotational Direction	33-1*	Synchronization	33-80	Activated Program Number	34-70	MCO Alarm Word 1
18-92	Process PID Clamped Output	32-11	User Unit Denominator	33-10	Sync Factor Master	33-80	Power-up State	34-71	MCO Alarm Word 2
18-93	Process PID Gain Scaled Output	32-12	User Unit Numerator	33-11	Sync Factor Slave	33-81	Drive Status Monitoring	35-*	Sensor Input Option
22-0*	Miscellaneous	32-13	Enc.2 Control	33-12	Sync Factor Slave	33-82	Behaviour afterError	35-0*	Temp. Input Mode
22-00	External Interlock Delay	32-14	Enc.2 node ID	33-12	Position Offset for Synchronization	33-83	Behaviour afterEsc.	35-01	Term. X48/4 Temperature Unit
30-*	Special Features	32-15	Enc.2 CAN guard	33-13	Accuracy Window for Position Sync.	33-85	MCO Supplied by External 24VDC	35-02	Term. X48/7 Temperature Unit
30-0*	Wobbler	32-3*	Encoder 1	33-14	Relative Slave Velocity Limit	33-86	Terminal at alarm	35-03	Term. X48/7 Input Type
30-00	Wobble Mode	32-30	Incremental Signal Type	33-15	Marker Number for Master	33-87	Terminal state at alarm	35-04	Term. X48/10 Temperature Unit
30-01	Wobble Delta Frequency [Hz]	32-31	Incremental Resolution	33-16	Marker Number for Slave	33-88	Status word at alarm	35-05	Term. X48/10 Input Type
30-02	Wobble Delta Frequency [%]	32-32	Absolute Protocol	33-17	Master Marker Distance	33-9*	MCO Port Settings	35-06	Temperature Sensor Alarm Function
30-03	Wobble Delta Freq. Scaling Resource	32-33	Absolute Resolution	33-18	Slave Marker Distance	33-90	X62 MCO CAN node ID	35-1*	Temp. Input X48/4
30-04	Wobble Jump Frequency [Hz]	32-35	Absolute Encoder Data Length	33-19	Master Marker Type	33-91	X62 MCO CAN baud rate	35-14	Term. X48/4 Filter Time Constant
30-05	Wobble Jump Frequency [%]	32-36	Absolute Encoder Clock Frequency	33-20	Slave Marker Type	33-94	X60 MCO RS485 serial termination	35-15	Term. X48/4 Temp. Monitor
30-06	Wobble Jump Time	32-37	Absolute Encoder Clock Generation	33-21	Master Marker Tolerance Window	33-95	X60 MCO RS485 serial baud rate	35-16	Term. X48/4 Low Temp. Limit
30-07	Wobble Sequence Time	32-38	Absolute Encoder Cable Length	33-22	Slave Marker Tolerance Window	34-*	MCO Data Readouts	35-17	Term. X48/4 High Temp. Limit
30-08	Wobble Up/ Down Time	32-39	Encoder Monitoring	33-23	Start Behaviour for Marker Sync	34-0*	PCD Write Par.	35-2*	Temp. Input X48/7
30-09	Wobble Random Function	32-40	Encoder Termination	33-24	Marker Number for Fault	34-01	PCD 1 Write to MCO	35-24	Term. X48/7 Filter Time Constant
30-10	Wobble Ratio	32-43	Enc.1 Control	33-25	Marker Number for Ready	34-02	PCD 2 Write to MCO	35-25	Term. X48/7 Temp. Monitor
30-11	Wobble Random Ratio Max.	32-44	Enc.1 node ID	33-26	Velocity Filter	34-03	PCD 3 Write to MCO	35-26	Term. X48/7 Low Temp. Limit

35-27	Term. X48/7 High Temp. Limit	42-40	Type
<b>35-3*</b>	<b>Temp. Input X48/10</b>	42-41	Ramp Profile
35-34	Term. X48/10 Filter Time Constant	42-42	Delay Time
35-35	Term. X48/10 Temp. Monitor	42-43	Delta T
35-36	Term. X48/10 Low Temp. Limit	42-44	Deceleration Rate
35-37	Term. X48/10 High Temp. Limit	42-45	Delta V
<b>35-4*</b>	<b>Analog Input X48/2</b>	42-46	Zero Speed
35-42	Term. X48/2 Low Current	42-47	Ramp Time
35-43	Term. X48/2 High Current	42-48	S-ramp Ratio at Decel. Start
35-44	Term. X48/2 Low Ref./Feedb. Value	42-49	S-ramp Ratio at Decel. End
35-45	Term. X48/2 High Ref./Feedb. Value	<b>42-5*</b>	<b>SLS</b>
35-46	Term. X48/2 Filter Time Constant	42-50	Cut Off Speed
<b>36-0**</b>	<b>Programmable I/O Option</b>	42-51	Speed Limit
<b>36-0*</b>	<b>I/O Mode</b>	42-52	Fail Safe Reaction
36-03	Terminal X49/7 Mode	42-53	Start Ramp
36-04	Terminal X49/9 Mode	42-54	Ramp Down Time
36-05	Terminal X49/11 Mode	<b>42-6*</b>	<b>Safe Fieldbus</b>
<b>36-4*</b>	<b>Output X49/7</b>	42-60	Telegram Selection
36-40	Terminal X49/7 Analogue Output	42-61	Destination Address
36-42	Terminal X49/7 Min. Scale	<b>42-8*</b>	<b>Status</b>
36-43	Terminal X49/7 Max. Scale	42-80	Safe Option Status
36-44	Terminal X49/7 Bus Control	42-81	Safe Option Status 2
36-45	Terminal X49/7 Timeout Preset	42-82	Safe Control Word
<b>36-5*</b>	<b>Output X49/9</b>	42-83	Safe Status Word
36-50	Terminal X49/9 Analogue Output	42-85	Active Safe Func.
36-52	Terminal X49/9 Min. Scale	42-86	Safe Option Info
36-53	Terminal X49/9 Max. Scale	42-87	Time Until Manual Test
36-54	Terminal X49/9 Bus Control	42-88	Supported Customization File Version
36-55	Terminal X49/9 Timeout Preset	42-89	Customization File Version
<b>36-6*</b>	<b>Output X49/11</b>	<b>42-9*</b>	<b>Special</b>
36-60	Terminal X49/11 Analogue Output	42-90	Restart Safe Option
36-62	Terminal X49/11 Min. Scale	<b>43-3**</b>	<b>Unit Readouts</b>
36-63	Terminal X49/11 Max. Scale	<b>43-0*</b>	<b>Component Status</b>
36-64	Terminal X49/11 Bus Control	43-00	Component Temp.
36-65	Terminal X49/11 Timeout Preset	43-01	Auxiliary Temp.
<b>42-3**</b>	<b>Safety Functions</b>	<b>43-1*</b>	<b>Power Card Status</b>
<b>42-1*</b>	<b>Speed Monitoring</b>	43-10	HS Temp. ph.U
42-10	Measured Speed Source	43-11	HS Temp. ph.V
42-11	Encoder Resolution	43-12	HS Temp. ph.W
42-12	Encoder Direction	43-13	PC Fan A Speed
42-13	Gear Ratio	43-14	PC Fan B Speed
42-14	Feedback Type	43-15	PC Fan C Speed
42-15	Feedback Filter	<b>43-2*</b>	<b>Fan Pow.Card Status</b>
42-17	Tolerance Error	43-20	FPC Fan A Speed
42-18	Zero Speed Timer	43-21	FPC Fan B Speed
42-19	Zero Speed Limit	43-22	FPC Fan C Speed
<b>42-2*</b>	<b>Safe Input</b>	43-23	FPC Fan D Speed
42-20	Safe Function	43-24	FPC Fan E Speed
42-21	Type	43-25	FPC Fan F Speed
42-22	Discrepancy Time	<b>600-3**</b>	<b>PROFIsafe</b>
42-23	Stable Signal Time	600-22	PROFIdrive/safe Tel. Selected
42-24	Restart Behaviour	600-44	Fault Message Counter
<b>42-3*</b>	<b>General</b>	600-47	Fault Number
42-30	External Failure Reaction	600-52	Fault Situation Counter
42-31	Reset Source	<b>601-3**</b>	<b>PROFIdrive 2</b>
42-33	Parameter Set Name	601-22	PROFIdrive Safety Channel Tel. No.
42-35	S-CRC Value		
42-36	Level 1 Password		
<b>42-4*</b>	<b>SS1</b>		

**Index**

**A**

A53/A54 switches..... 9

Abbreviations..... 100

AC mains..... 26  
 see also *Mains*

ADN compliance..... 3

Airflow..... 13, 14, 98

Alarms  
 List of..... 10, 62  
 Log..... 10

AMA..... 67  
 see also *Automatic motor adaptation*

Ambient conditions  
 Overview..... 13  
 Specifications..... 77

Analog input/output  
 Descriptions and default settings..... 41  
 Terminal locations..... 9

Approvals and certifications..... 3

Auto on..... 11, 59

Automatic energy optimization..... 51

Automatic motor adaptation  
 Configuring..... 51  
 Warning..... 67

Auxillary contacts..... 43

**B**

Back-wall cooling..... 14, 98

Brake  
 Location of terminals..... 7  
 Status message..... 59  
 Terminal torque rating..... 99

Brake resistor  
 Terminal locations..... 9  
 Warning..... 65  
 Wiring..... 43  
 Wiring schematic..... 23

Burst transient..... 28

Bus termination switch..... 9, 42

**C**

Cables  
 Cable length and cross-section..... 78  
 Creating openings for..... 16, 17  
 Installation warning..... 20  
 Mains..... 26  
 Maximum number and size per phase..... 73  
 Motor..... 24  
 Routing..... 40, 45  
 Shielded..... 20  
 Specifications..... 78

Capacitor storage..... 12

Circuit breakers..... 45, 81

Condensation..... 13

Control card  
 Location..... 9  
 Overtemperature trip point..... 73  
 RS485..... 79  
 Specifications..... 81  
 Warning..... 68

Control input/output  
 Descriptions and default settings..... 40  
 Specifications..... 78

Control shelf..... 7, 8, 9

Control wiring..... 40, 42, 45

Conventions..... 100

Cooling  
 Check list..... 45  
 Dust warning..... 13  
 Requirements..... 14

Current  
 Input..... 43  
 Leakage..... 28  
 Limit..... 72

**D**

Definitions  
 Status messages..... 59  
 Warnings and alarms..... 61

Depth measurements..... 6

Design guide..... 3, 14, 77

Digital input/output  
 Descriptions and default settings..... 41  
 Terminal locations..... 9

Discharge time..... 4

Disconnect..... 7, 43, 46, 81

Disposal instruction..... 3

Door clearance  
 E1h..... 85  
 E2h..... 89  
 E3h..... 93  
 E4h..... 97

Door/panel cover  
 Torque rating..... 99

Drive  
 Clearance requirements..... 14  
 Definition..... 6  
 Dimensions..... 6  
 Initialization..... 53  
 Status..... 59

Duct cooling..... 14

**E**

Electrical specifications 380–500 V..... 73

Electrical specifications 525–690 V..... 75

Electronic thermal relay (ETR)..... 20

EMC..... 20, 21, 22

Encoder..... 51

Energy efficiency class..... 77

Environment..... 13, 77

Explosive atmosphere..... 13

Exterior dimensions

    E1h..... 82

    E2h..... 86

    E3h..... 90

    E4h..... 94

External alarm reset..... 56

**F**

Factory default settings..... 52

Fan power card

    Location..... 7, 8

    Warning..... 70

Fans

    Location..... 8

    Required airflow..... 14

    Servicing..... 13

    Warning..... 64, 69

Fault log..... 10

Fieldbus..... 40

Filter..... 13

FPC..... 7

    see also *Fan power card*

Fuses

    Location..... 7, 8

    Overcurrent protection..... 20

    Pre-start check list..... 45

    Specifications..... 81

    Troubleshooting..... 72

**G**

Gases..... 13

Gland plate

    Description..... 15

    Dimensions for E1h..... 85

    Dimensions for E2h..... 89

    Dimensions for E3h..... 93

    Dimensions for E4h..... 97

    Torque rating..... 99

Glossary..... 100

Ground

    Check list..... 45

    Connecting..... 28

    Floating delta..... 26

    Grounded delta..... 26

    Isolated main..... 26

    Terminal torque rating..... 99

    Terminals..... 7, 8

    Warning..... 67

**H**

Hand on..... 11, 59

Heat sink

    Access panel torque rating..... 99

    Cleaning..... 13, 58

    E1h access panel dimensions..... 84

    E2h access panel dimensions..... 88

    E3h access panel dimensions..... 92

    E4h access panel dimensions..... 96

    Overtemperature trip point..... 73

    Required airflow..... 14

    Warning..... 65, 67, 68, 70

Heater

    Location..... 7, 8

    Usage..... 13

    Wiring of..... 43

    Wiring schematic..... 23

Height measurements..... 6

High voltage..... 4, 46

Humidity..... 13

**I**

Indicator lights..... 62

Initial set-up..... 46

Input voltage..... 46

Installation

    Check list..... 45

    Electrical..... 20

    EMC-compliant..... 22, 28

    Initialization..... 53

    Loadshare/regeneration terminals..... 19

    Mechanical..... 15

    Qualified personnel..... 4

    Quick setup..... 50

    Requirements..... 14

    Start up..... 52

    Tools needed..... 12

Interference

    EMC..... 21

    Radio..... 6

Interior views..... 7

Interlock device..... 42

Internal fault..... 67

**K**

Knockout panel..... 83

**L**

Label..... 12

LCP		
Display.....	10	
Indicator lights.....	11	
Location.....	7, 8	
Menu.....	47	
Troubleshooting.....	71	
Leakage current.....	4, 28	
Lifting.....	12, 14	
Load share		
Location of terminals.....	8	
Terminal torque rating.....	99	
Terminals.....	8	
Warning.....	4	
Wiring schematic.....	23	
<b>M</b>		
Main menu.....	47	
Mains		
Cables.....	26	
Connecting.....	26	
Specifications.....	77	
Terminal torque rating.....	99	
Terminals.....	7, 8	
Warning.....	66	
Mains shield.....	5	
Mains supply (L1, L2, L3).....	77	
Maintenance.....	13, 58	
Manual		
Version number.....	3	
MCT 10.....	50	
Measurements.....	6	
Menu		
Descriptions of.....	47	
Keys.....	10	
Motor		
Cables.....	20, 24	
Class protection.....	13	
Connecting.....	24	
Data.....	72	
Output specifications.....	77	
Overheating.....	63	
Rotation.....	51	
Setup.....	47	
Terminal torque rating.....	99	
Terminals.....	7	
Thermistor.....	57	
Troubleshooting.....	71, 72	
Warning.....	63, 65	
Wiring schematic.....	23	
Mounting configurations.....	14	
<b>N</b>		
Nameplate.....	12	
Navigation keys.....	10, 48	
<b>O</b>		
Open loop		
Programming example.....	48	
Speed accuracy.....	80	
Wiring for speed control.....	54	
Optional equipment.....	42, 46	
Overcurrent protection.....	20	
Overvoltage.....	72	
<b>P</b>		
Parameters.....	47, 52, 101	
Pedestal.....	15	
Periodic forming.....	12	
Phase loss.....	62	
Pigtails.....	20	
Potential equalization.....	28	
Potentiometer.....	41	
Power card		
Location.....	9	
Warning.....	68	
Power connection.....	20	
Power rating.....	6, 12, 73	
Programming.....	10, 48	
Programming guide.....	3	
<b>Q</b>		
Qualified personnel.....	4	
Quick menu.....	10, 47	
<b>R</b>		
Ramp-down time.....	72	
Ramp-up time.....	72	
Recycling.....	3	
Regeneration		
Location of terminals.....	7	
Terminal torque rating.....	99	
Terminals.....	8	
Wiring configuration.....	57	
Regional settings.....	52, 101	
Relays		
Location.....	9, 41	
Output specifications.....	80	
Reset.....	11, 61, 68	
RFI.....	7, 8, 26, 93, 97	
RS485.....	23, 41, 42	

S

Safe Torque Off  
 Operating guide..... 3  
 Terminal location..... 41  
 Warning..... 68  
 Wiring of..... 43  
 Wiring schematic..... 23

Safety instructions..... 4, 20, 46

Serial communication  
 Cover torque rating..... 99  
 Descriptions and default settings..... 41  
 Location..... 9

Service..... 58

Set-up..... 10

Shielding  
 Cables..... 40  
 Mains..... 5  
 RFI..... 7, 8  
 RFI termination..... 93, 97  
 Twisted ends..... 20

Short circuit..... 64

Short circuit current rating (SCCR)..... 81

Sleep mode..... 61

Software version number..... 3

Space heater..... 7  
 see also *Heater*

Start/stop..... 55

Status message definitions..... 59

STO..... 3  
 see also *Safe torque off*

Storage..... 12

Supply voltage..... 46, 79

Switches  
 A53/A54..... 43  
 Brake resistor temperature..... 43  
 Bus termination..... 42  
 Disconnect..... 46, 81

T

Temperature..... 13

Terminals  
 Analog input/output..... 41  
 Control locations..... 9, 40  
 Digital input/output..... 41  
 E1h dimensions (front and side views)..... 30  
 E2h dimensions (front and side views)..... 32  
 E3h dimensions (front and side views)..... 34  
 E4h dimensions (front and side views)..... 37  
 Relays..... 41  
 Serial communication..... 41  
 Terminal 37..... 41, 42

Thermal protection..... 3

Thermistor

Cable routing..... 40  
 Terminal location..... 41  
 Warning..... 69  
 Wiring configurations..... 57

Tools..... 12

Torque  
 Characteristic..... 77  
 Fastener rating..... 99  
 Limit..... 63, 72

Transducer..... 41

Troubleshooting  
 Fuses..... 72  
 LCP..... 71  
 Mains..... 72  
 Motor..... 71, 72  
 Warnings and alarms..... 62

U

UL certification..... 3

Unintended start..... 4

USB  
 Port location..... 9  
 Specifications..... 81

V

Voltage  
 Imbalance..... 62  
 Input..... 43

W

Warnings  
 List of..... 10, 62

Weight..... 6

Width measurements..... 6

Wiring configurations  
 External alarm reset..... 56  
 Open loop..... 54  
 Regeneration..... 57  
 Start/stop..... 55  
 Thermistor..... 57

Wiring control terminals..... 42







.....  
Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.  
.....

Danfoss A/S  
Ulsnaes 1  
DK-6300 Graasten  
vlt-drives.danfoss.com

