



**CURRENT TRANSFORMER**  
**AC/DC LOOP POWERED**


**QI-300-I**



PATENT PENDING

<b>POWER SUPPLY</b>	Passive loop powered, 11...30Vdc, Protections against polarity reversal and overtemperature.
<b>ABSORPTION</b>	Less then 3,5mA
<b>PROTECTION INDEX</b>	IP20
<b>ACCURACY</b>	<b>0,5% F.S.</b>
<b>RESOLUTION</b>	12 bit
<b>TEMPERATURE COEFFICIENT</b>	< 200 ppm/°C
<b>WORKING TEMPERATURE</b>	-15...+65°C
<b>STORAGE TEMPERATURE</b>	-40°C... +85°C
<b>RESPONSE TIME</b>	1000 ms
<b>TYPE OF MEASURE</b>	<b>RMS (monopolar) or DC</b>
<b>RANGE</b>	<b>300 Arms or 150 Arms</b> dip-switch setting, bipolar (+/- 300A DC o +/-150A DC)
<b>OUTPUT</b>	<b>4...20 mA</b>
<b>BAND WIDTH AT -3dB</b>	DC or 20...2000 Hz
<b>ISOLATION</b>	3 kV on bare wire
<b>OVERLOAD</b>	2000 A pulse, 500A continuos
<b>CREST FACTOR</b>	1,4
<b>HYSTERESIS</b>	0,2% f.s.
<b>HUMIDITY</b>	10...90% not condensing
<b>ALTITUDE</b>	Up to 2000 m s.l.m.
<b>WEIGHT</b>	370 g.
<b>FILLING</b>	Epoxy Resins
<b>BOX MATERIAL</b>	PBT, gray
<b>MOUNTING</b>	Screw predisposition for vertical/horizontal mounting, DIN Rail clips (included) for vertical/horizontal mounting
<b>TERMINAL</b>	Removable terminals 5,08mm
<b>DIP-SWITCH</b>	2 poles
<b>LED</b>	N°1 yellow ( Power on )
<b>STANDARDS CE</b>	EN55022: 2010-12; EN55024: 2010-11;
<b>DIMENSIONS</b>	46,1x 63x 26,4 mm (terminal excluded)



The **QI-300-I** is a AC/DC current transformer, galvanically isolated from the measuring circuit. The device is in the function and appearance very similar to a standard active TA, however, able to measure the DC component and AC RMS. The transformer is powered **4-20mA current loop** and therefore does not require a direct power supply. It's the first Hall's effect current transformer loop-powered with **0.5% accuracy** on the market.

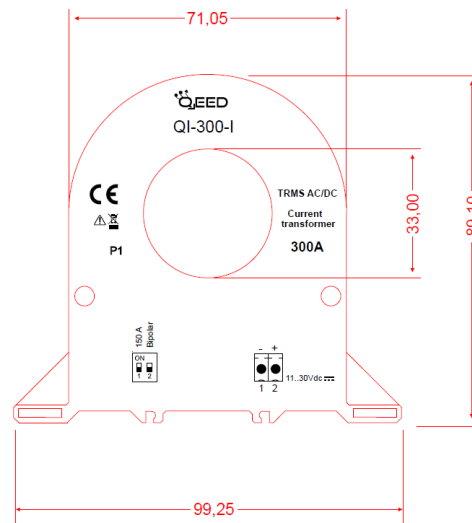

**QI-300-I**

**CURRENT TRANSFORMER**  
**AC/DC RMS LOOP POWERED**



**ISOLATION AND CONNECTIONS**

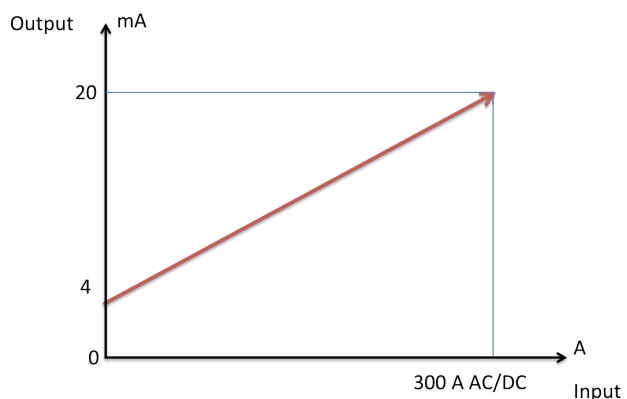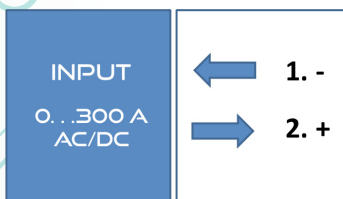



**CURRENT TRANSFORMER**  
*AC/DC TRMS LOOP POWERED*

**QI-300-I**

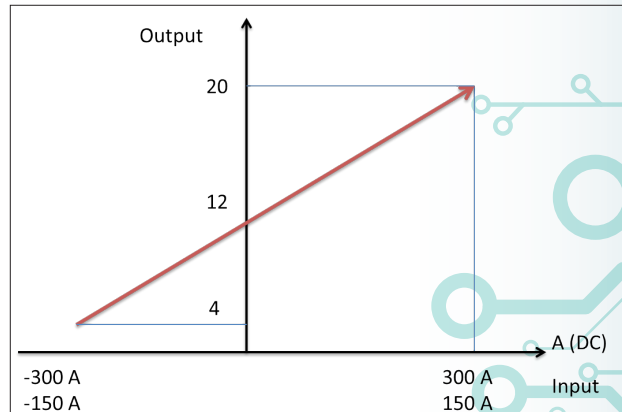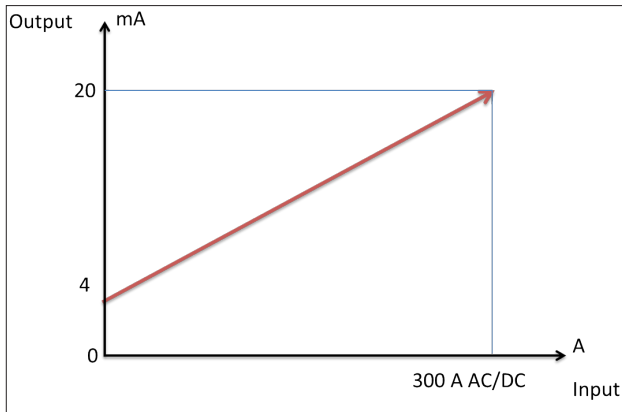

QI-300-I

CURRENT TRANSFORMER  
AC/DC RMS LOOP POWERED

The QI-300-I has two dip-switches through which you can set the scale to 150 or 300A and select the monopolar or bipolar (see charts), the yellow led near the terminal will indicate the presence of the power supply. If you are using bipolar function on AC current, the value read will be 0 A (12 mA) because you are reading the average value.

**Any changes made by dip-switch required to switch off the power supply. It's a safety condition in order to prevent any manumission on the device.**

**MOUNTING:**

The current transformer QI can be mounted in any position (see photo below), horizontal or vertical mounting, horizontal or vertical through the two hooks for DIN rail included in the box.

**DIN rail mounting instructions:**

To mount the hooks on QI. If you want to mount horizontally, use the flexibility of hook to catch into prepared by pressing the center of the clip. For vertical mounting, slide the hooks into the slots, external holding the two tabs on the clip .

For mounting on DIN rail horizontally, once hooked on the bottom, push with both hands.



For vertical mounting on DIN rail, once hooked on the bottom, push with both hands on the hooks. To release from DIN rail, use a screwdriver and lever up to release the fins.

**Dip-Switch Table :**

DESCRIPTION	1	2
MONOPOLAR (RMS) or DC		0
BIPOLAR (MEAN VALUE)		1
300 A	0	
150 A	1	

Measurement Cut off : 250mA (precision class 0,5% \* full scale 50 A = 0,25 A )

**CAUTION:** Magnetic fields of high intensity can vary the values measured by the transformer. Avoid installation near permanent magnets, electromagnets or iron masses that induce strong changes in the magnetic field. If any irregularity recommend reorient or move the transformer in the area most appropriate.

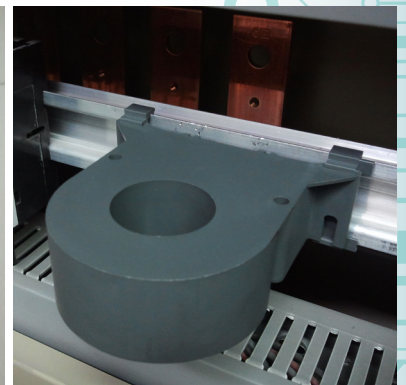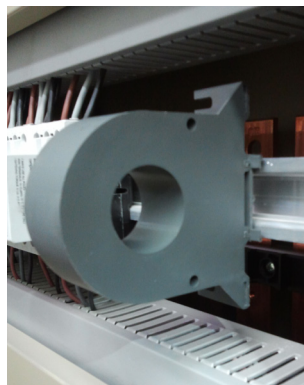

Disposal of electrical & electronic equipment (applicable throughout the EU and other countries with separate collection programs). This symbol, found on your product or on its packaging, indicates that this product should not be treated as household waste when you wish to dispose of it. Instead, it should be handed over to an applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences to the environment and human health, which could otherwise be caused by inappropriate disposal of it. The recycling of materials will help to conserve natural resources. For more detailed information about the recycling of this product, please contact your local city office, waste disposal service or the retail store where you purchased this product.

This document is the property of DEM spa. Duplication or reproduction is prohibited. The contents of this document correspond to the products and technologies described. This information may be amended or supplemented by technical and commercial requirements